


Running-0068

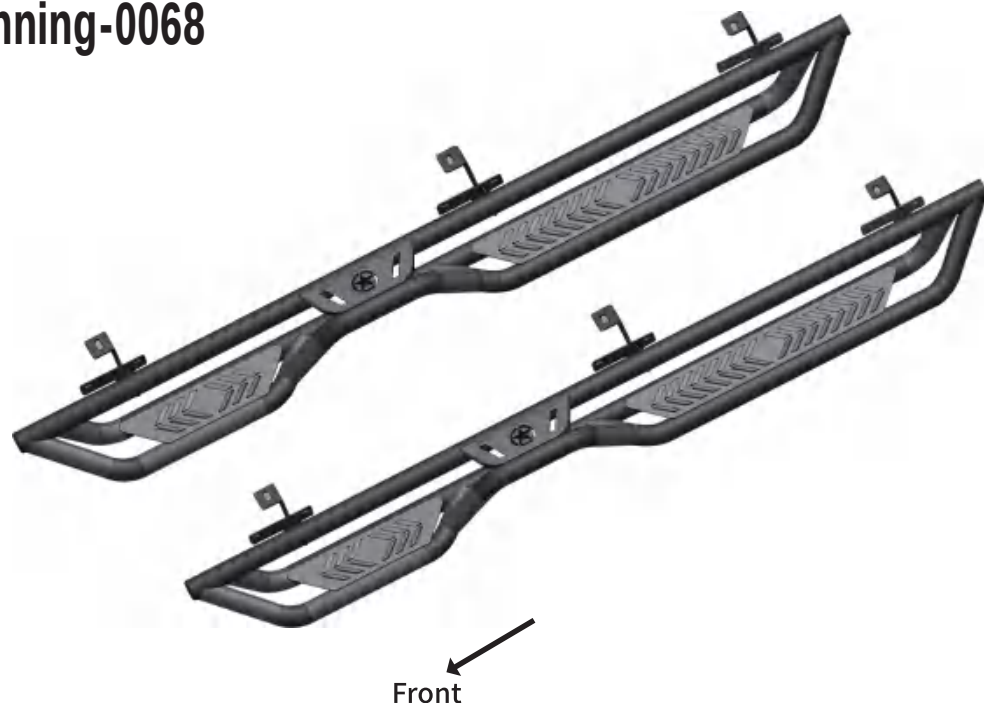

PRE-INSTALLATION INSTRUCTIONS

Read this instruction carefully before starting installation.

Proper tools will improve the quality of installation and reduce the required.

If missing parts or any damage found, please take a picture and contact your dealer. **Professional installation would be highly recommended.**

Periodic check to ensure all mounting hardware remains secure a

CARE AND USE INSTRUCTIONS

01

STEP1

pre-installation

1. Remove factory rock rails if equipped. Three mounting positions each side.
 2. Remove (6) M6 hex nuts on rocker panel and (3) M8 hex bolts on body frame.
- Note: The step bar and factory rock rail cannot coexist.



02

STEP2

Connection of mounting accessories

1. With assistance, lift and attach the step bar to the rocker panel.
2. Align the holes on step bar with mounting holes on rocker panel.
3. Secure with (12) M6*25 round head hexagonal screws, (12) M6 flat washers, (12) M6 spring washers and (12) M6 flange nuts.



03 STEP3

Connection of mounting accessories

1. Secure the step bar onto body frame panel using (6) M8 hex bolts, (6) M8 flat washers, (6) M8 spring washers.

Now adjust the pedal body to be level and tighten all the screws.



04 STEP4

Mounting with car

- 1. Tighten M8 hex bolts with 15 ft. lbs. torque.
- 2. Tighten M6 hex nuts with 7 ft. lbs. torque.
- 3. After the step bar installed, periodic check to ensure all mounting hardware remains secure and tight.

Loading components

1			2			3		
M8X30 Hexagon Bolt		6	M8X30 Flat Washer		6	M8 spring washers		6
4			5			6		
M6X25 rounded head Allen bolt		12	M6 Flat Washer		12	M6 spring washers		12
7								
M6 Hexagon Nut		12						

00 STEP5 Tools Required

10mm, 13mm Socket

5mm Hex Bit

Ratchet

Torque Wrench