


Running-0076

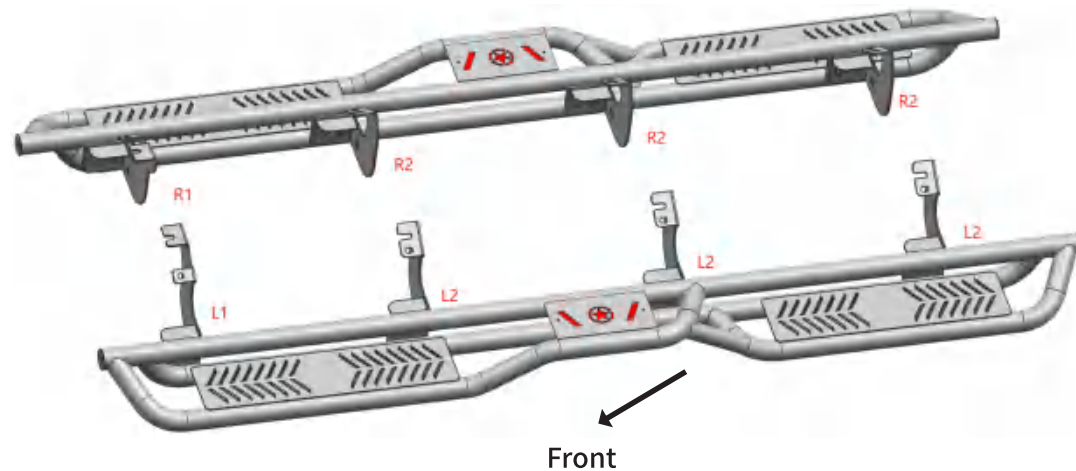

00 PRE-INSTALLATION INSTRUCTIONS

Read this instruction carefully before starting installation.
Proper tools will improve the quality of installation and reduce the time required.
If missing parts or any damage found, please take a picture and contact us.
Professional installation would be highly recommended.
Periodic check to ensure all mounting hardware remains secure and tight.

01 STEP1 Preparing the pedal for installation

1. Locate (4) mounting positions each side.
2. Remove factory bolts mounting positions.
3. Clean the sealant and dirt around mounting positions.

CARE AND USE INSTRUCTIONS



Front



Passenger Right Side

02 STEP2

Pedal and car mounting

1. Attach bracket to the rocker panel and secure with (2) M8 hex bolts, (2) M8 flat washers.
2. Repeat to install all brackets. Do not fully tighten.



Front Passenger Side Bracket



Center/Rear Passenger Side Bracket



Front




Passenger Right Side

03 STEP3

coupling with pedal

- 1. With assistance, lift and attach the step bar to brackets. Secure the step bar on brackets with (8) M10 hex bolts, (16) M10 flat washers, (8) M10 lock washers, (8) M10 hex nuts.
- 2. Repeat to install the other side .Do not fully tighten.

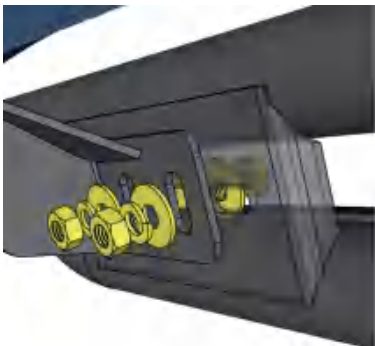

Front













Passenger Right Side

04 STEP4

Integral & Vehicle Mounting

- 1. Tighten M8 hex bolts on vehicle with 15 ft. lbs. torque.
- 2. Adjust the step bar to level and tighten M10 hex bolts and nuts with 31 ft. lbs. torque.
- 3. After the step bar installed, periodic check to ensure all mounting hardware remains secure and tight.

Loading components

| | | | | | | | |
|---|--|--|-------------------------------|--|----|---|--|
| 1 L1 | | 2 R1 | | 3 L2 | | 4 R2 | |
|  | |  | |  | |  | |
| Driver Sider Front Bracket | | 1 | Passenger Sider Front Bracket | | 1 | Driver Sider Center /Rear Bracket | |
| 3 | | 3 | | Passenger Sider Center /Rear Bracket | | 3 | |
| 5 | | 6 | | 7 | | 8 | |
|  | |  | |  | |  | |
| M8X25 Hexagon Flange Bolt | | 16 | M10X30 Hexagon Bolt | | 16 | M8X24 Flat Washer | |
| 16 | | 16 | | M10X25 Flat Washer | | 32 | |
| 9 | |  | |  | | | |
| M10 Lock Washer | | 16 | M10 Hexagon Nut | | 16 | | |

00 STEP5
Tools Required

| |
|-------------------------|
| 12mm、13mm、16mm Socket . |
| 16mm Wrench |
| Ratchet |
| Torque Wrench |