

# PRODUCT INSTALLATION TIPS

- IF YOU FIND ANY MISSING PARTS OR DAMAGE, PLEASE TAKE A PHOTO AND CONTACT US.
- IT IS STRONGLY RECOMMENDED TO HAVE PROFESSIONAL INSTALLATION DONE AT A REPAIR SHOP.
- IF MANUAL INSTALLATION IS REQUIRED, IT IS RECOMMENDED THAT TWO PEOPLE COOPERATE. SUITABLE TOOLS CAN EFFECTIVELY INSTALL THE PRODUCT TO ENSURE QUALITY.

STEP-0007  
2024-2025 TOYOTA TACOMA  
DOUBLE/CREW CAB


# PRODUCT INSTALLATION TIPS

- 8-22 mm Socket Ratchet
- Impact Gun
- Plastic remover tool or similar

## PARTS LIST



PEDAL BODY X2

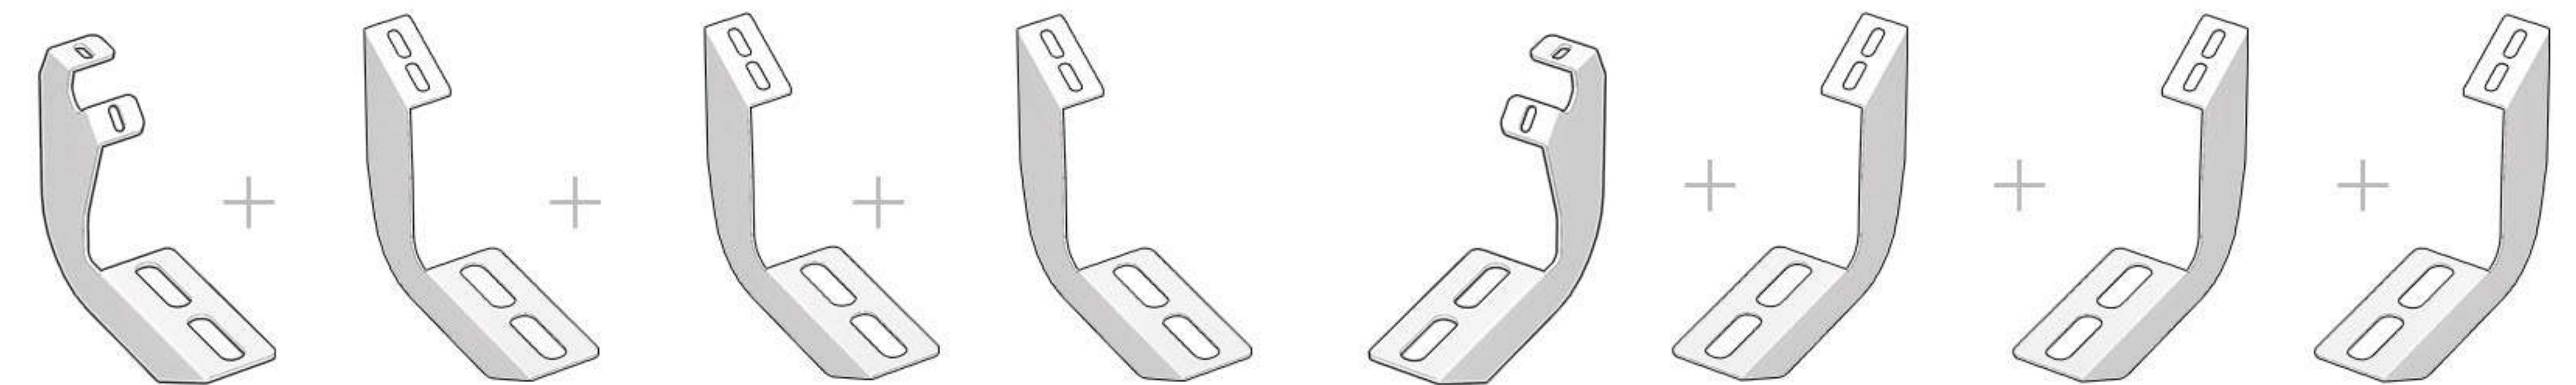

LEFT PEDAL BRACKET X4

RIGHT PEDAL BRACKET X4




M8



M8

FLAT WASHER X16

BUTTON HEAD BOLT X16

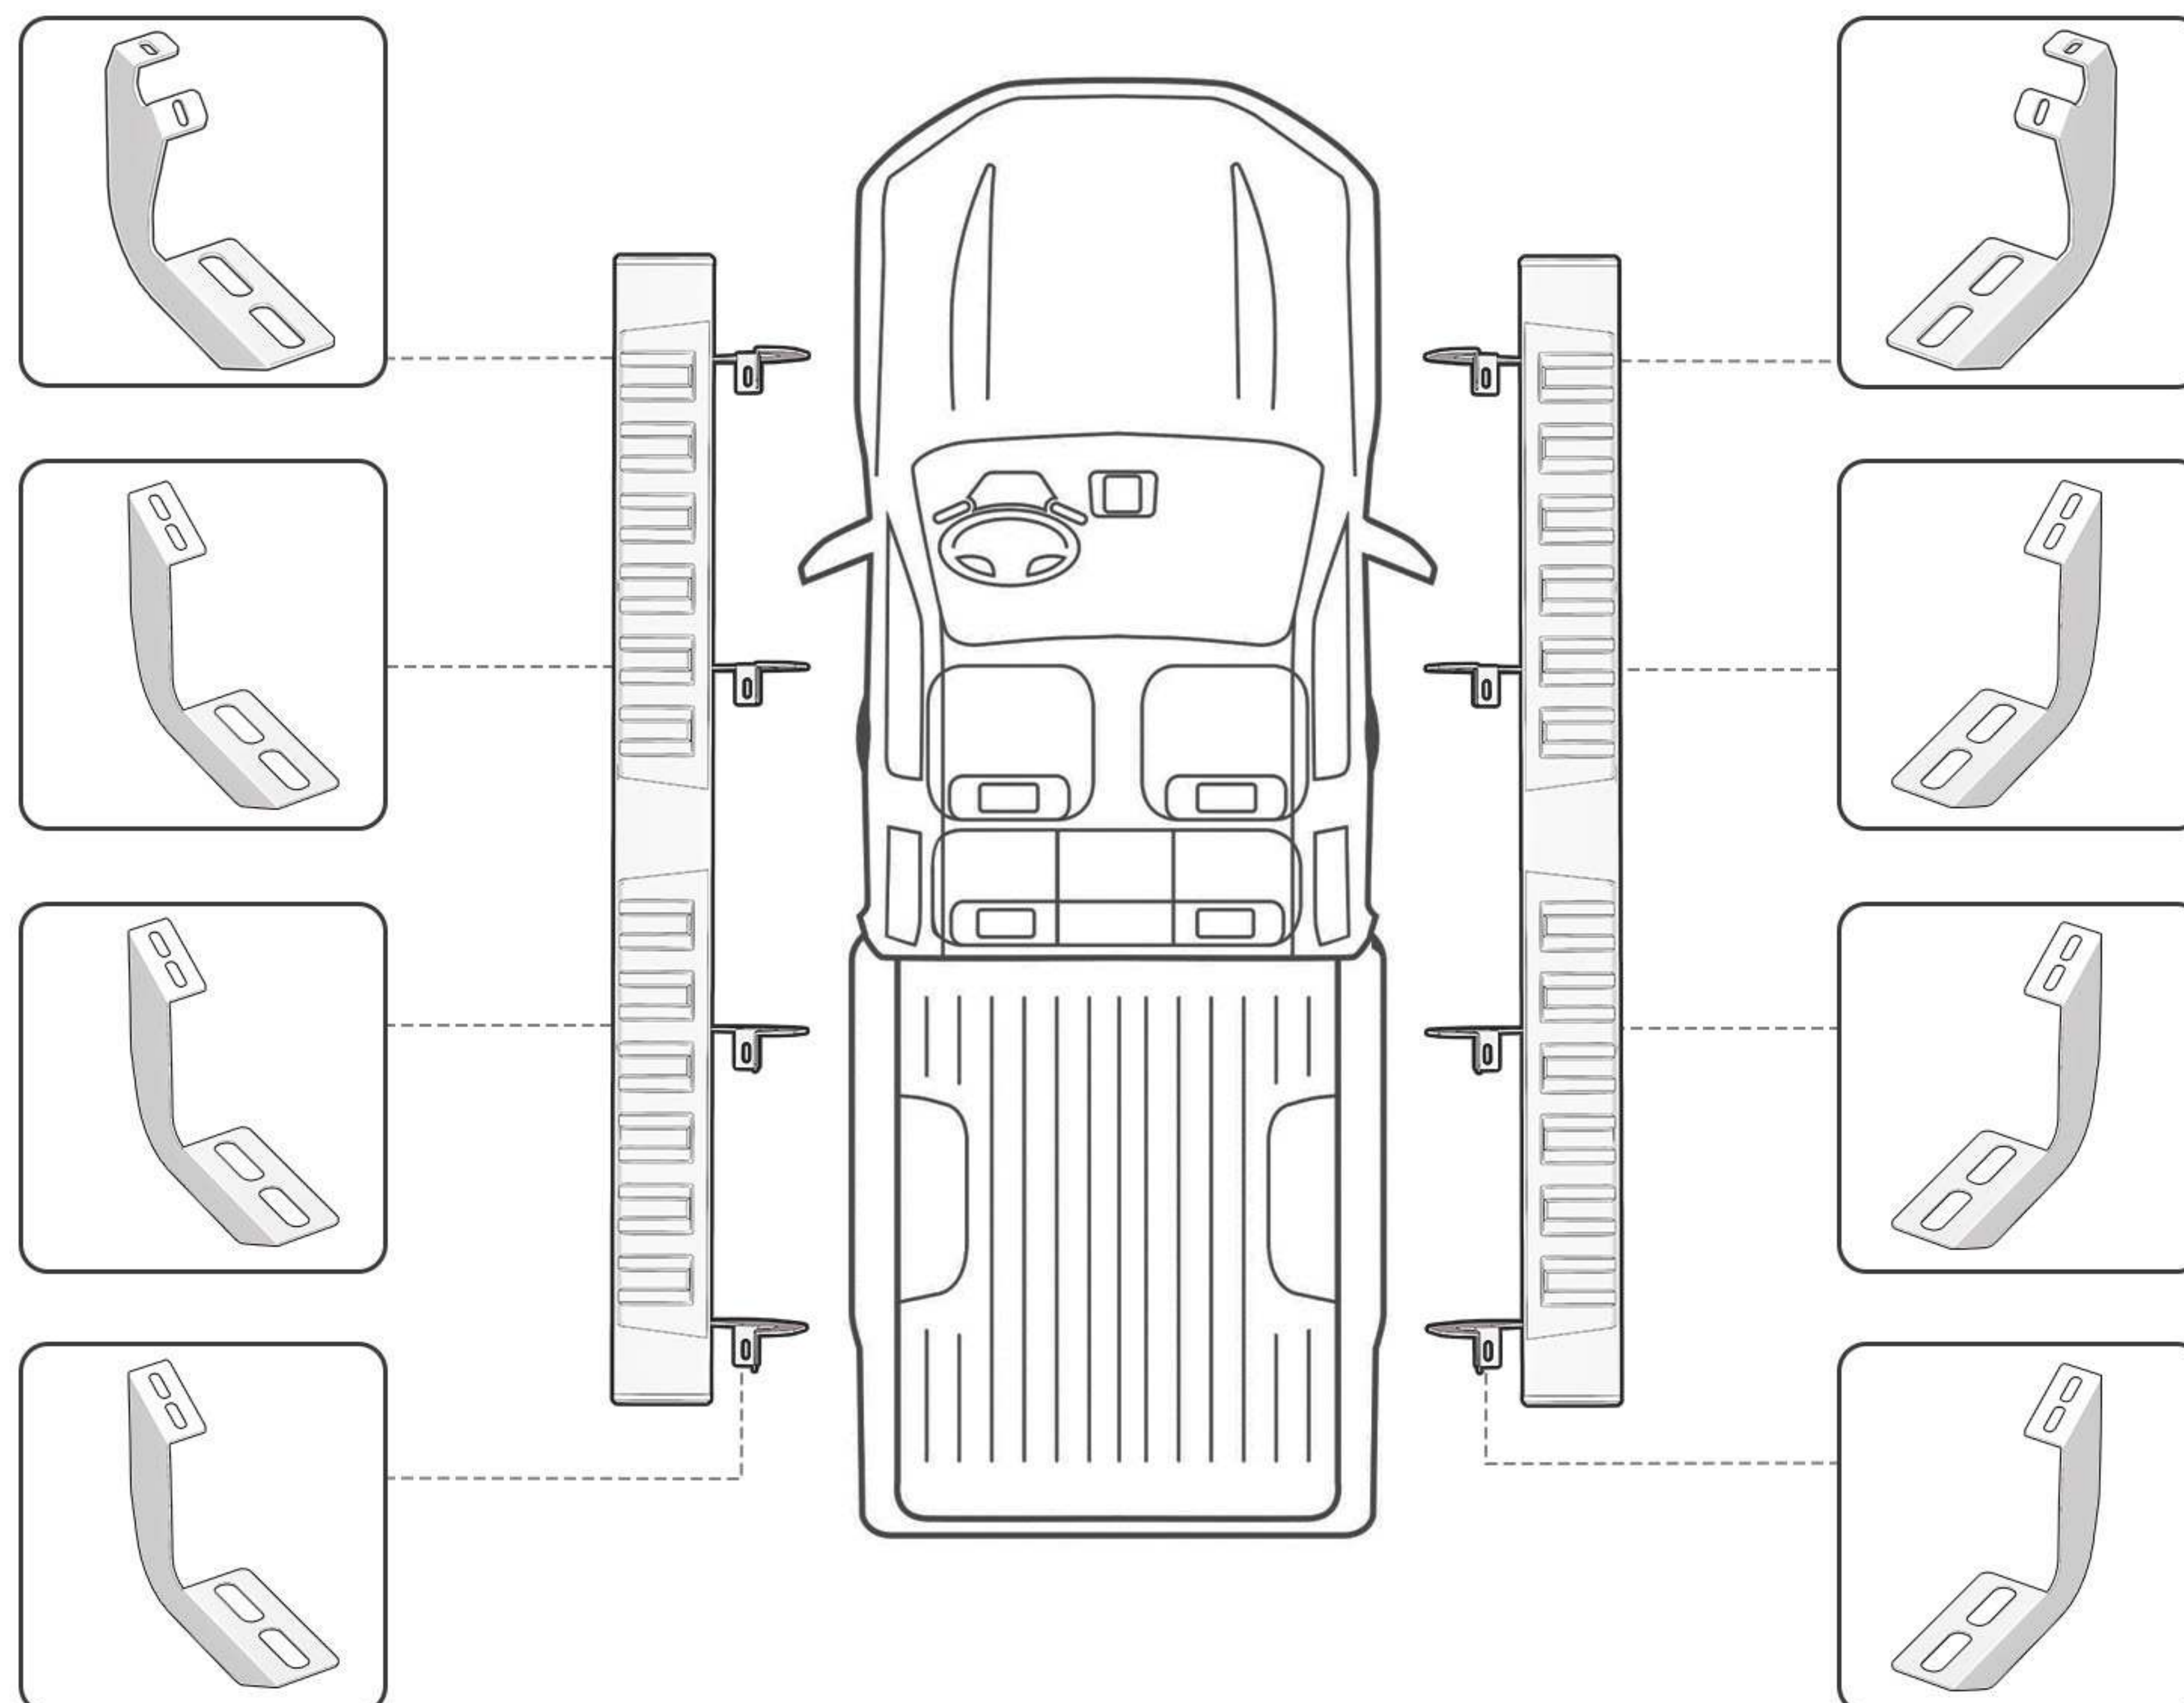


PREPARE ALL THE BRACKETS THAT NEED TO BE INSTALLED AND DISTINGUISH THE DIRECTION, AS SHOWN IN THE FIGURE.




## NOTE:

### CONFIRM THE POSITIONS WHERE THE BRACKETS WILL BE USED AND PREPARE THEM."

- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

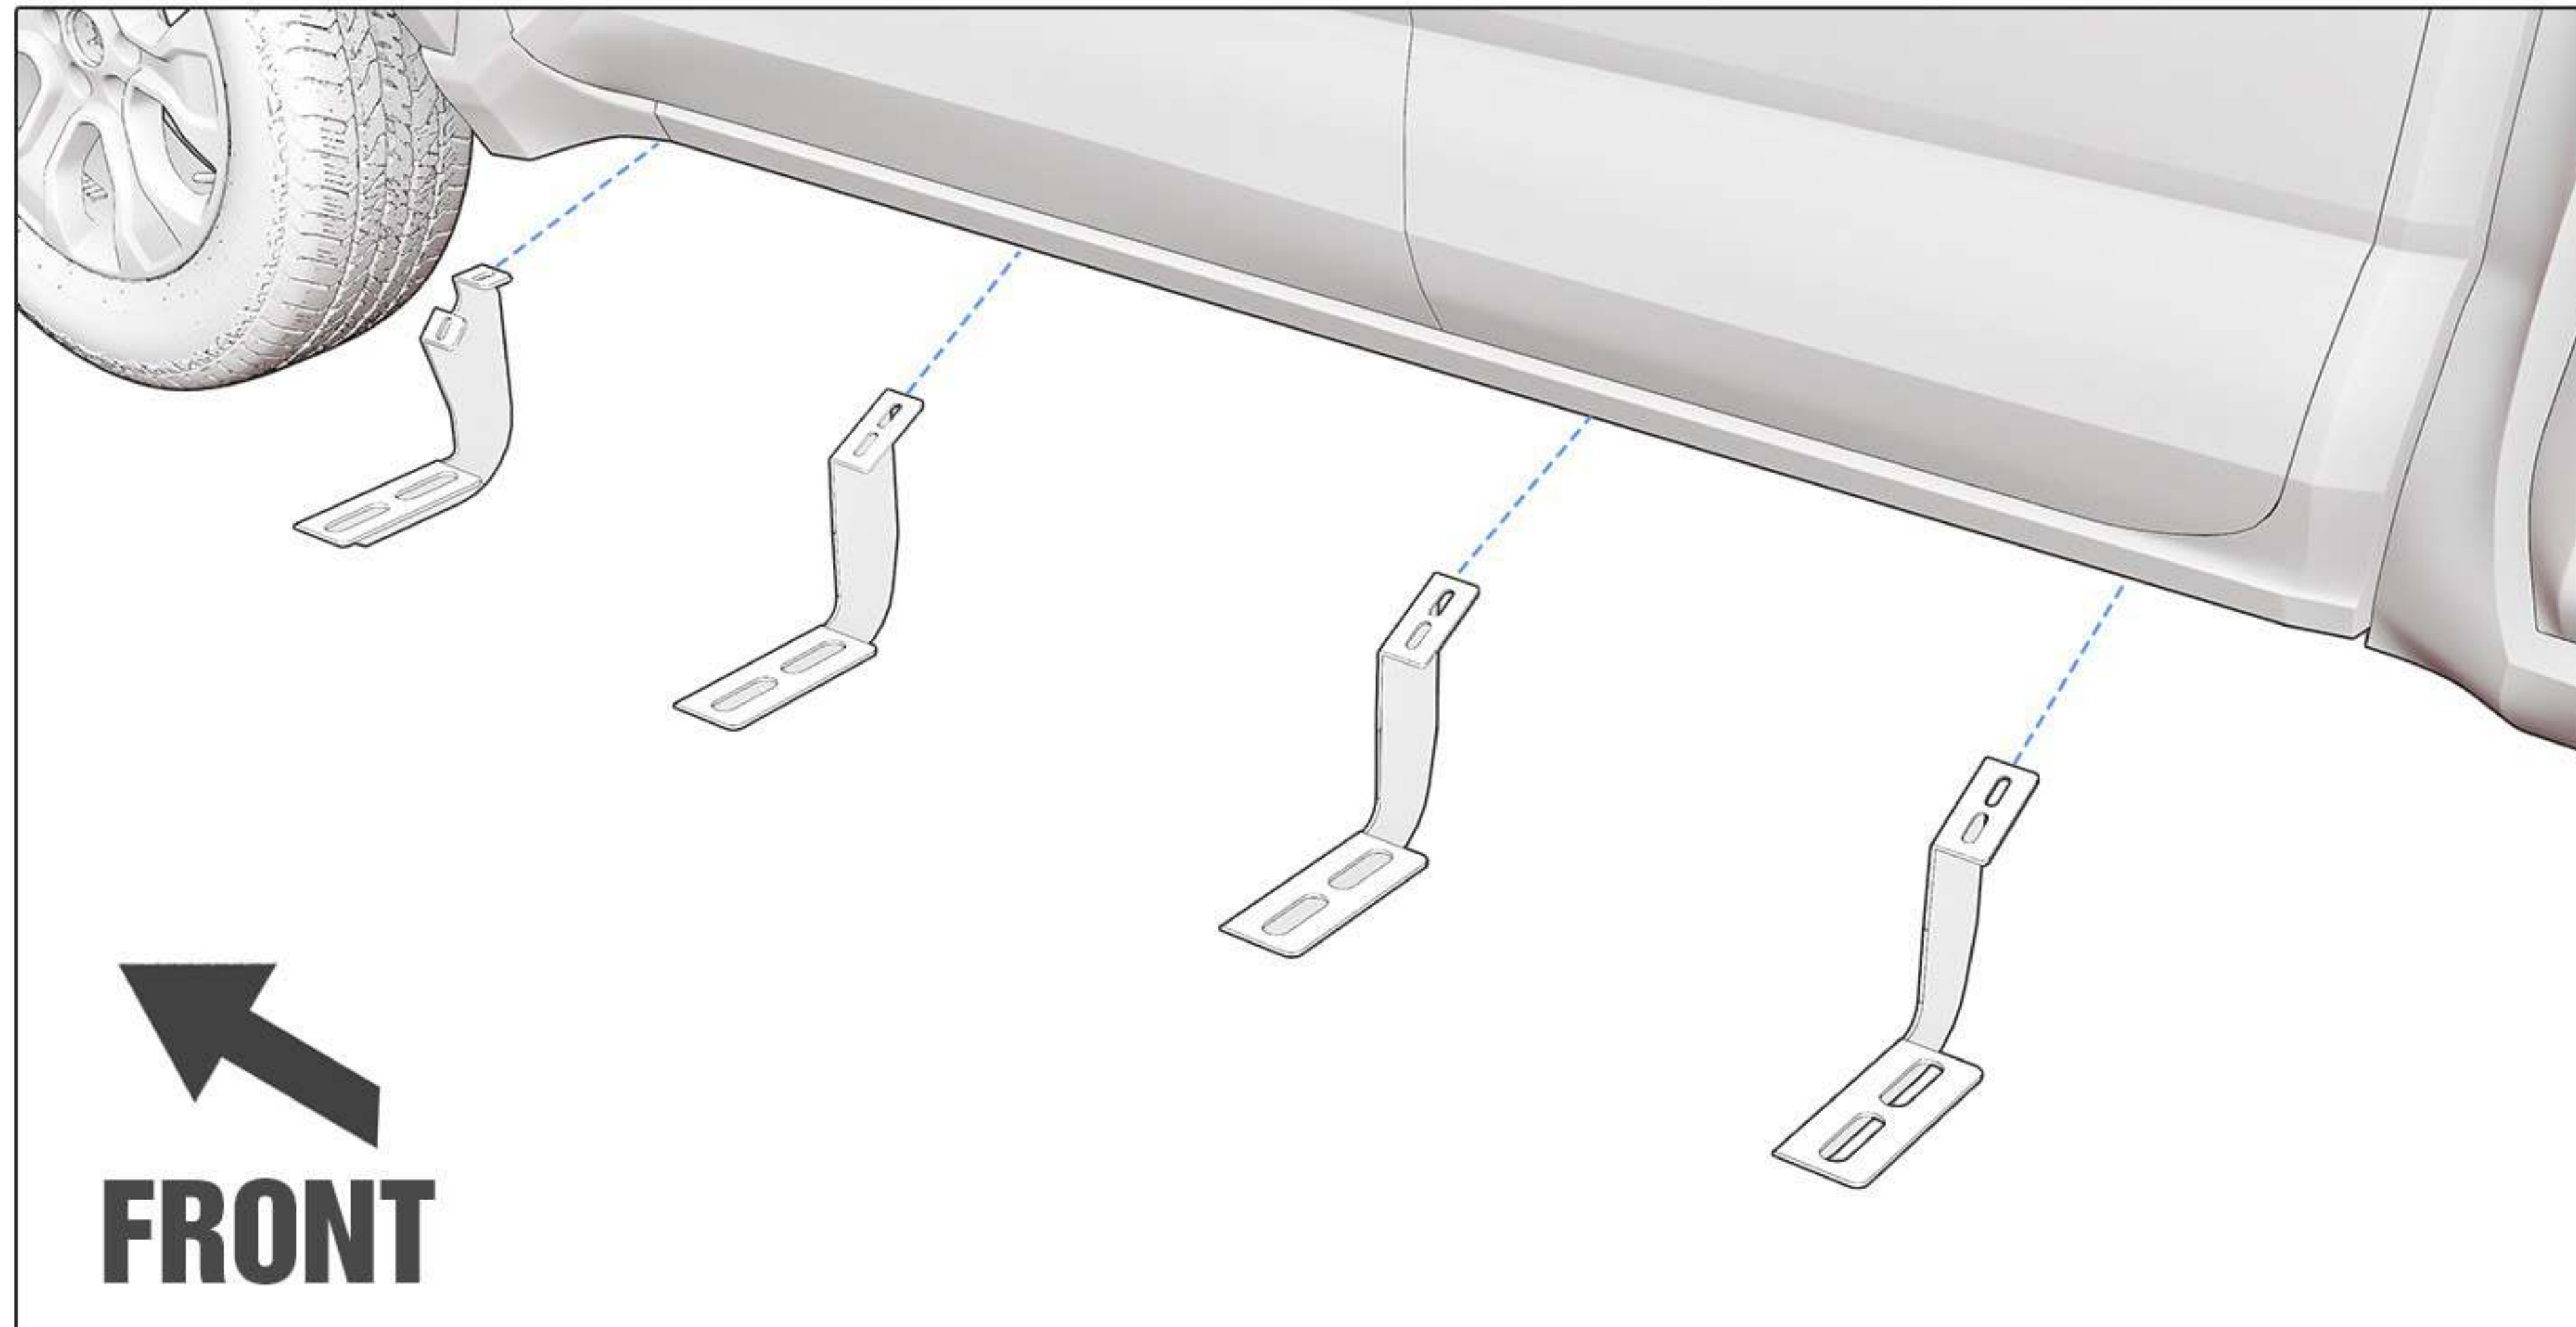


- First, there are six mounting bolts underneath the vehicle. Use a socket wrench to remove all of them. Repeat the same process on the other side.

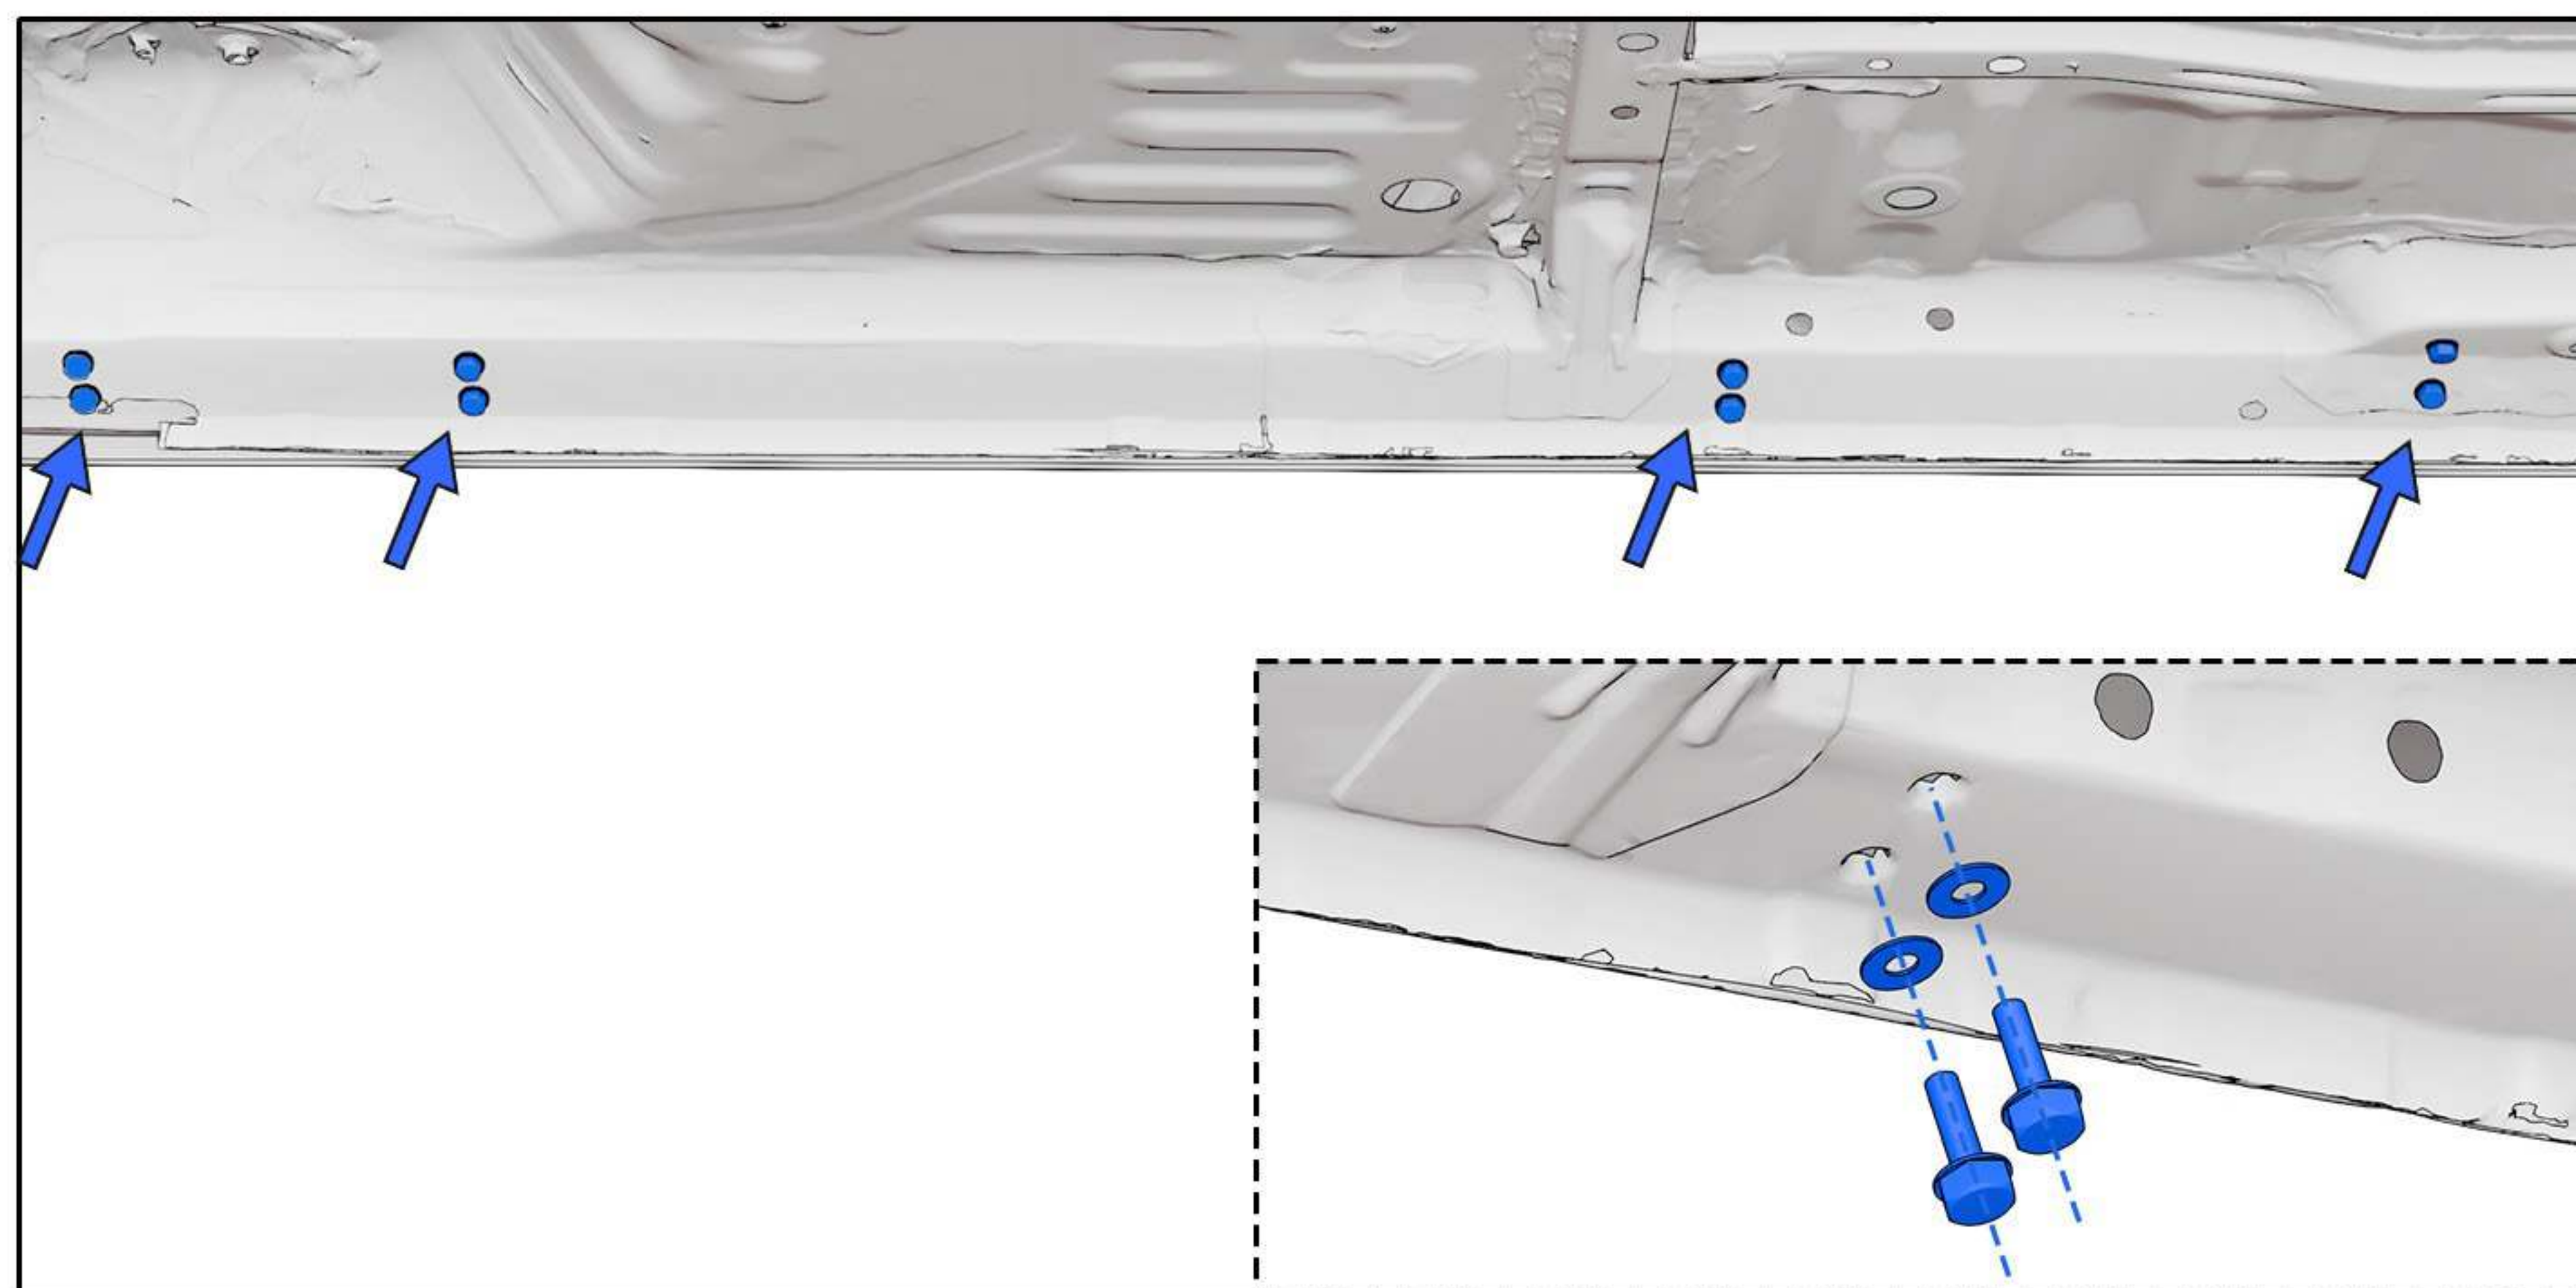


## STEP 01

- Take out the provided bracket and align it with the previously removed boltholes. Secure it using the supplied M8 bolts.

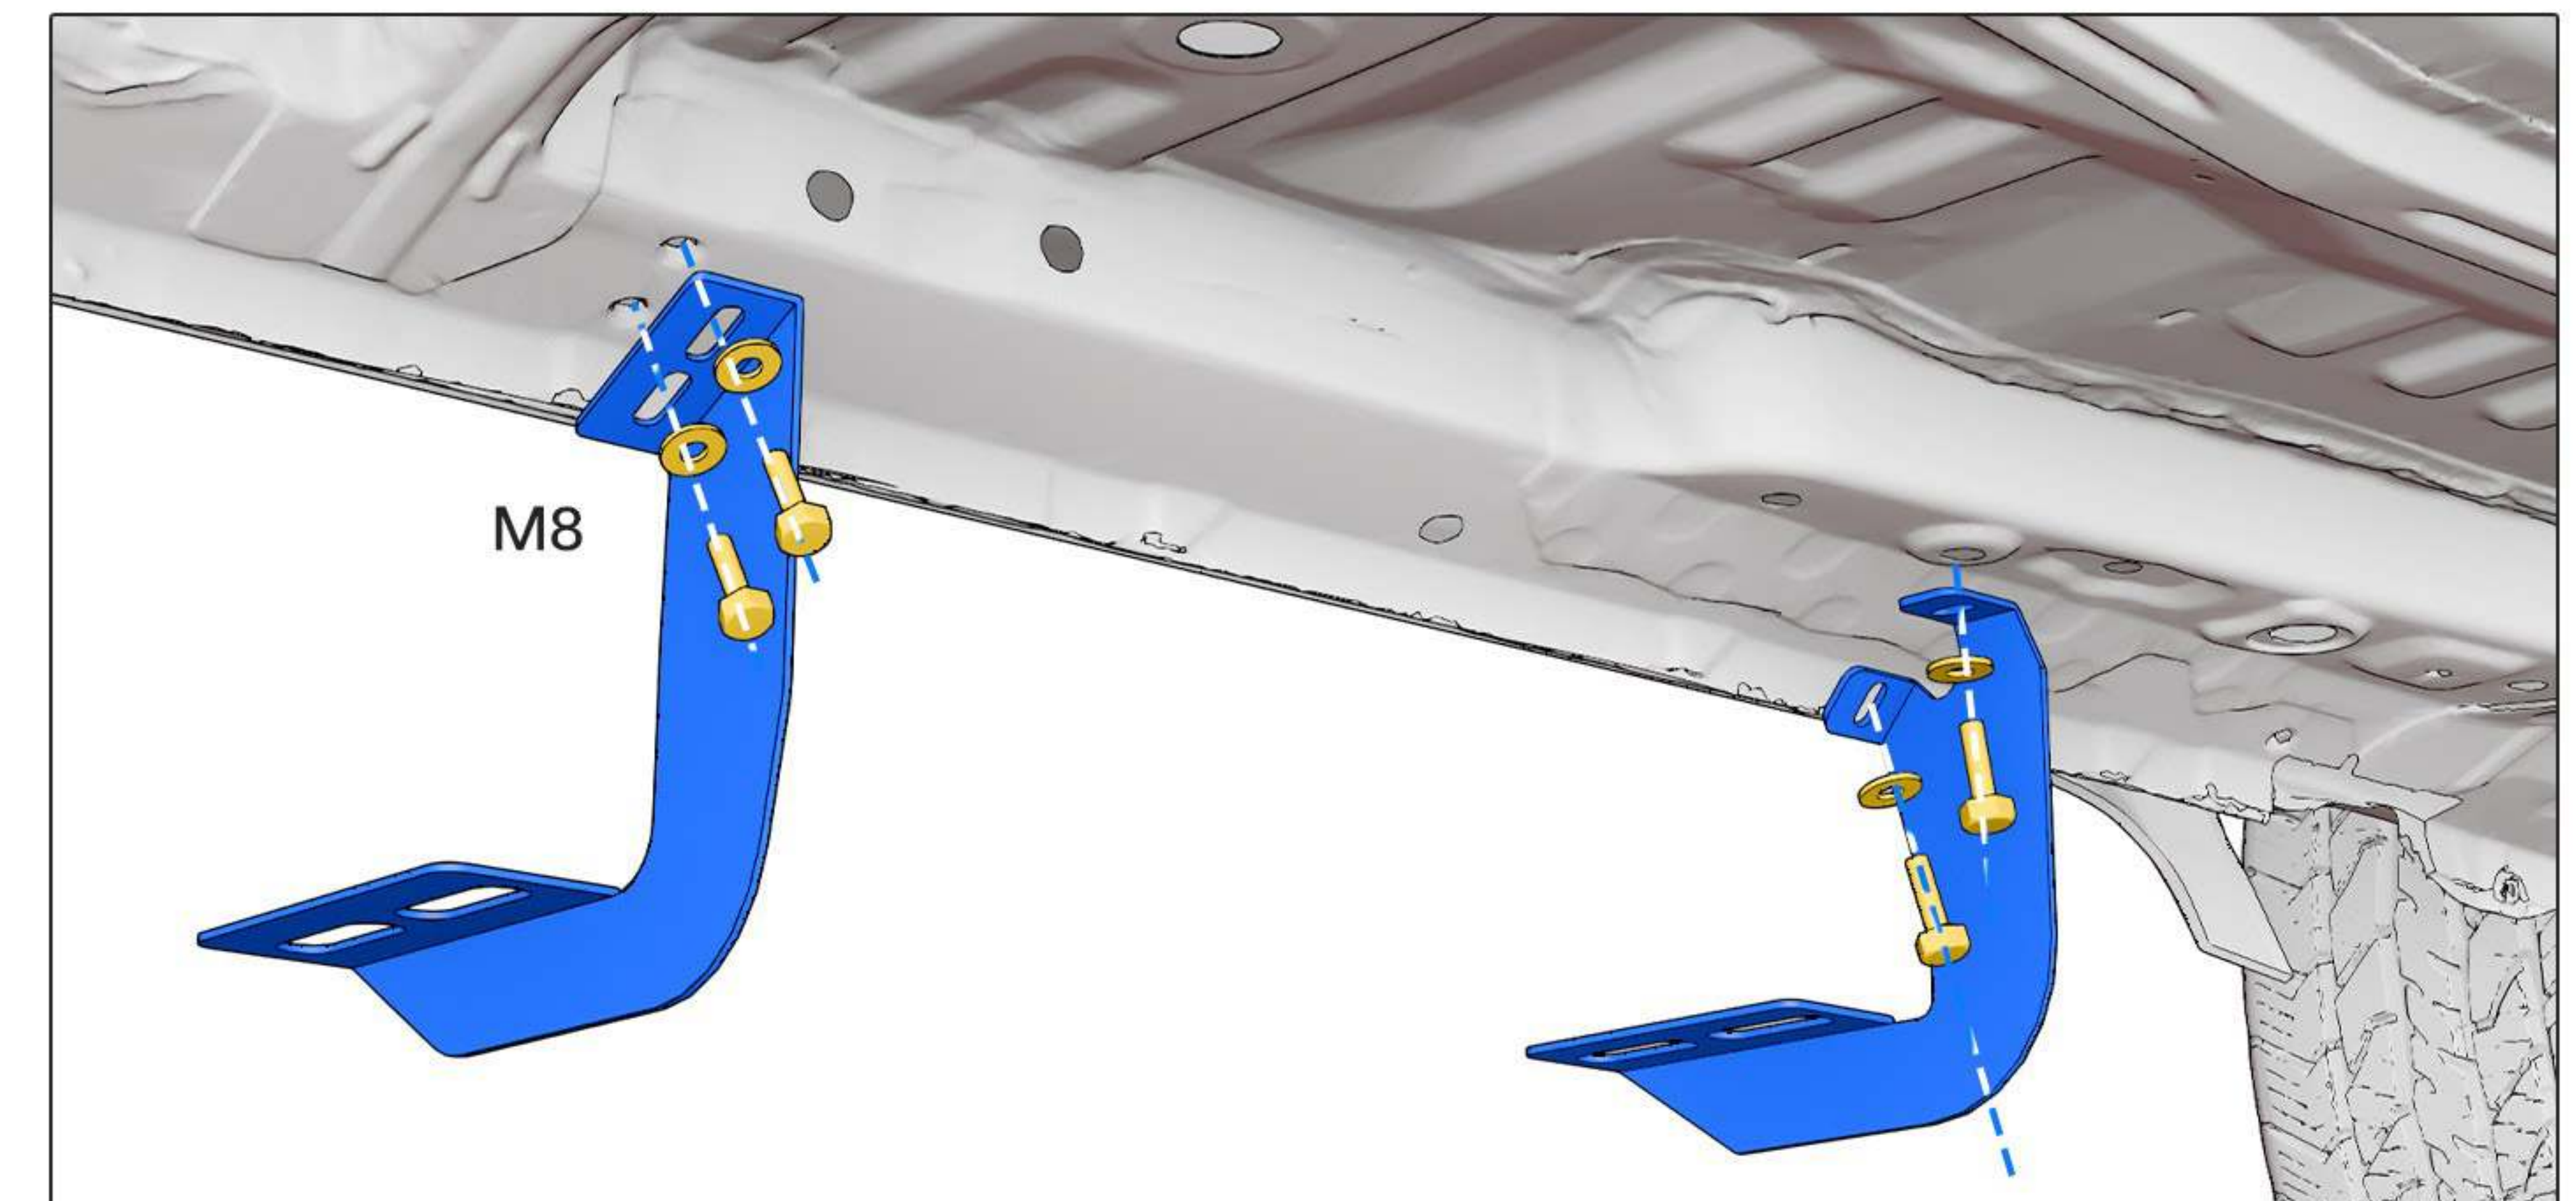

- Finally, remove the bolts from the bottom of our pedal, then slide the mounting rail into the installation position and secure it with the M8 bolts just removed.
- Note: Do not fully tighten the nuts to avoid inconvenience in adjusting if the subsequent product is not level.

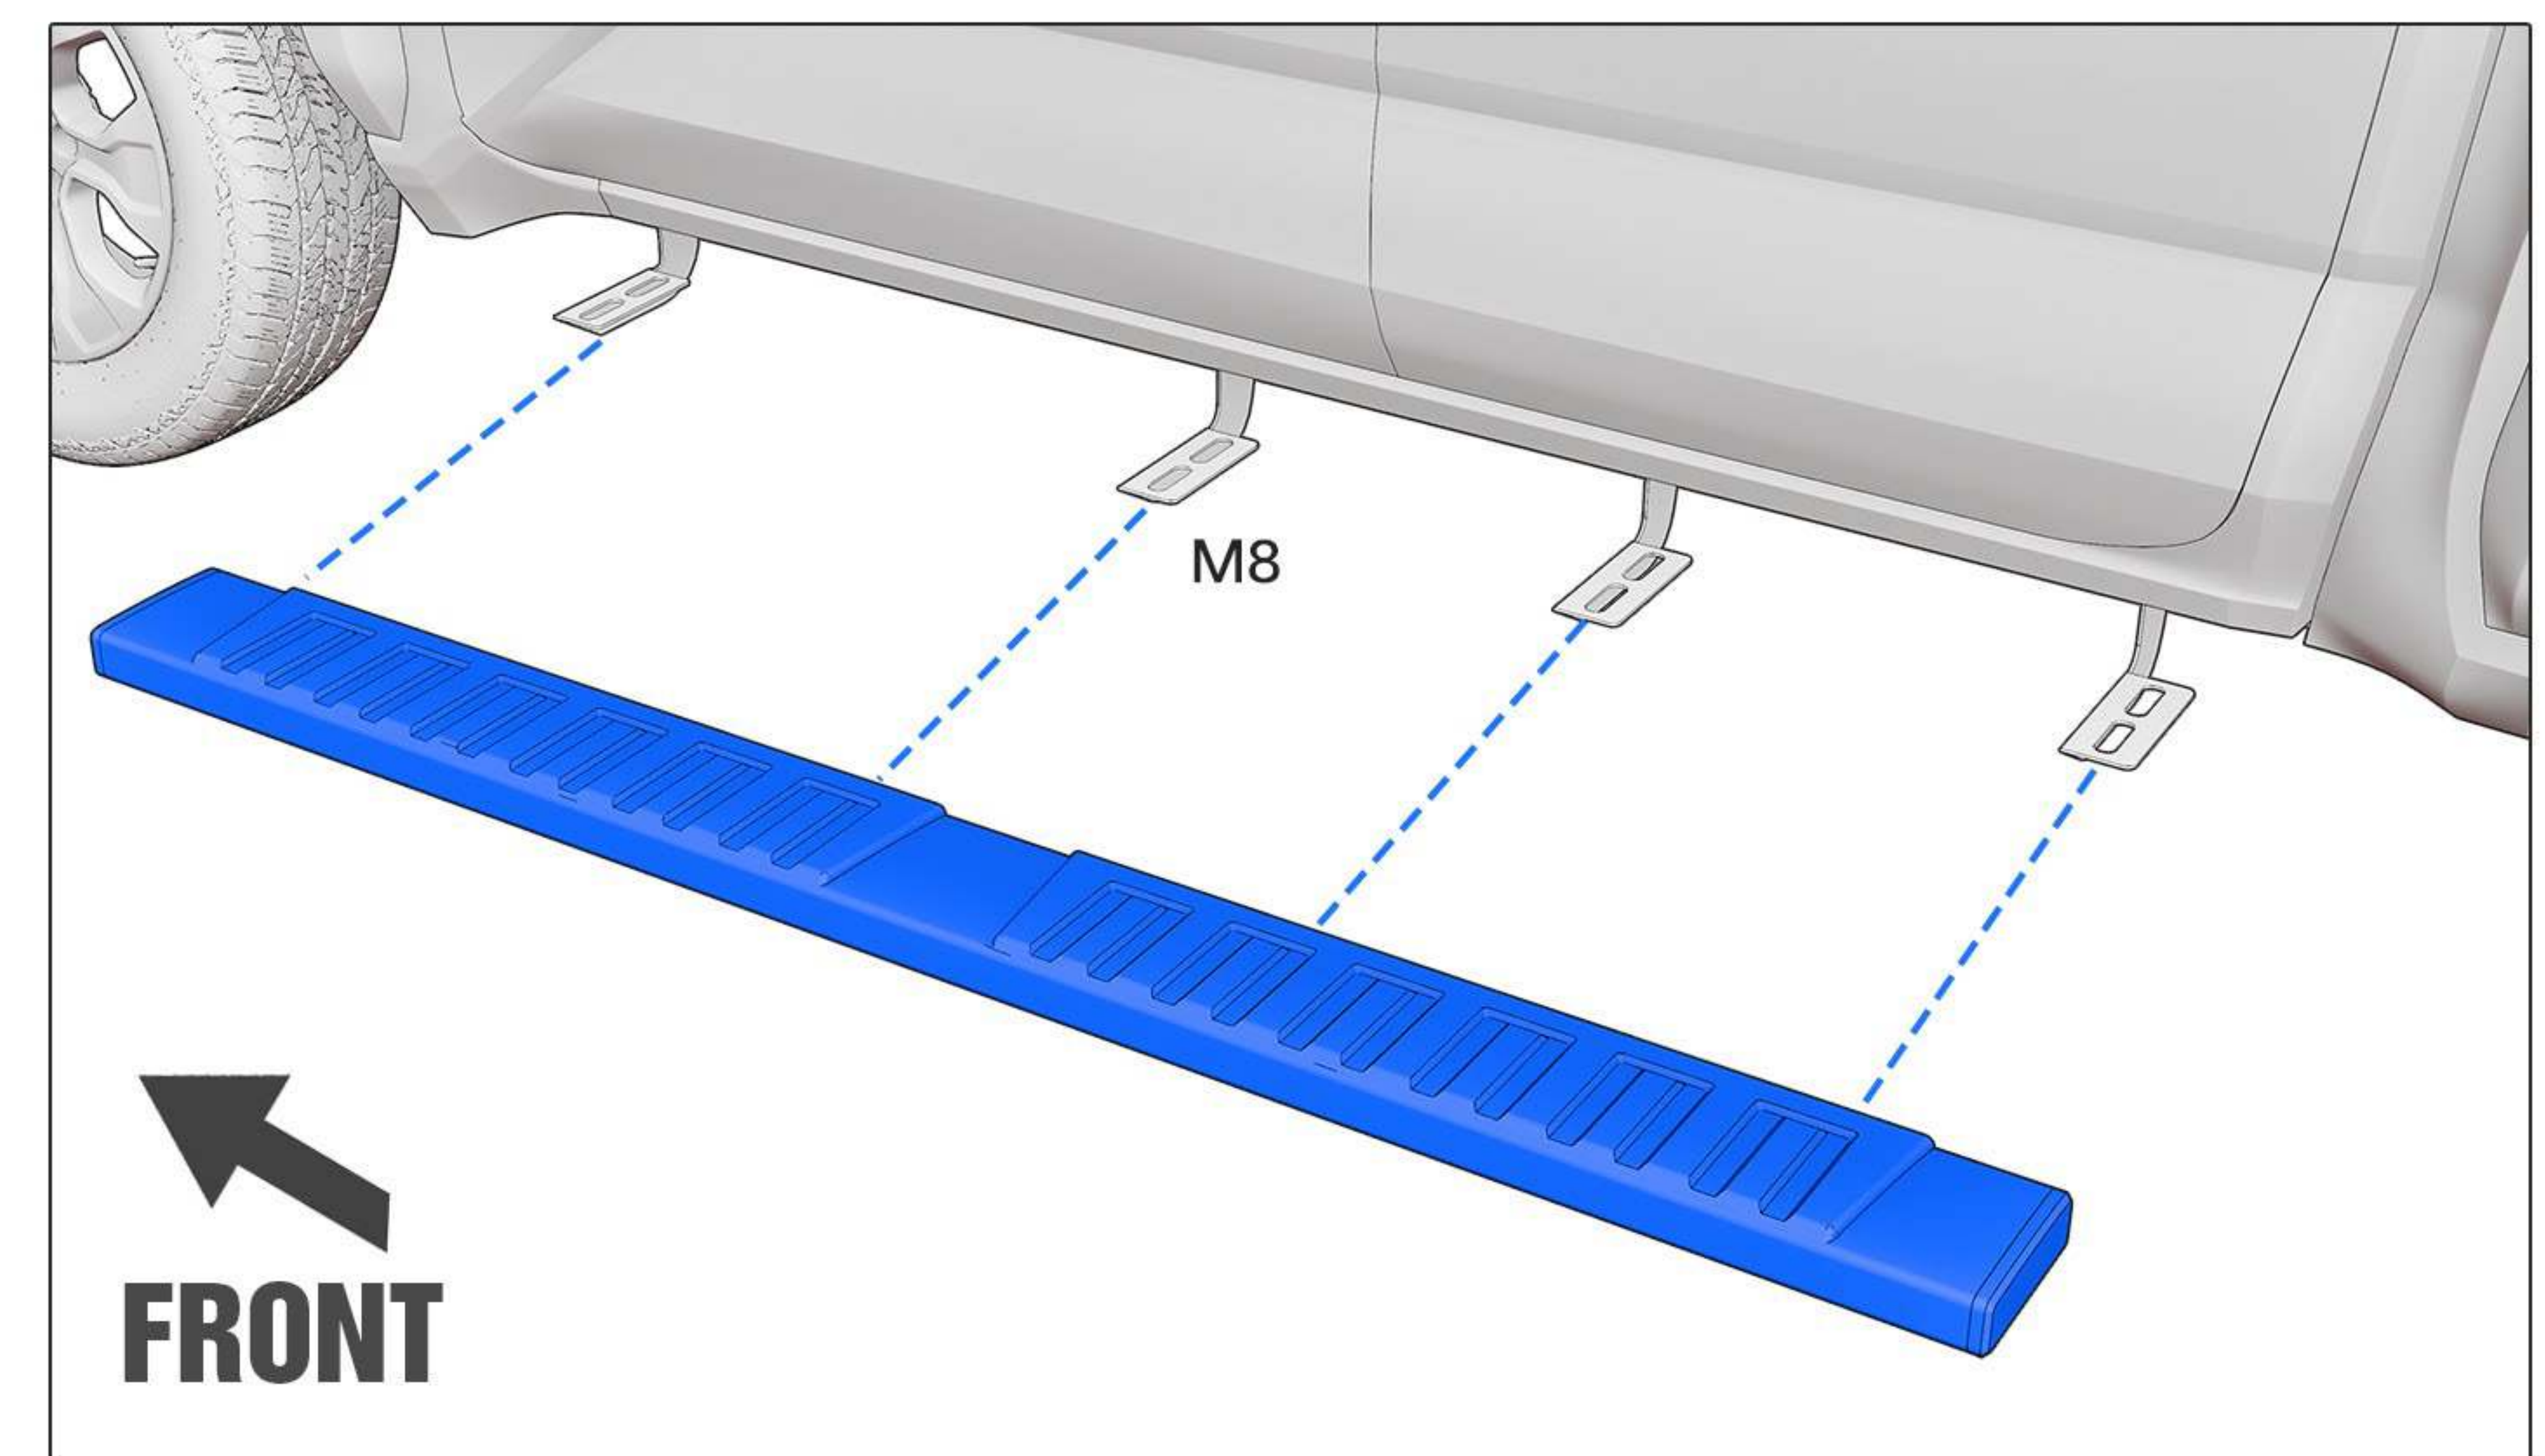

END