

CARE AND USE INSTRUCTIONS

Tools Required

4mm, 17mm, 19mm Socket

Torque Wrench

Ratchet



Notes

Read this instruction carefully before starting installation.

Proper tools will improve the quality of installation and reduce the time required.

If missing parts or any damage found, please take a picture and contact us.

The wire harness is NOT included.

CARE AND USE INSTRUCTIONS

Step 1:

- 1.Remove (4) rivets holding the splash guard in place and remove the splash guard.
- 2.Remove (2) rivets securing the frame cover between the grille and front bumper.
- 3.Disconnect foglamp connector.
- 4.Remove (8) M12 hex nuts holding the bumper onto the frame rail.
- 5.Carefully remove the front bumper.

Step 2:

- 1.Position the bull bar to KYBOLT front bumper.
- 2.Secure bull bar using(6) M6×20 Allen Head Bolt ,(6) M6 Lock Washer ,(6) M6 Flat Washer, (6) M6 Flange Nut
3. Tighten M6 Allen Head Bolt bolts with 15 ft.lbs.torque.

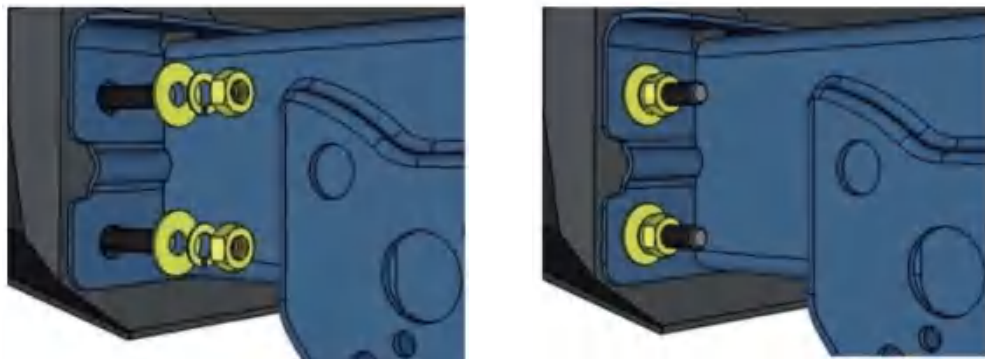


Step 3:

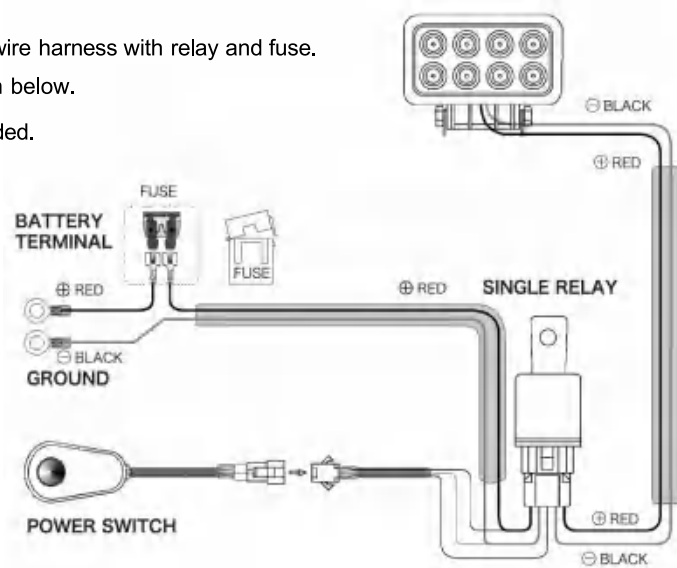
1. With assistance, lift and attach the bumper to frame rail, secure with (8) M10 hex nuts,(8) M10 flat washers,(8) M10 lock washers.

2. Tighten M10 hex nuts with 31 ft.lbs. torque.

Note: Install winch on winch plate before install the bumper on vehicle.

**Step 4:**

1. For your safety, please select wire harness with relay and fuse.
2. Reference wire diagram shown below.
3. The wire harness is NOT included.

**Step 5:**

1. Install(2) D-rings on shackle mounting brackets.
2. After bumper installed, periodic check to ensure all mounting hardware remains secure and tight.

Part List:

			
Bull Bar			X1
			
D-Ring Shackle	X2	M6x20 Allen Head Bolt	×6
			
M10 Hexagon Nut	X8	M6 Flat Washer	×6
			
M10 Flat Washer	X8	M6 Lock Washer	×6
			
M10 Lock Washer	X8	M6 Flange Nut	×6

If you have any questions about your purchase, please feel free to contact our after-sales email at dexso_service@outlook.com