





Huntington Radio Face Quick Start Guide

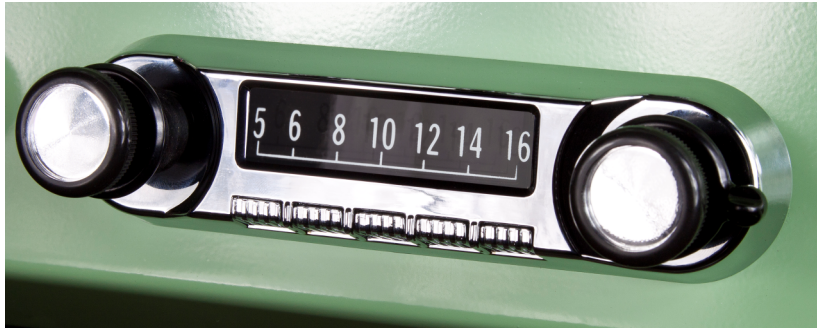


Note: Huntington radio face shown above with separately available front and rear knobs (knobs not included with radio face or Motor 3 box).

v 1.0

Front/Rear views

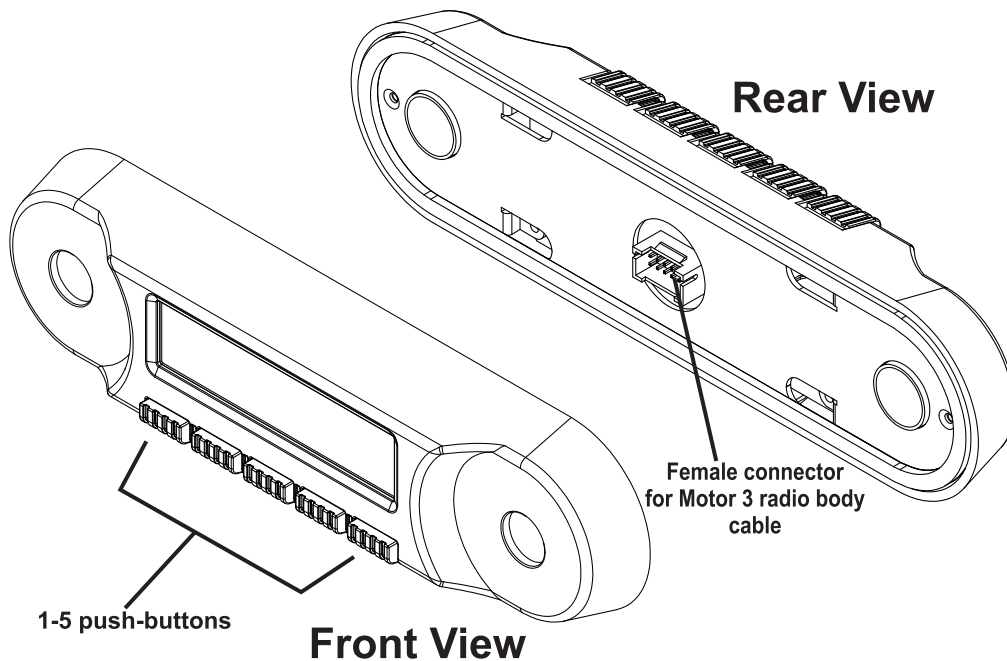

What's in The Box

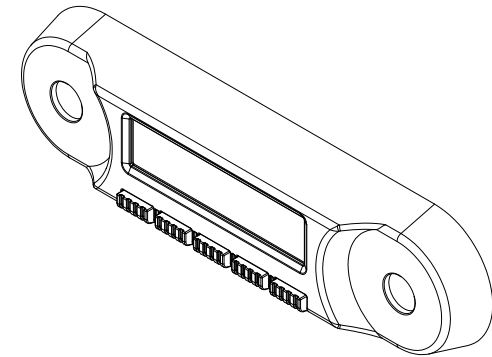

Huntington Radio Face


Connection to Motor 3 Radio Body



Turn Page

Installation Overview for 1966-77 Bronco or Hot Rod Cars

1

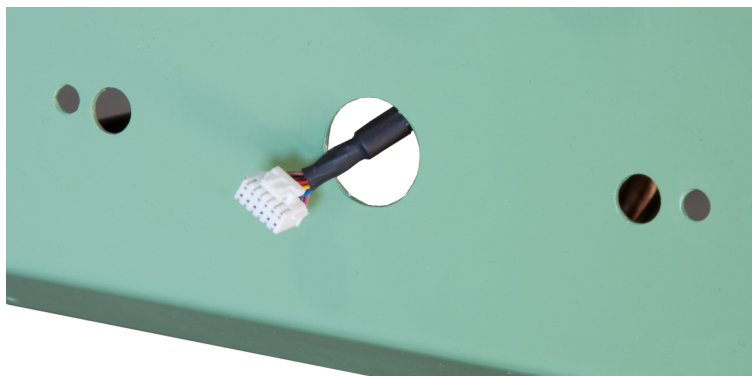

For 1966-77 Ford Bronco dashes, the holes for the original radio are already cut into your dash. The center hole is for the cable from the Motor 3 radio body, the Huntington radio face is also perfect for hot rods or custom flat dash applications where a low profile, custom appearance radio will fit in with the project.

Installation Overview for 1966-77 Bronco or Hot Rod Cars (Continued)




3

Views above show the Huntington plate mounted on the dash without knobs. NOTE: Be careful when tightening the front nuts so as not to crack the Huntington's radio face. Please call or email us for any technical questions you may have.

Installation Overview for 1966-77 Bronco or Hot Rod Cars (Continued)

2

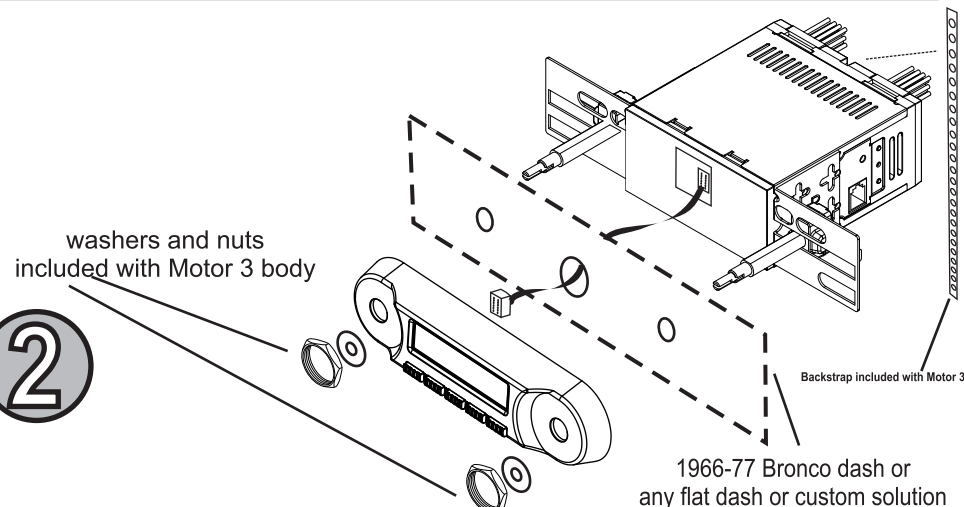

Assemble the Motor 3's InfinitiMount brackets and affix the shafts to the brackets using the dash or the Huntington radio face to match the shaft width. Using the included washers and nuts, mock up the mount and adjust the shaft depth to your preference. Once the install is done, use the included metal back strap (included with Motor 3) to secure the back of the radio body to the vehicle.

Installation Overview for 1966-77 Bronco or Hot Rod Cars (Continued)



Final Install showing Huntington radio face mounted with front and rear knobs.