

## BARTACT JL/JLU/Gladiator Console Pouch (PAT PEND) Installation Instructions

**1) Remove Top Front Screw on Driver or Passenger Side Console**



**4) Insert screw through mesh and then crew back into the top of the console**




**2) Line up pouch on top of console and insert included horse nail**



**5) Repeat steps 1-4 on the back side of the console.**



**3) Push horse nail through and twist a few times to widen the hole enough to fit the OEM screw through**

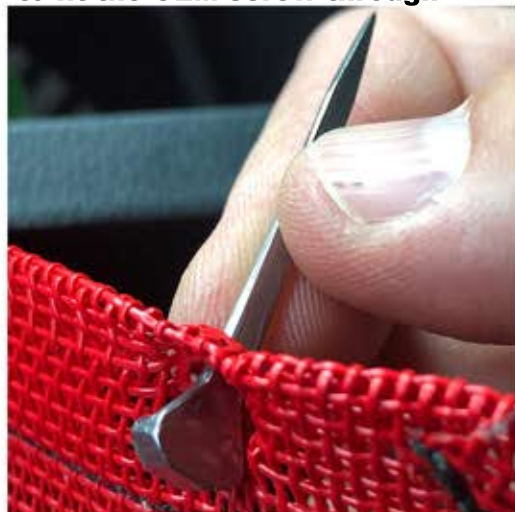

**6) Tuck pouch behind Seat Belt, close the console, and you're done!**

