

## Adjustable height dryer assembly and installation.

The following items are supplied with the dryer

- Top drying frame and top section of the center mast, preassembled and pre strung.
- Lower section of center mast.
- Ground socket.
- Clamp.

Materials required for the concrete base

5 kilos of cement

20 kilos of sand

9 inch by 9 inch cavity block,

or

60 pounds of ready mix concrete

9 inch by 9 inch cinder block,



All are available from your local Builders providers.

Step 1

Mix enough cement to fill the Center of the cavity block. ( the mix is 1 part cement 4 parts sand )


Place the socket into the block and let it set.

Leave at least 2.5 cm to 5 cm (1 to 2 inches) of the socket above the block.

**\*\*\* Be careful not to let the cement rise up the center of the socket \*\*\***

Step 2

Dig a hole which is about 30 cm (12 inches) square and about 40 cm (18 inches) deep. If you save the piece of lawn removed, you will be able to replace it later.

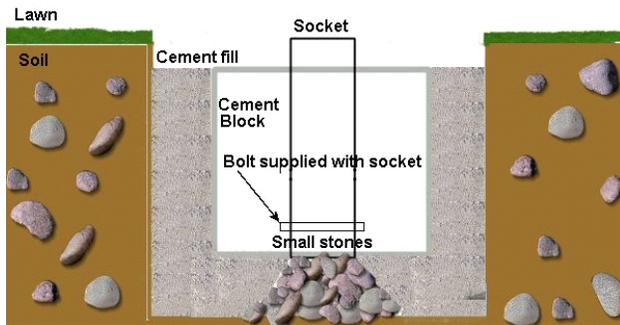


Place some small stones in the bottom of the hole, just under the bottom end of the socket and surround them with cement, this will allow rainwater to drain away.

Be sure the fill is enough to bring the top of the socket just below the level of the lawn, if the top of the socket is protruding it will prevent you from running the lawnmower over this spot, so leave it just below the level of the soil.


Now fill the rest of the hole with concrete, if you leave it below the level of the lawn you will be able to replace the sod that you removed earlier.

### Step 3

Slide the lower section of the mast with the clamp attached onto the upper section mast, tighten the clamp at the required height.

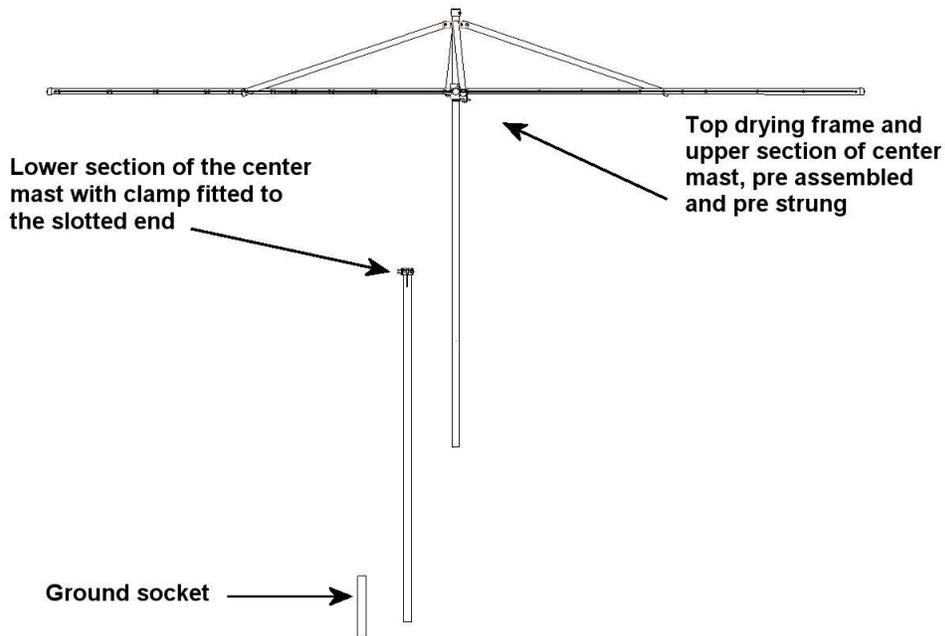

**Clamp with adjustable handle is attached to the slotted end of the lower mast.**

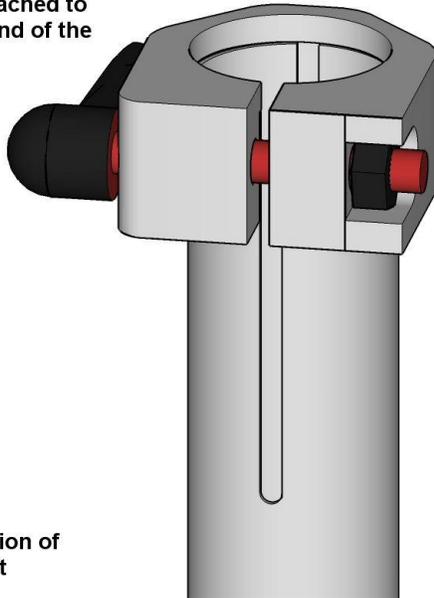

**Lower section of center mast**

The clamp handle can be set in any position once the clamp is tightened pull the handle out slightly and turn to a suitable position.

When opening the dryer slide the lower bracket up to the collar and hook, open the hook to allow the bracket to pass and reach the collar, check the lines to make sure there are no tangles or snags and keep fingers clear as the bracket reaches the collar.

Now before the base sets place the open clothes dryer into the socket and adjust the dryer making sure it is straight and level.

When not in use the rotary clothesline can be removed from the socket and stored away, to disassemble the telescopic mast, reduce the height to a lower setting then tighten the clamp, lift the dryer out of the ground socket and lay it in the open position on the ground, open the clamp and remove the lower section from the mast, now the dryer can be closed and stored. A storage cover CVR-001 is available for this model.