



LUMENSHIELD

Installation


Instructions

Installation:

Steps may be different depending on the model. Please ensure you have read through the instructions and understand them clearly before attempting the installation.


WARNING!

- To prevent possible electrical shock, disconnect the negative battery terminal before installing this product.
- Park the bike on a level surface. Allow the bike to cool before starting installation.
- Assemble the separate radiator covers and connect the harnesses. Use the four provided screws to connect the two pieces.

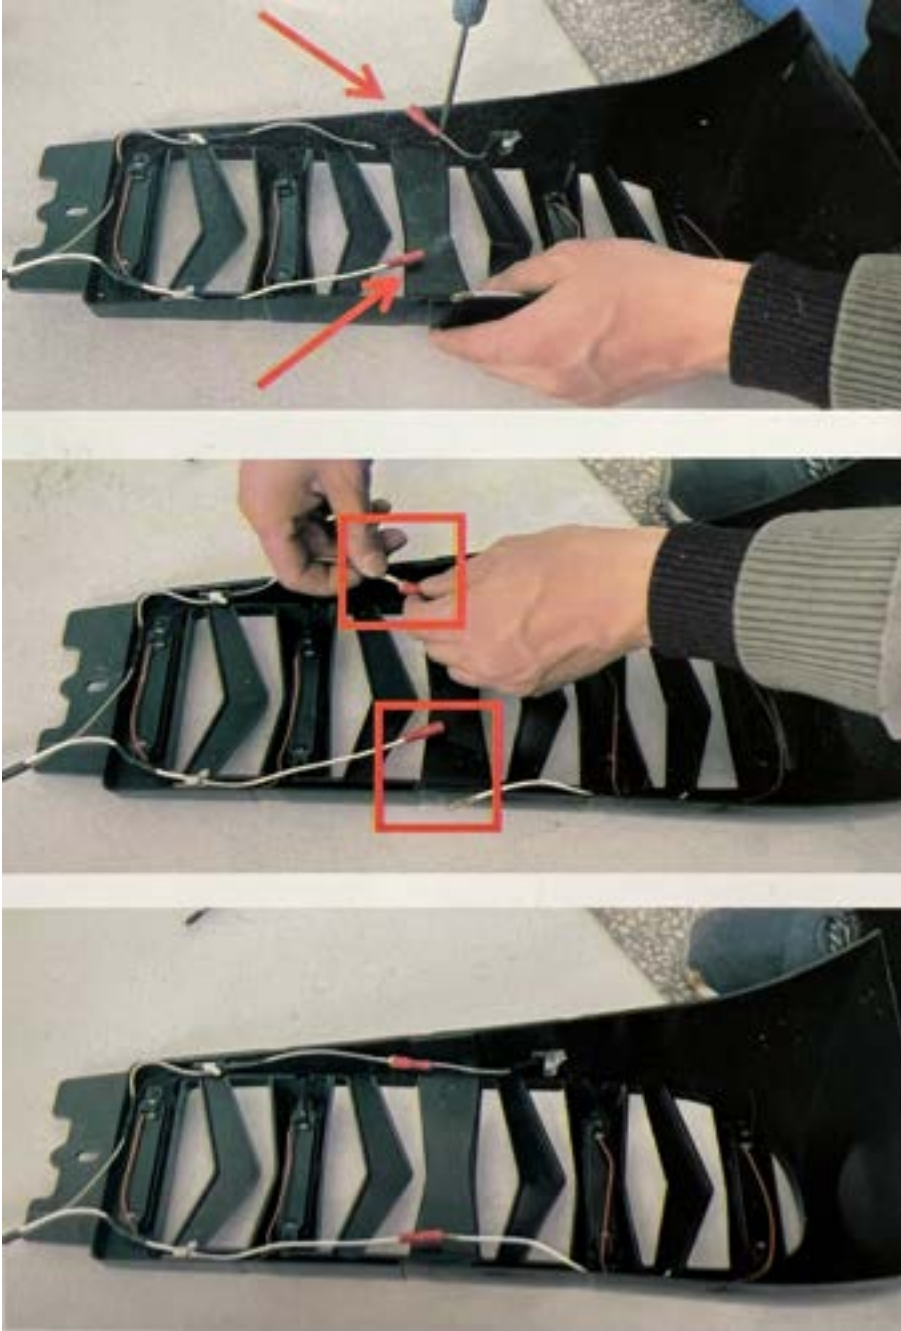

3

- Unscrew the screws under the original radiator and install the bracket on both sides of the screw. Please note there is a separate left and right bracket. Then install the screws back in place and clamp the steel clip on the bracket on both sides.

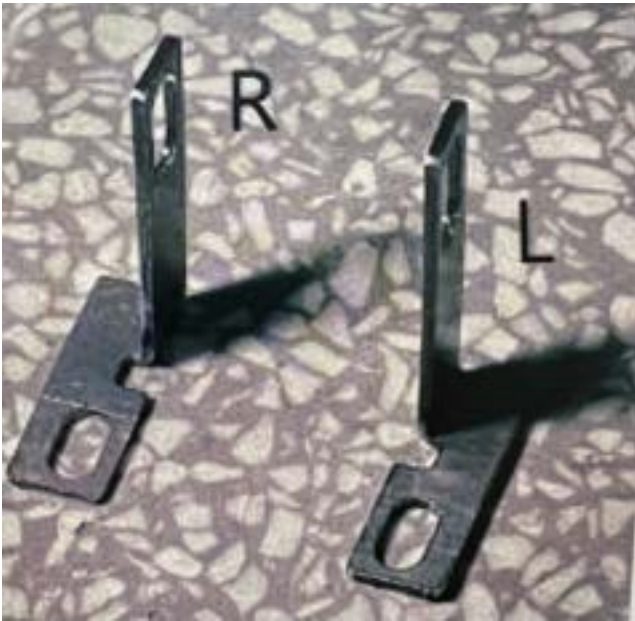





6

- Use the L style bracket and attach it to the radiator.



7

- Attach the radiator cover on the newly installed bracket and screws.



- Connect the top of the radiator cover with the last pin.



-
- Connect the harness to the headlight harness.



