



WSL1 Installation Instructions

Installation:

Steps may be different depending on the model. Please ensure you have read through the instructions and understand them clearly before attempting the installation.

WARNING!

- To prevent possible electrical shock, disconnect the negative battery terminal before installing this product.
- Park the bike on a level surface. Allow bike to cool before starting installation.
- Remove the 4 screws on the windshield trim. Lift up on the center of the windshield to disengage the clips.




2

- Locate the turn signal plugs under the fairing. There will be one on the left and one on the right.



- Disconnect the plug from each other and plug the new LED light in line.

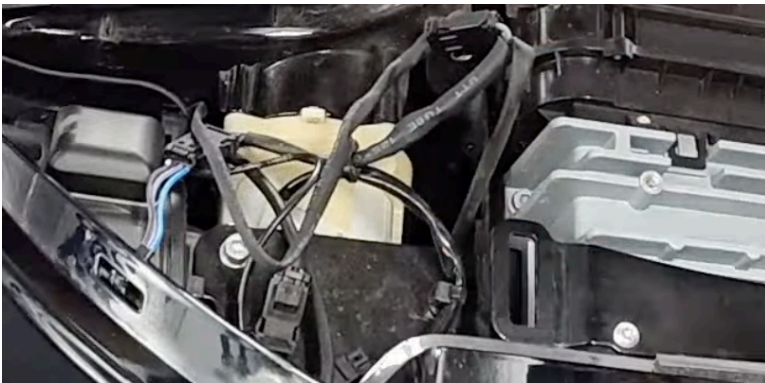

- Re-Install the plastic cover with a little over an inch of slack on the outside of the plastic cover.



- Using the provided bolts, bolt in the light as the last step in reassembling the windshield. If the provided bolts are not long enough, the stock bolts can be used.