

harmony™




ACOUSTIC PET FELT 3D/CARV PANELS

SIMPLE, MODERN, VERSATILE + GOOF-PROOF INSTALLATION




TOOLS + SUPPLIES NEEDED



ADHESIVE OPTIONS




APPLY ADHESIVE

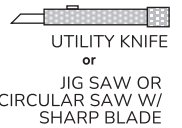

We recommend: Titebond GREENchoice Fast Grab FRP Adhesive or Loctite Power Grab Ultimate Crystal Clear or Liquid Nail Fuze It


1 PREPARATION

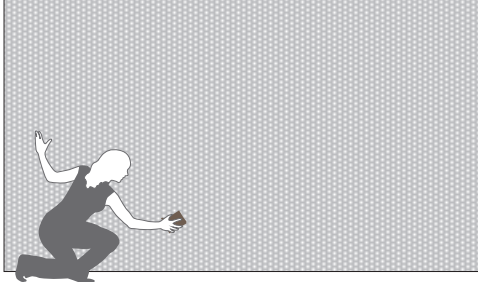

Install over primed or painted drywall or plywood. Surface must be clean, smooth, dry, free of waxes and existing adhesive, dirt, dust, grease, oil, paint curing compound or sealers.

NOTE: Tape cannot be used over chemically cleaned substrates or raw plywood. If using tape on a painted surface, test first, some paints may require the wall to have a coat of bonding primed first.

2 PLANNING

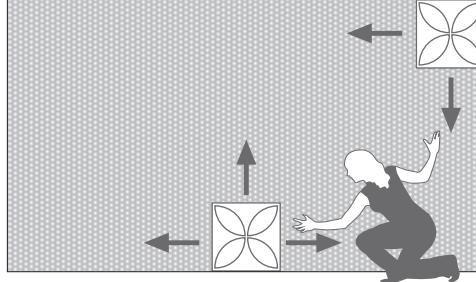


Will your install be wall-to-wall, a floating design, a strip of panels, etc? Plan the layout on the floor or sketch it out.

Use a level to mark straight lines. Allow cut panels to fall in more inconspicuous areas like corners and bottoms. If working from the center out, all panel edges may need to be cut. Plan well to ensure desired results.


Remember, measure twice and cut once.

3 SEMI-PERMANENT ADHESIVE

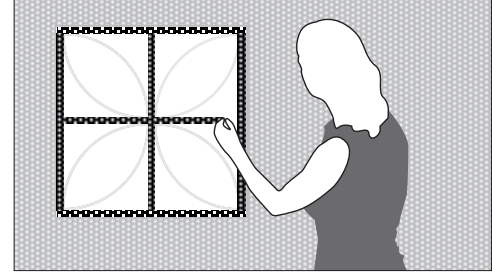


If choosing to install using the **Harmony Peel + Stick Tape**, apply the tape to the perimeter plus strips across the panel on the touchpoints. Each corner should be covered. Press tape firmly to the panel. Peel backing off and adhere with pressure.

3 PERMANENT ADHESIVE

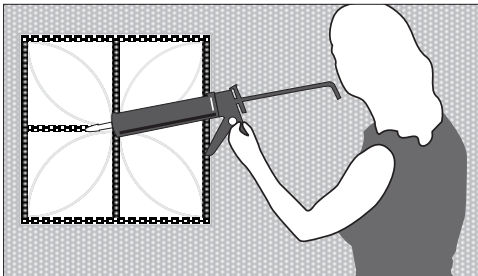

Installing with **FRP Adhesive or Construction Adhesive**, apply a thin bead of adhesive to the perimeter of the panel and smooth out with an adhesive spreader so adhesive doesn't seep out when pressed to the wall. Also apply a small amount on touch points in the center of the panel. Follow manufacturer's recommendations on dry times.

4 INSTALLATION

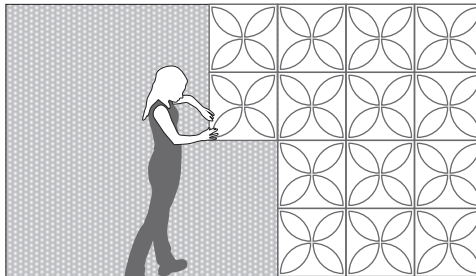


FINAL PRESSURE (Both Methods)

Once in place, secure using hands or a squeegee around the perimeter of the panel and other touchpoints to lock in place.

TIPS FOR MANUAL CUTTING PANELS

When cutting Harmony Felt manually we recommend using a sharp knife combined with a ruler for the best possible result. A utility knife or precision knife will be sufficient.

5 ENJOY

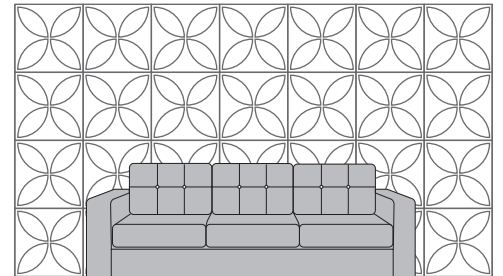

Now enjoy your transformed wall and acoustics.

inhabit®

inhabitliving.com hello@inhabitliving.com

©2005 - 2024 Inhabit Inc. All rights reserved. The Inhabit® name, Wall Flats® and the designs are registered trademarks of Inhabit Inc. Please be aware that Inhabit® products and designs are protected registered copyrights, patents & pending patents. Duplication of designs, creation of derivative works or production of our methods of fabrication is a violation of the Inhabit® intellectual property rights and will be duly pursued. Wall Flats® are protected under US design copyrights: VA 1-777-851, VA 1-777-862, VA 1-777-878, VA 1-777-829, VA 1-777-855, VA 1-777-874, VA 1-777-905, VA 1-777-892, VA 1-069-159. Descriptive or typographical errors are subject to correction. Inhabit accepts no responsibility for misuse of this product.