

wall flats™

FELT, SUPERMATTE + LUXE INSTALLATION INSTRUCTIONS

SIMPLE, MODERN, VERSATILE + GOOF-PROOF

TOOLS + SUPPLIES NEEDED

SURFACE PREP



PRIMER (SEMI-PERMANENT)

ADHESIVE



CONTACT CEMENT (PERMANENT)




TESA 4965 1/2" TAPE (SEMI-PERMANENT)

INSTALLATION



PRESSURE ROLLER

APPLY ADHESIVE

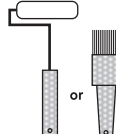


ROLLER/BRUSH


OTHER TOOLS



UTILITY KNIFE

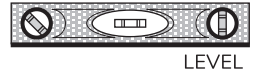


LEVEL



METAL RULER


CONTACT CEMENT OPTIONS - We recommend Dap Weldwood Low Odor Contact Cement or Wilsonart H2O Water-based Low VOC Nonflammable Contact Cement

1 PREPARATION

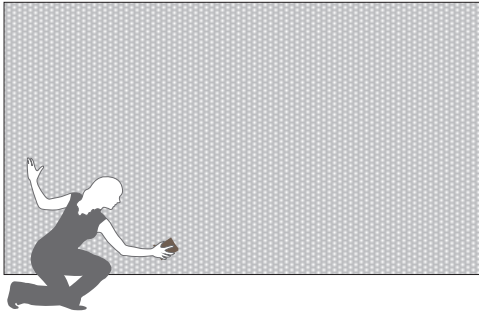

Made to install over a flat/smooth surface that is clean, dry and free of loose debris. If using the PSA tape for a semi-permanent install apply a strong bonding primer prior to adhering the panels. **Panels should acclimate for a minimum of 48 hours prior to installation.**


2 PLANNING

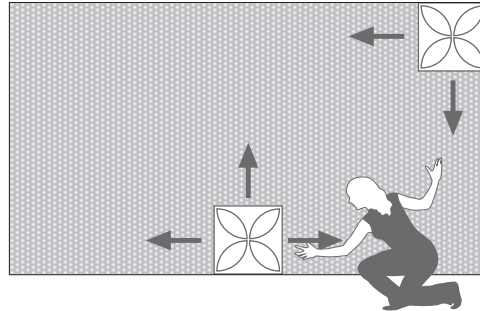

Will your install be wall-to-wall, a floating design, a strip of panels, etc? Plan before beginning and lay the panels out on the floor or sketch it out.


Use a level to mark straight lines on the wall. Allow cut panels to fall in more inconspicuous areas like corners and the bottom of a wall. If working from the center out, all panel edges may need to be cut. Plan your design well to ensure desired results are what you expect. **Remember, measure twice and cut once.**

3 SEMI-PERMANENT ADHESIVE

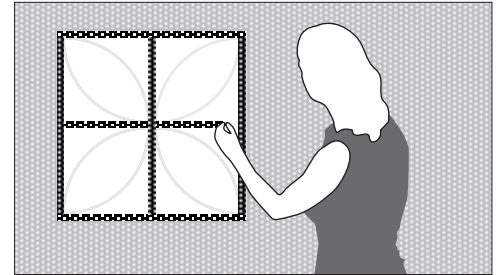


If choosing to install using Tesa 4965 1/2" Tape, apply the tape to the perimeter of each panel as well as 2 strips across the center. Each corner should be covered. Press firmly along each strip. Peel backing off and adhere to the surface.

3 PERMANENT ADHESIVE

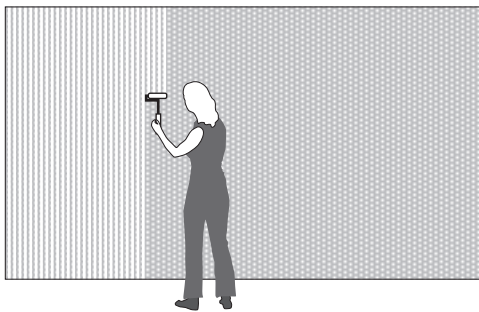

Installing with contact cement, follow manufacturer's recommendations on applying to both the wall and the panel and dry times prior to adhering to the wall. A second coat may be required.

4 INSTALLATION

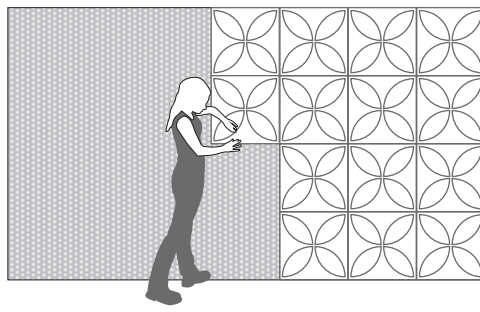


Use a **pressure roller**, around the perimeter of the panel and other touchpoints for optimal adhesion. Be sure to press the panels together to fill the seams between the panels.

TIPS FOR CUTTING PANELS

Wall Flats can be cut with a utility knife or power tools blades, bits, etc... designed for finishing work. Follow manufacturer's suggestions for equipment use and safety.

5 ENJOY

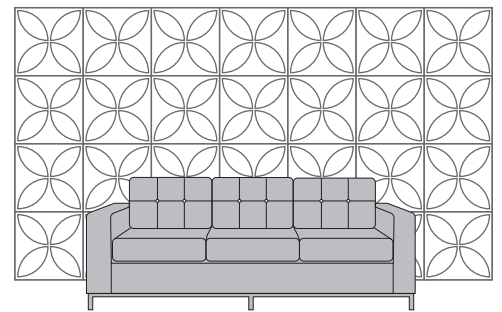

Now enjoy your transformed wall.

inhabit®

888-830-5072 inhabitoliving.com info@inhabitoliving.com

©2005 - 2020 Inhabit Inc. All rights reserved. The Inhabit® name, Wall Flats® and the designs are registered trademarks of Inhabit Inc. Please be aware that Inhabit® products and designs are protected registered copyrights, patents & pending patents. Duplication of designs, creation of derivative works or production of our methods of fabrication is a violation of the Inhabit® intellectual property rights and will be duly pursued. Wall Flats® are protected under US design copyrights: VA 1-777-851, VA 1-777-862, VA 1-777-878, VA 1-777-829, VA 1-777-855, VA 1-777-874, VA 1-777-905, VA 1-777-892, VA 1-069-159. Descriptive or typographical errors are subject to correction. Inhabit accepts no responsibility for misuse of this product.