

wall flats™

FELT, SUPERMATTE + LUXE INSTALLATION INSTRUCTIONS

SIMPLE, MODERN, VERSATILE + GOOF-PROOF

TOOLS + SUPPLIES NEEDED

SURFACE PREP



PRIMER/
SEALER
BONDING
PRIMER

ADHESIVE



CONTACT
ADHESIVE
(PERMANENT)




INHABIT PEEL +
STICK 1/2" TAPE
(SEMI-PERMANENT)

INSTALLATION



PRESSURE
ROLLER

APPLY ADHESIVE




ROLLER


OTHER TOOLS



UTILITY KNIFE



LEVEL




METAL RULER

We recommend 3M FastBond Contact Adhesive 30NF Neutral (Meets ASTM E84 Class A requirements) (Greenguard certified) or Dap Weldwood Low Odor Contact Cement

Note: The Peel and Stick method is not recommended for all Luxe & Supermatte patterns. Current & Facet can have a slight curl to the panel and do not work well with the tape.


1 PREPARATION

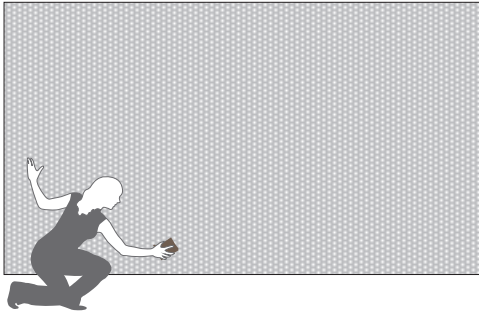

Install over primed drywall or plywood. Surface must be clean, smooth, dry, free of waxes and existing adhesive, dirt, dust, grease, oil, paint curing compound or sealers. Cannot be used over chemically cleaned substrates.

Panels should acclimate for a minimum of 48 hours prior to installation.


2 PLANNING

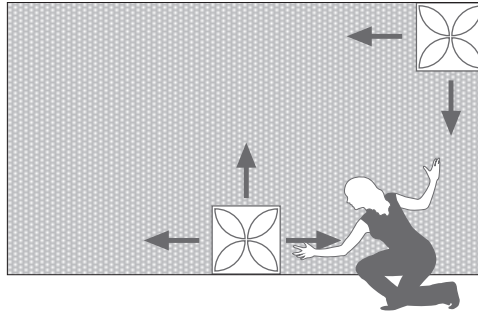

Will your install be wall-to-wall, a floating design, a strip of panels, etc? Plan before beginning and lay the panels out on the floor or sketch it out.


Use a level to mark straight lines on the wall. Allow cut panels to fall in more inconspicuous areas like corners and the bottom of a wall. If working from the center out, all panel edges may need to be cut. Plan your design well to ensure desired results are what you expect. **Remember, measure twice and cut once.**

3 SEMI-PERMANENT ADHESIVE

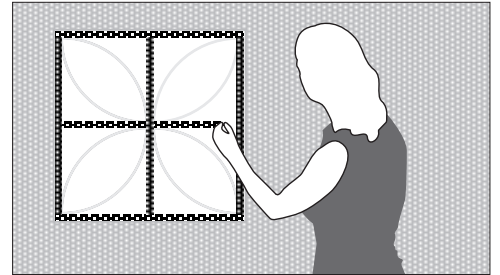

If choosing to install using Inhabit's Peel and Stick 1/2" Tape, apply the tape to the perimeter of each panel as well as strips across the panel on the touchpoint areas. Each corner should be covered. Press firmly along each strip. Peel backing off and adhere to the surface.

3 PERMANENT ADHESIVE

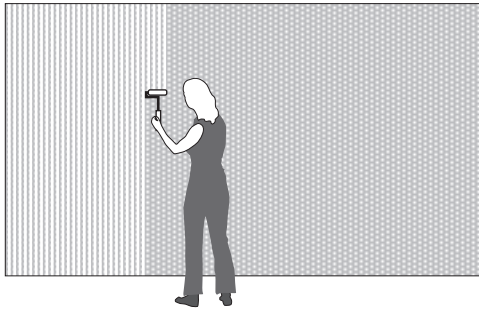


Installing with contact cement, follow manufacturer's recommendations on applying to both the wall and the panel and dry times prior to adhering to the wall. A second coat may be required.

TIPS FOR CUTTING PANELS

Wall Flats can be cut with power tools designed for finishing work (exp: 80 tooth blade for fine cutting or melamine cutting). Follow manufacturer's suggestions for equipment use and safety.


4 INSTALLATION

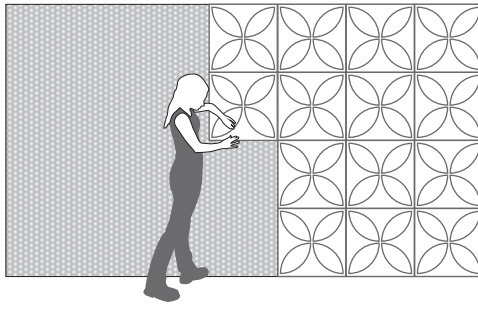

FINAL PRESSURE (Both Methods)

Once in place, secure using a **pressure roller** around the perimeter of the panel and other touchpoints to lock in place. When all the panels are installed, roll the entire flat surface to achieve a full bond. After rolled re-positioning is not possible.

5 ENJOY

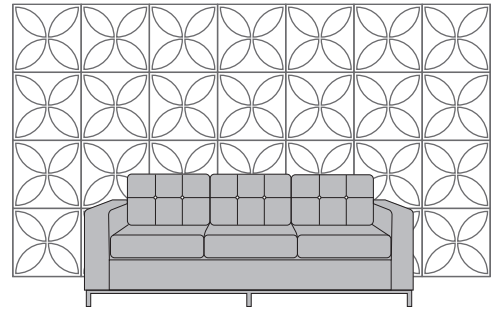

Now enjoy your transformed wall.

inhabit®

inhabitoliving.com hello@inhabitoliving.com

©2005 - 2020 Inhabit Inc. All rights reserved. The Inhabit® name, Wall Flats® and the designs are registered trademarks of Inhabit Inc. Please be aware that Inhabit® products and designs are protected registered copyrights, patents & pending patents. Duplication of designs, creation of derivative works or production of our methods of fabrication is a violation of the Inhabit® intellectual property rights and will be duly pursued. Wall Flats® are protected under US design copyrights: VA 1-777-851, VA 1-777-862, VA 1-777-878, VA 1-777-829, VA 1-777-855, VA 1-777-874, VA 1-777-905, VA 1-777-892, VA 1-069-159. Descriptive or typographical errors are subject to correction. Inhabit accepts no responsibility for misuse of this product.