


SCHREXKIT-ML

INSERT INSTRUCTIONS

FIELD INSTALLABLE REQUEST TO EXIT SWITCH FOR SCHLAGE L9000 SERIES MORTISE LOCKS. THE KIT'S EASY "DROP-IN" INSTALLATION ADDS A SIGNAL TO ALERT THE CONTROL PANEL THAT THE DOOR IS ABOUT TO BE OPENED BY SOMEONE EXITING FROM WITHIN THE SECURED AREA. THIS SWITCH IS SPDT (SINGLE PULL, DOUBLE THROW).

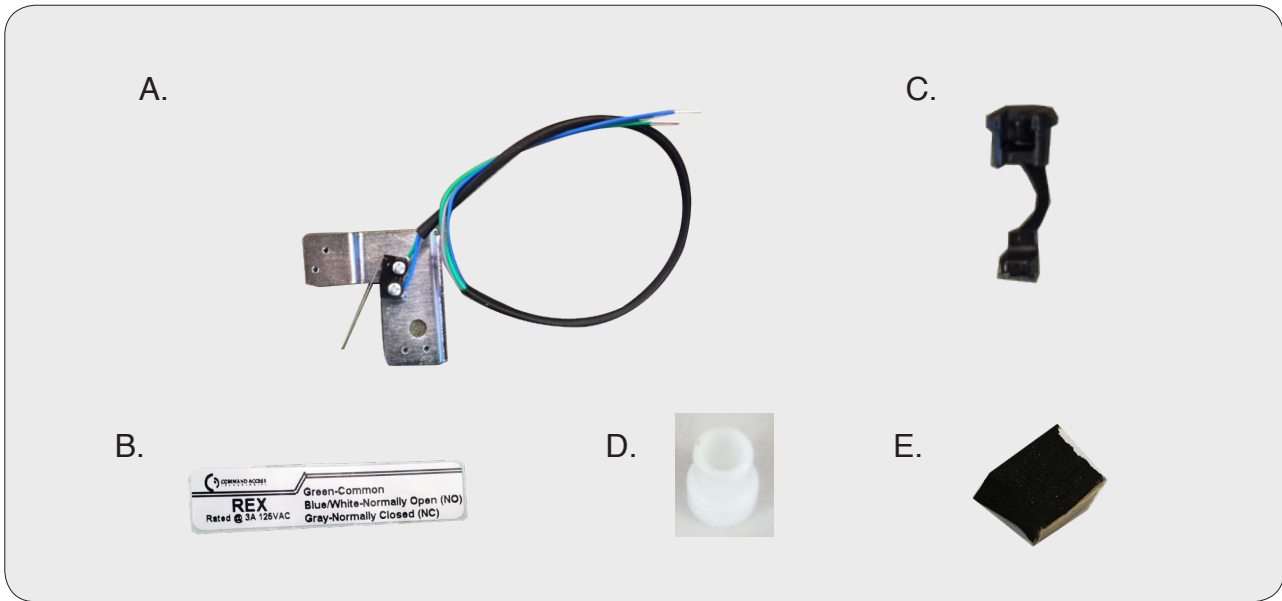

KIT INCLUDES

- A. 1 REX BRACKET
- B. 1 REX STICKER
- C. 1 STRAIN RELIEF (40243)
- D. 1 FIRE DOOR FUSE
- E. 1 FOAM PAD (40495)



TOOLS REQUIRED

- SCHLAGE L9000
- SCHLAGE L909X





INSTALLATION INSTRUCTIONS

A. REMOVE COVER PLATE (4 SCREWS).

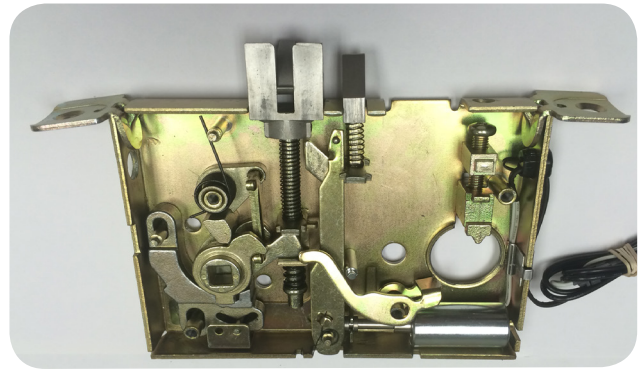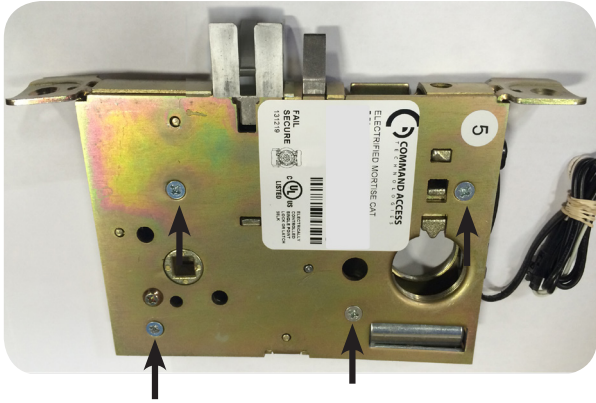



C. REMOVE THE FOLLOWING ITEMS:

D. FISH WIRES THROUGH THE BOTTOM HOLE IN THE LOCK BODY.

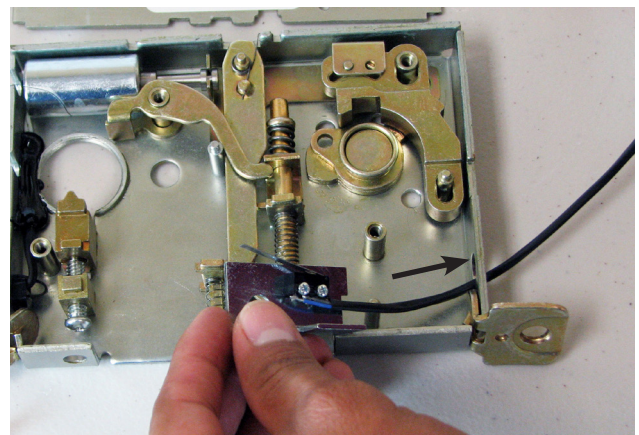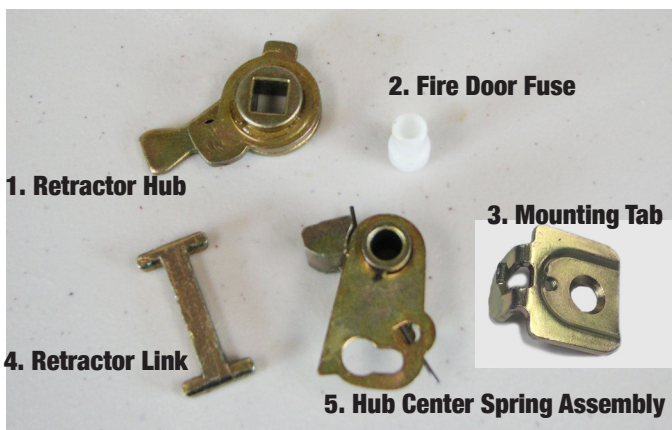


G. PLACE REX BRACKET OVER POST & REPLACE MOUNTING TAB (3) TO SECURE BRACKET.

G. REPLACE HUB CENTER SPRING ASSEMBLY (5). LINE UP & PLACE OVER POSTS SO (5) LIGHTLY RESTS ON SWITCH

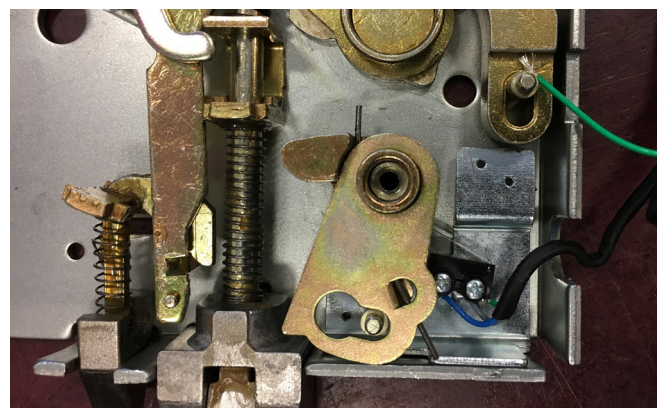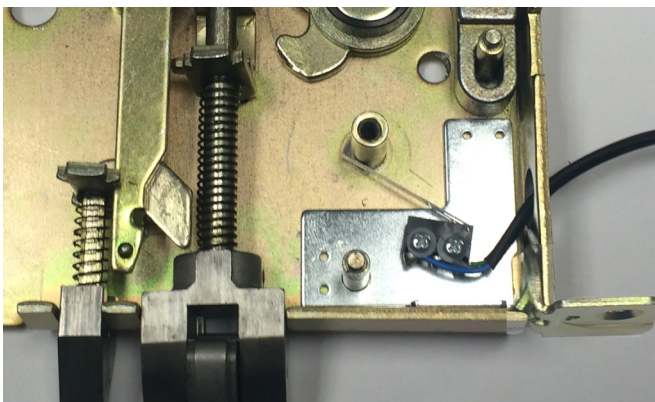


INSTALLATION INSTRUCTIONS

- G. COMBINE FIRE LINK & NEW FIRE DOOR FUSE (B) TOGETHER
LINE UP & PLACE OVER POSTS SO IT LIGHTLY REST ON SWITCH
ROTATE FIRE LINK BY PUSHING TAB CLOCKWISE

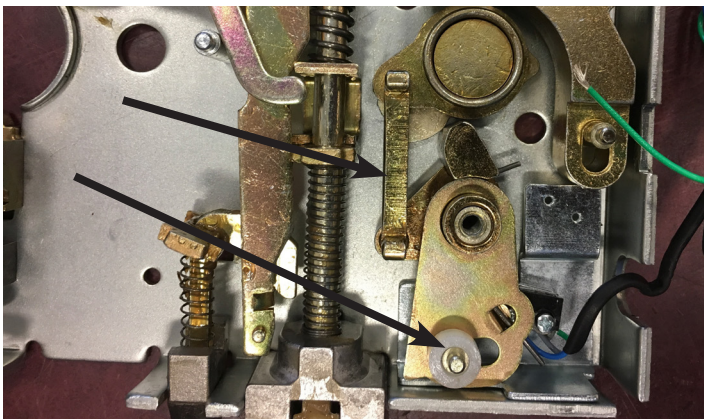

- H. ADD RETRACTOR HUB (1)

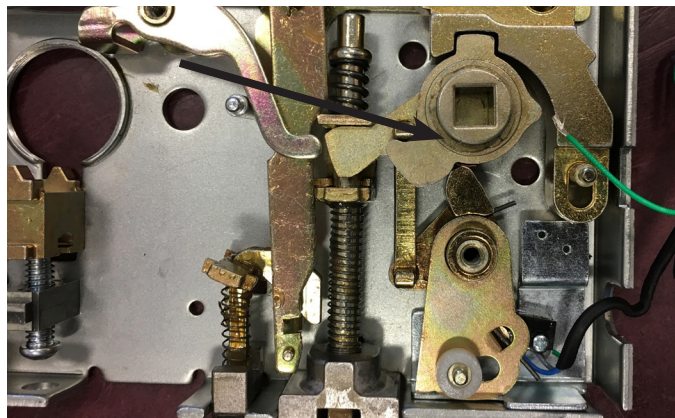

- G. REPLACE COVER. IF NEEDED PULL ON ANTI-PIC & PUSH LATCHBOLT
TO HELP CASE SLIP TOGETHER. TEST THAT LATCHBOLT & ANTI-PICK
FUNCTION



- G. RE-INSTALL COVER & TIGHTEN 4 SCREWS. PLEASE WIRING CODE
STICKER ON CASE.



- G. INSTALL STICKY SIDE OF FOAM INTO OPENING OF THE STRAIN RELIEF.



- G. PULL SLACK OUT OF THE SWITCH WIRES AND INSTALL STRAIN
RELIEF.

