



INSTALLATION INSTRUCTION FOR 3 HOURS FIRE RATING SF-SVRTBARF SERIES SURFACE VERTICAL ROD EXIT DEVICE.

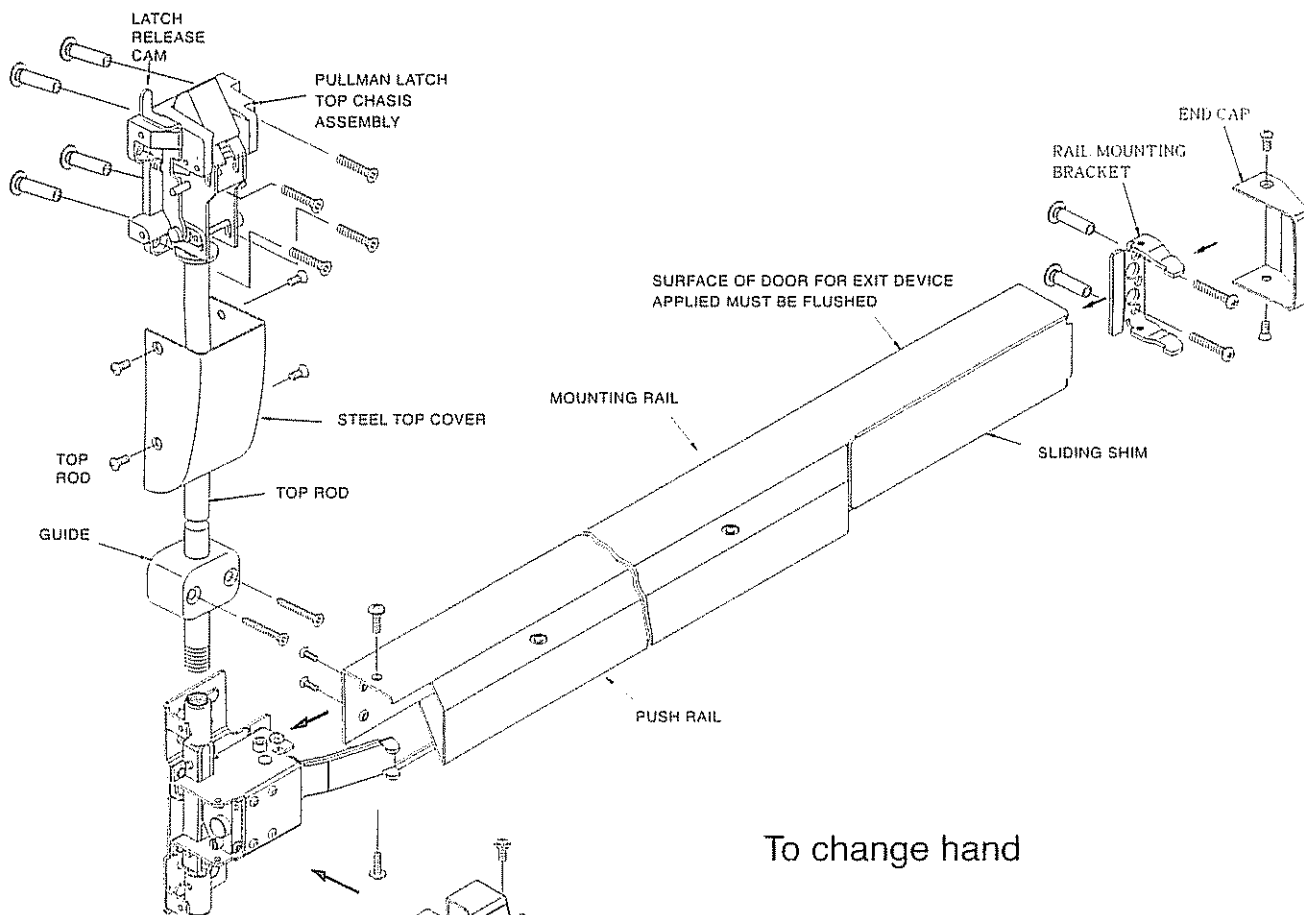

To change hand

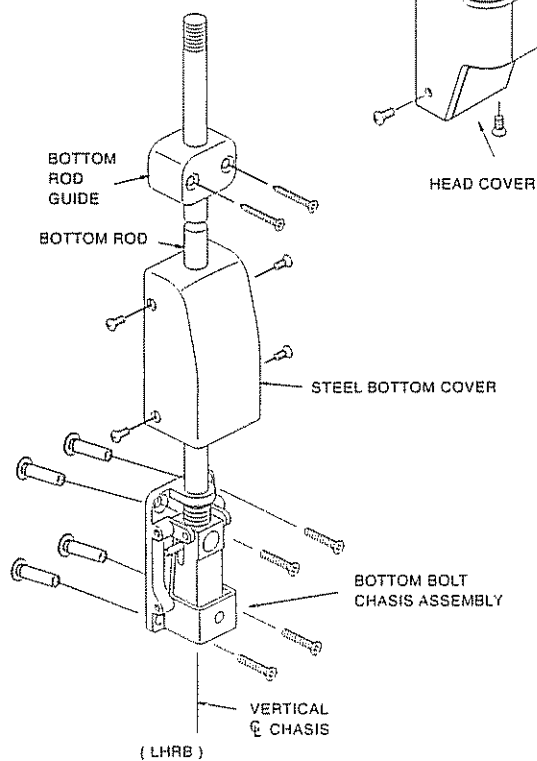


1.Factory pre-set RHR	2.Unfasten philip and flat head screw from the pre-set RHF
3.Fasten philip and flat head screws to the other end for LHR	4.Now already changed to LHR


1. MARK VERTICAL AND HORIZONTAL REFERENCE LINE ON DOOR.

DETERMINE BACKSET TO LOCATE VERICAL REFERENCE LINE

- 1 IF LOCK STILE IS 4 1/2" WIDE OR WIDER, BACKSET IS 2 3/4"
- 2 IF LOCK STILE IS LESS THAN 4 1/2" WIDE, BACKSET IS HALF OF THE EXPOSED WIDTH OF LOCK STILE

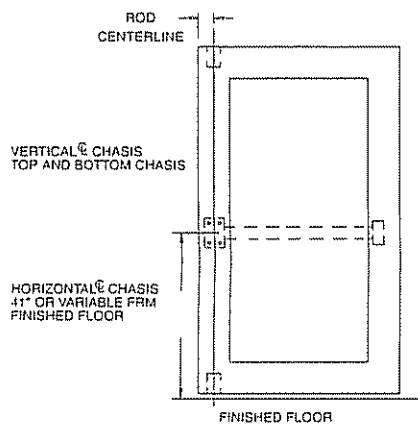


4. ATTACH TOP AND BOTTOM CHASIS

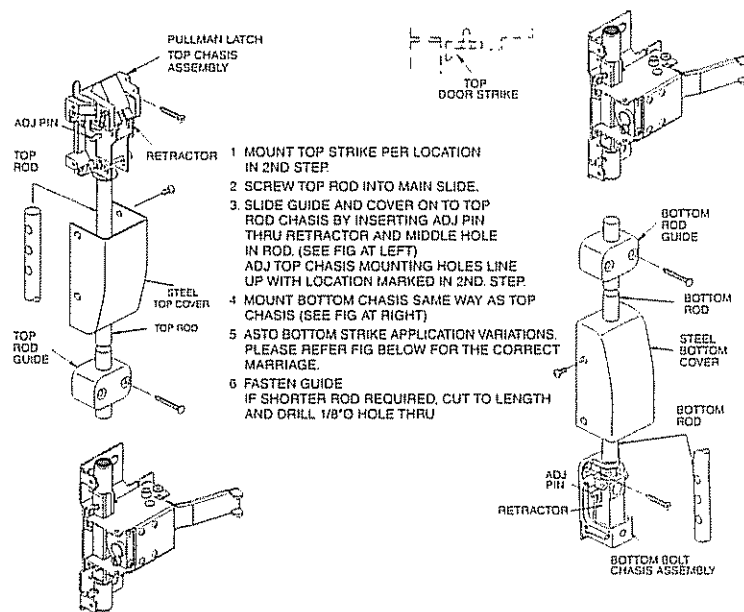


2. PREPARE DOOR

TAPE TEMPLATE ON INSIDE OF DOOR ALONG REFERENCE LINE SPOT AND DRILL HOLE

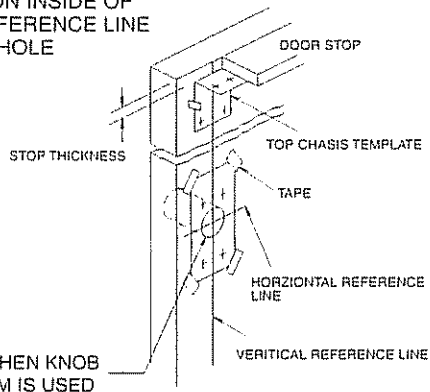


5. APPLY RAIL ASSEMBLE


- 1 CHECK THE SIZE OF DEVICE. IF CUTTING TO LENGTH IS REQUIRED
- 2 DETERMINE CUT OFF LENGTH "X" BY SUBTRACTING 1 3/4" FROM "Y" MARK CUT OFF POINT ON MOUNTING RAIL

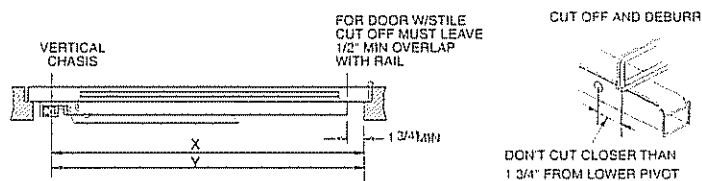

- 3 DREPRESS ARM INTO RAIL OPENING AND SLIDE RAIL ONTO CHASIS LEVEL RAIL AND FASSTEN CHASIS AND MOUNTING PLATE

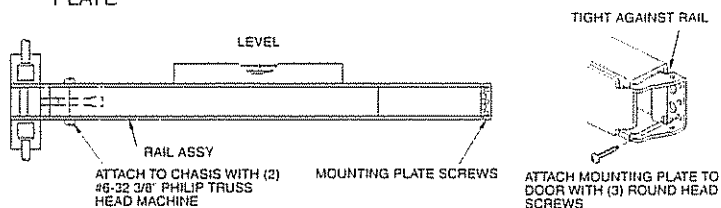


3. APPLY TRIM+CHASIS

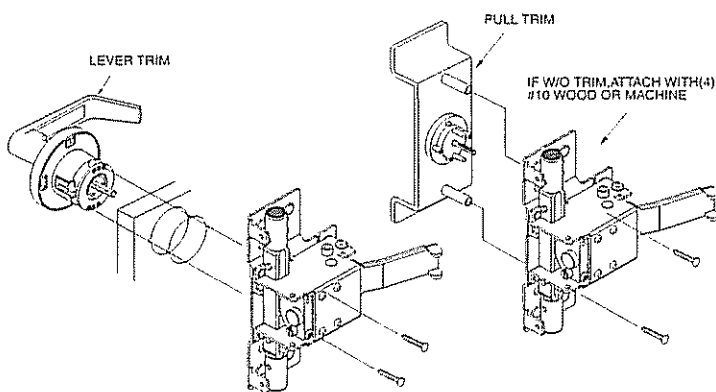


BEFORE INSTALLING DEVICE, PLEASE CHECK :

- 1 IF DOOR FITTED AND HUNG
- 2 SIZE OF EXIT DEVICE, FUNCTION AND DESIGN
 - 2 1 36" DOORS, CAN BE CUT TO FIT DOORS DOWN TO 30" WIDE
 - 2 2 48" DOORS, CAN BE CUT TO FIT DOORS DOWN TO 36" WIDE
 - 2 3 HAND OF DEVICE AGAIST APPLICATION




6. APPLY COVER

CHECK FINAL OPERATION OF DEVICE AND ADJUST THEN FASTEN COVERS

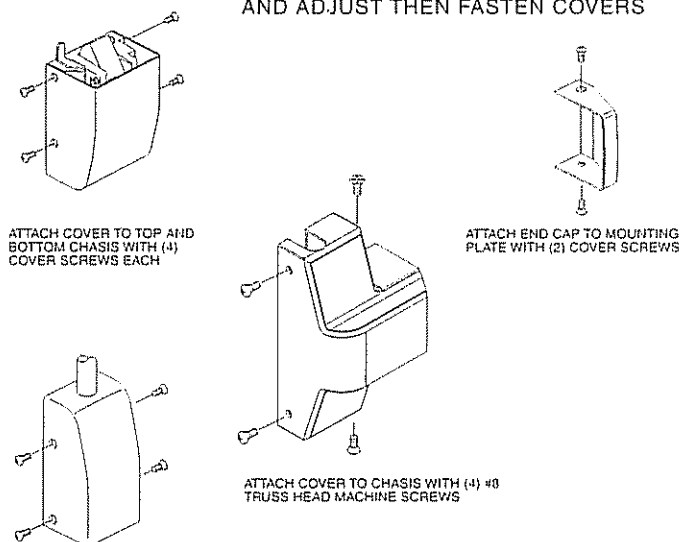

TEMPLATE

FOR EDTBAR AND SVRTBAR SERIES EXIT DEVICE
USING LEVER HANDLE TRIM
OR ON TRIMS

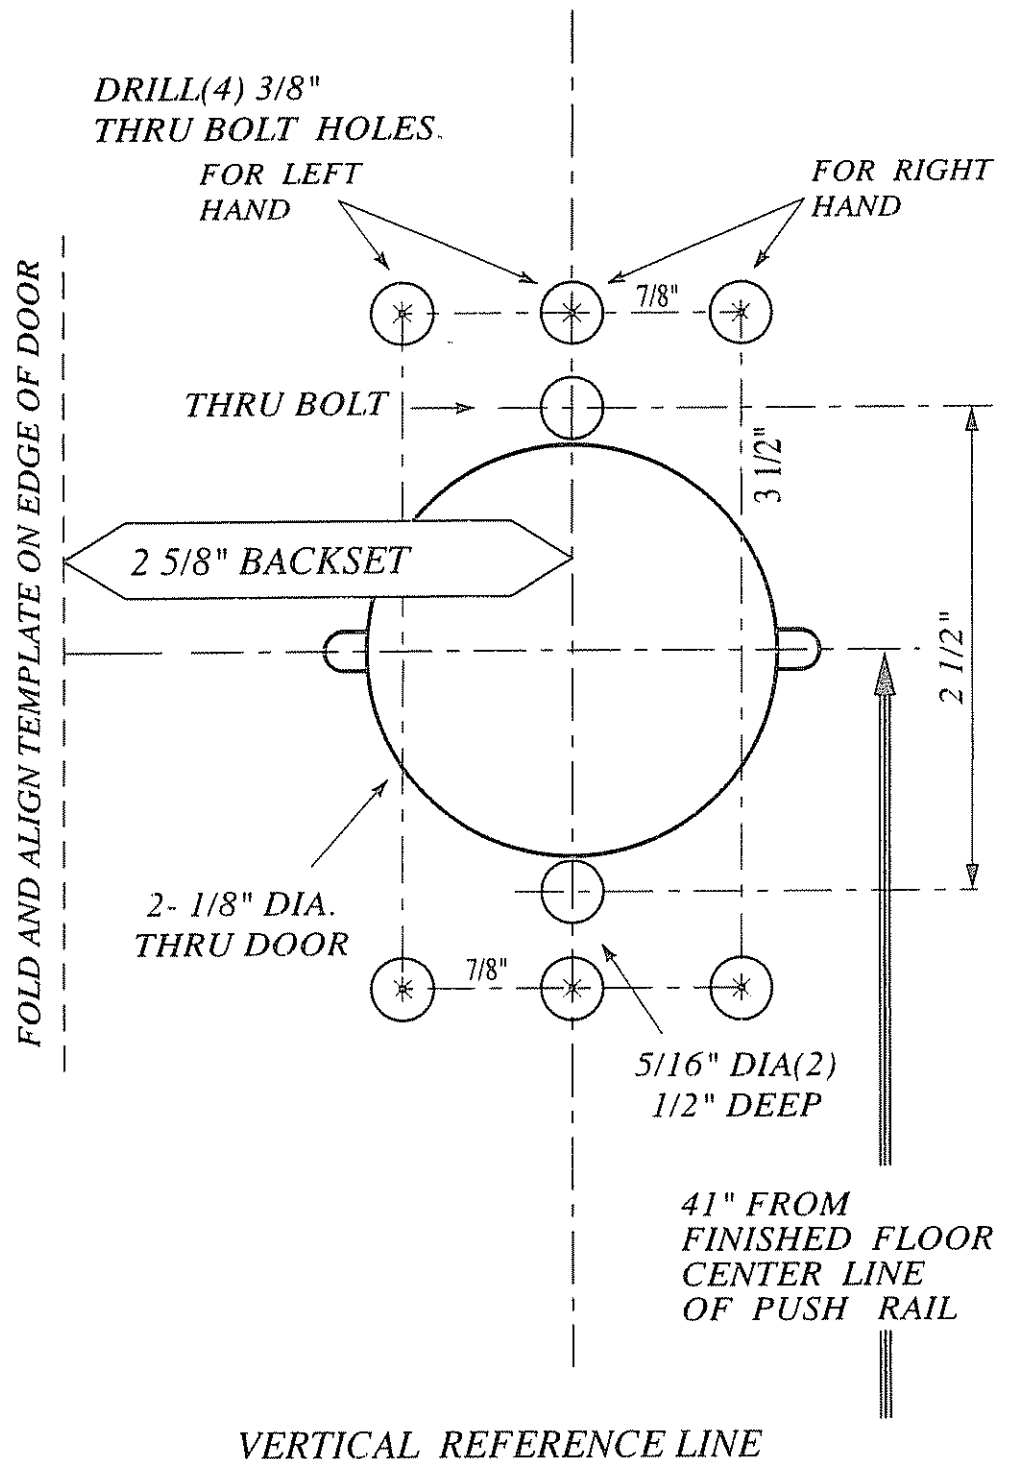


① FOR REFERENCE LINES REFER TO INSTRUCTION SHEET

FC-8000# PH 26A


TEMPLATE

FOR EDTBAR AND SVRTBAR SERIES EXIT DEVICE USING LEVER HANDLE TRIM

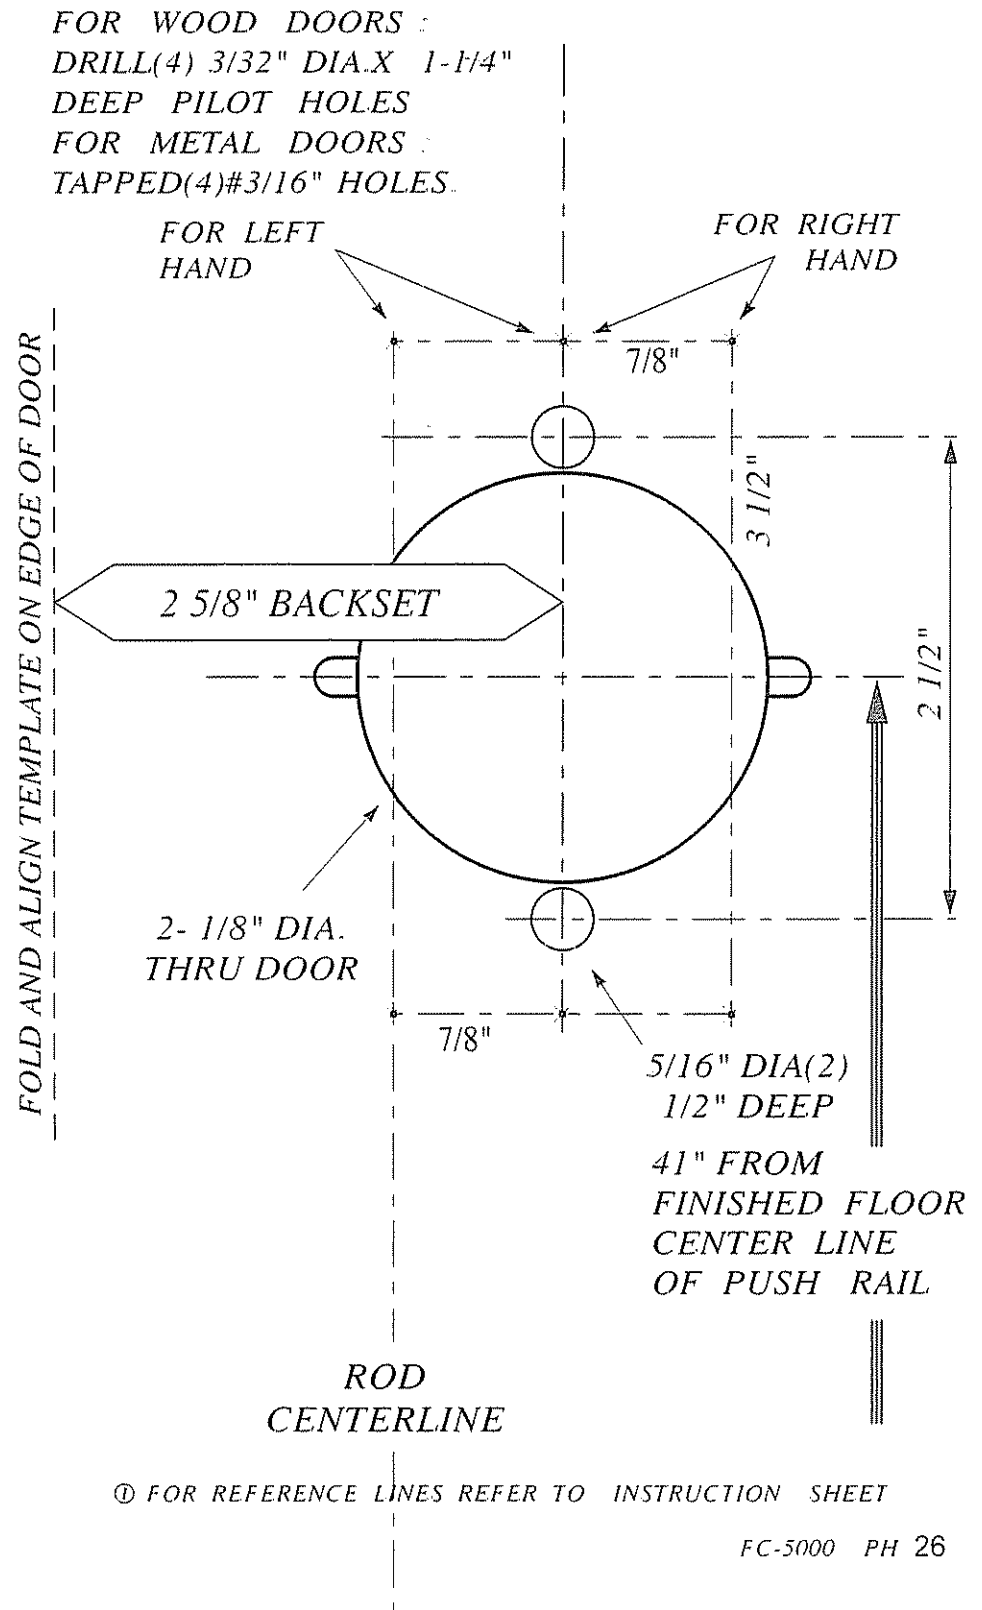


TEMPLATE

FOR EDTBAR AND SVRTBAR SERIES EXIT DEVICE USING LEVER HANDLE TRIM

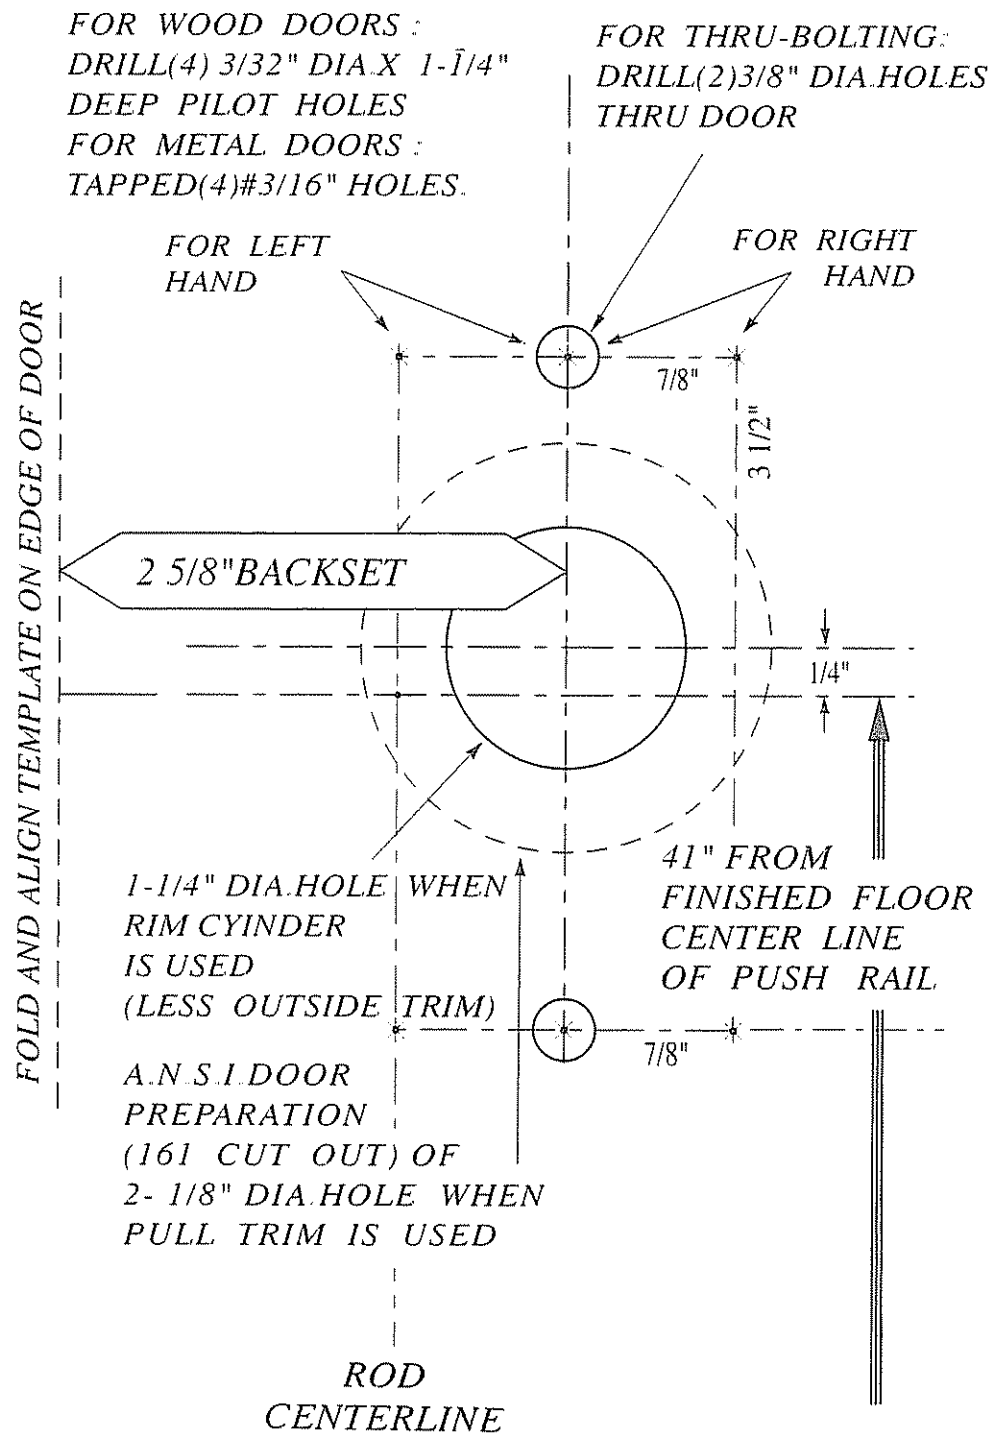

① FOR REFERENCE LINES REFER TO INSTRUCTION SHEET

TEMPLATE #3

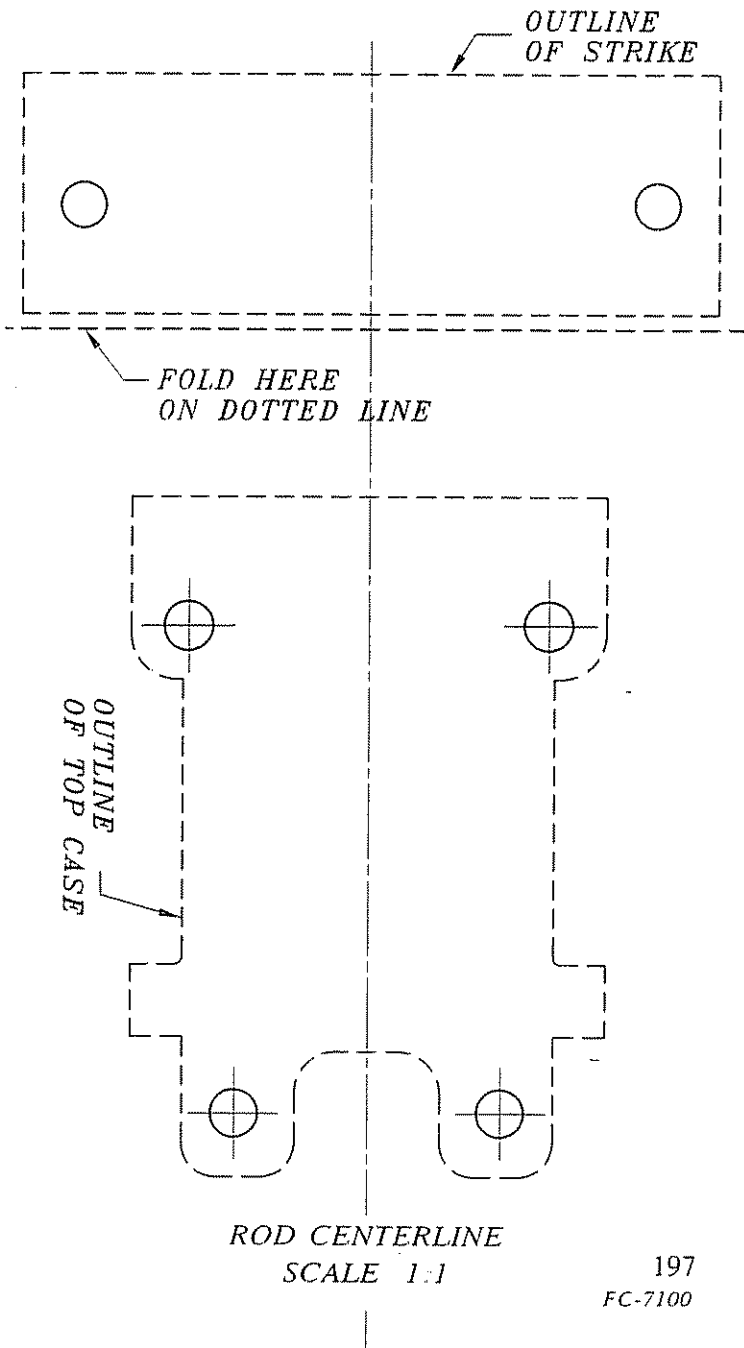

TEMPLATE #4
VERTICAL
CENTERLINE

