




VDREEKIT-ET

INSERT INSTRUCTIONS

FIELD INSTALLABLE VON DUPRIN 966L SERIES

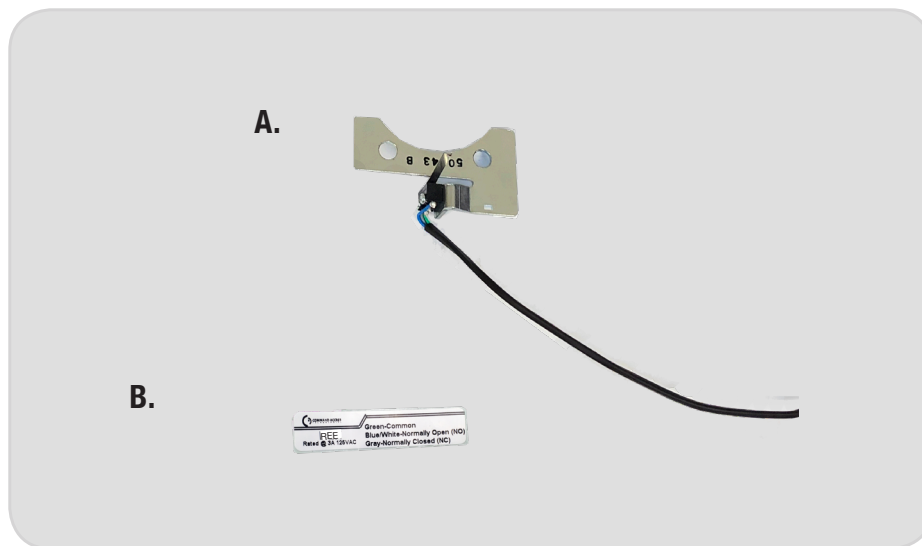

KIT INCLUDES

- A. 50843 REE Bracket
- B. REE Color code sticker

TOOLS REQUIRED

Cordless Drill or Phillips Screwdriver
#8 Nut Driver


SPECIFICATIONS

- Single Pole - Double Throw (SPDT)
- Rating: .5A @24VAC
- Configuration: Green - Common (C)
Blue - Normally Open (NO)
Gray - Normally Closed (NC)


INSTALLATION INSTRUCTIONS





1. REMOVE THE (2) BOTTOM MOUNTING POSTS USING A #8 NUT DRIVER.

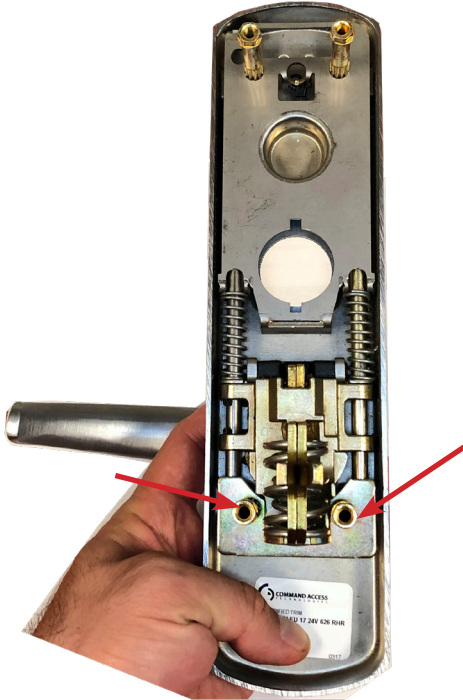

2. REMOVE MOUNTING PLATE & DISCARD. LINE UP REE BRACKETING WITH MOUNTING POST HOLES.

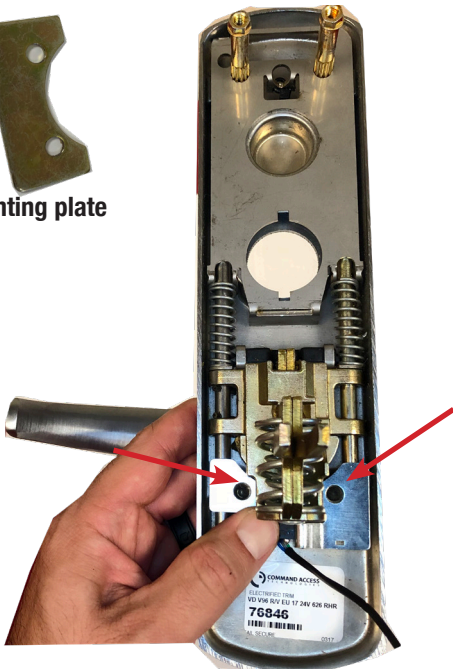

3. CONFIRM REE SWITCH IS FACING TOWARDS LIFTING ARM AND MAKING CONTACT WITH THE BOTTOM. NEXT, RE-INSTALL (2) MOUNTING POSTS.

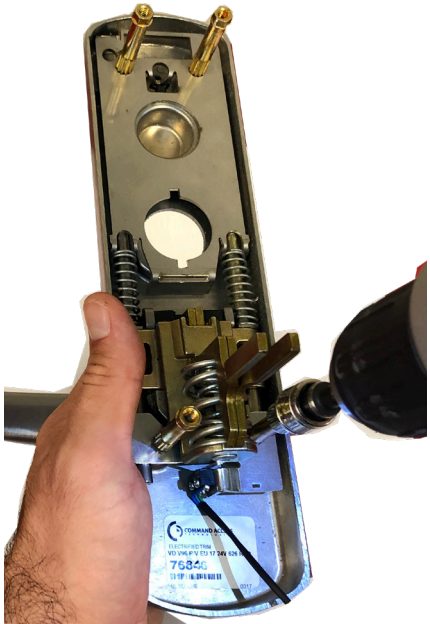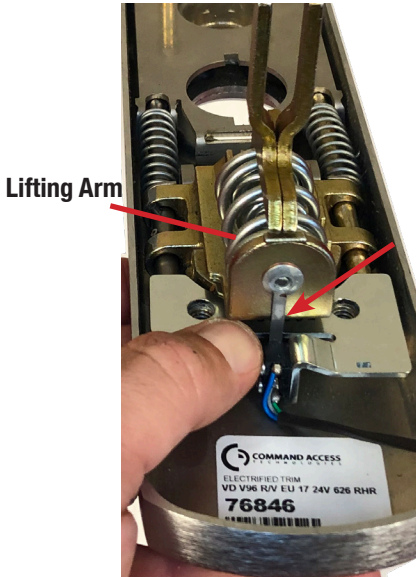

4. TEST SWITCH BY ACTIVATING LEVER UP & DOWN MAKING SURE THE SWITCH CHANGES STATES.