

# **Contents:**

Quick-Start Reference
Detailed Step-by-Step Setup Guide
Rain Fly Setup Guide
Tent Packing Guide

# **Quick-Start Reference:**

Stake out tent, assemble frame and attach to corners of tent.



Attach tent to frame using corresponding fasteners.



Attach rain fly to tent using corresponding fasteners and stake out doors.



# **Detailed Step-by-Step Setup Guide:**

### Step 1:

Unpack contents of bag and spread out tent on a flat and suitable ground surface.



#### Step 2:

Use supplied stakes to evenly tension floor of tent from each corner, as shown:

(If ground is wet or rocky, place tent on top of included groundsheet)



### Step 3:

Remove aluminum tent frame from pouch and assemble.



### Step 4:

Insert each end of the tent frame into the aluminum pole-captures found at each corner of the tent.





Your tent should now appear as shown:

# Step 5:

Fasten the top two tent clips to the tent frame, just outside of each upper pole.





(Photo of top tent clip properly fastened to tent frame)

### Step 6:

Insert each end of the upper frame poles into the aluminum pole captures located above each door.



(Photo of upper frame poles properly fastened to aluminum pole captures)



Your tent should now appear as shown:



### Step 7:

Fasten the three remaining tent clips on each side of the tent to the tent frame as pictured:



Your ADV Tent is now properly set up and suitable for use in warm and dry weather.



(Continue to next page for instructions on securing rain fly to tent)

# Step 8:

Loosely place rain fly over tent, oriented as shown:




# Step 9:

Locate aluminum pole capture found at each corner of the tent.



### **Step 10:**

Secure each
aluminum pole
capture to its
corresponding
pole-end,
underneath the
aluminum pole
capture previously
secured, as shown:

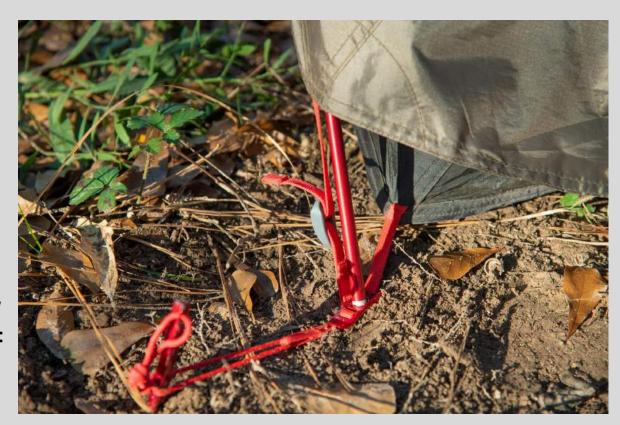


### **Step 11:**

Unzip both sides of each door and locate aluminum pole capture found at top of each door zipper.



# **Step 12:**

Secure each aluminum pole capture to its corresponding pole-end.

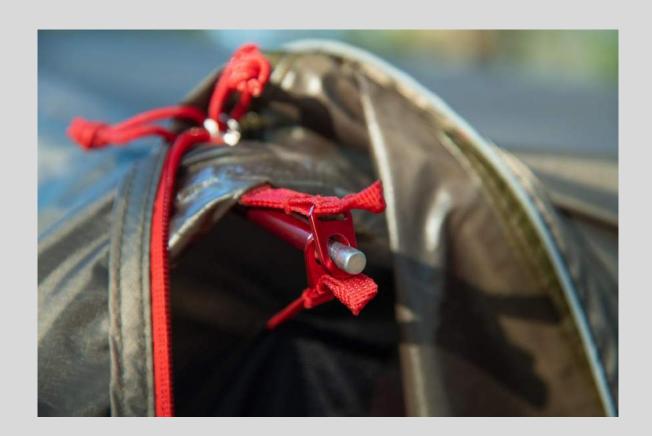

# Step 13:

Zip up tent doors and use supplied stakes to secure the tent doors as shown:





(Continue to next page for instructions on packing tent)

### Step 1:

Detach and remove rain fly, set aside. Detach tent from frame in the reverse order that it was attached. Remove tent frame, neatly collapse and store in designated bag.



#### Step 2:

Remove stakes from ground and store in designated pocket, then fold tent by 1/3, as shown:



### Step 3:

Fold tent again by 1/3, then place groundsheet bag and frame/stake bag on one end of tent as shown:

(Lengh of frame/stake bag should be roughly equal to width of folded tent)



### Step 4:

Roll the folded tent tightly around the frame/stake bag and groundsheet bag, so that it appears as shown:



# Step 5:

Place rain fly on ground surface and fold in half along it's longest axis, as shown:



# Step 6:

Fold rain fly in half once more along its longest axis, as shown:



# Step 7:

Fold rain fly in half a final time along its longest axis, as shown:



# Step 8:

Fold rain fly in half along its shortest axis and place rolled-up tent on wide end of rain fly, as shown:



#### Step 9:

Roll tent tightly into rain fly. The entire tent roll should now fit easily back into provided dry bag.



### **Step 10:**

Fold roll-top
enclosure of
dry bag 3 time
and clip to
secure.
Your Lone
Rider ADV Tent
is now properly
packed and
ready for
transport.

