


BRAINWAVZ[®]

EARPADS FOR BOSE QC45 QUICK INSTALL GUIDE


Remove Old Pads

- 1** Grip the earpad firmly between thumb and fingers.

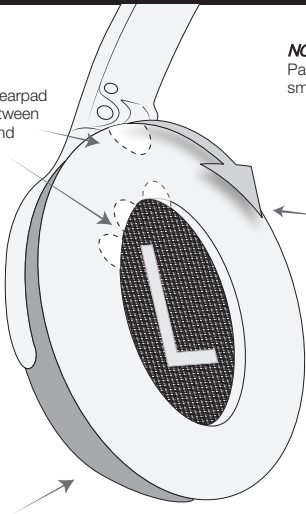

NOTE


Pads are secured via small built in tabs

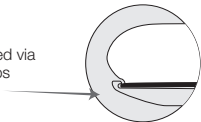

- 2** Pull the earpads in a forward and downward motion towards the bottom.

You may hear multiple “clicks” as the pad releases from the internal tab system.



- 3** Remove the Scrim (A) from the earcup (B) This is held on with a small amount of tape and will come free easily. Clean away and old glue residue (C)

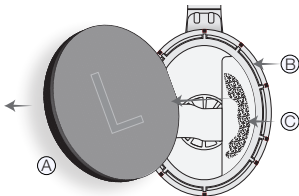

NOTE

Hold the headphones steady during the removal procedure.

Install Replacement Scrim (Dust Protection)

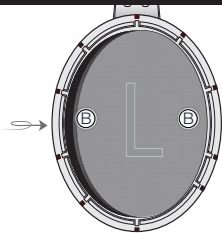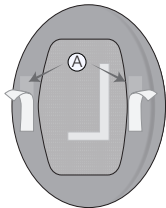

NOTE:


Select the correct Scrim for each side of the headphones.

- 4 Peel the adhesive backing paper (A) from the 2 small pieces of tape.
- 5 Place the Scrim into the centre of the earcup. Lightly apply pressure on the two tape sections (B).

Install Replacement Earpad

NOTE: There is a rigid retaining ring on the rear of the earpad. This is used to secure the pads into the tabs on the earcup.

- 6 Place the earpad onto the earcup, there is no particular orientation.

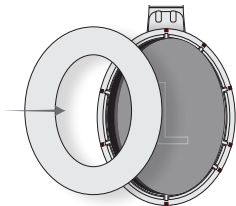

- 7 Push the edges of the earpad retaining ring firmly into each one of the tabs.

Ensure all tabs are correctly inserted, some may take a little more force than others.

