

FITTING GUIDE LAPTOP & DEVICE MOUNTS

Safety Guidelines

- ❗ Screws are highly recommended when mounting laptops and other heavy or fragile items.
- When mounting onto hollow/cavity furniture we recommend using 3M™ VHB™ tape and screws for extra security.
- Before screwing the brackets into place ensure your chosen surface is solid and a minimum of 17 mm thick.
- Take care when removing 3M™ VHB™ tape from any surface as it may cause damage.
- Always use the screw caps provided - DO NOT over-tighten screws.



Installation Guide


In case of any problems please contact us by email:

help@yourbrainwavz.com




3M™ VHB™ Tape Mounting Guide - use for smaller and lighter devices only - max weight 1.5 kg

For illustration only - your hanger may differ from one shown

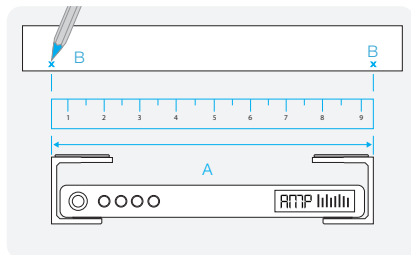


Place the brackets and your device on a flat surface and measure the total width (A). Now mark these measurements on your prepared surface. (B)

Peel off the red backing paper (A) and carefully press the two side brackets firmly into place.

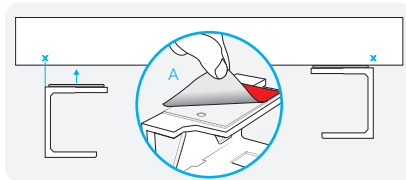


To ensure a more secure bond has been achieved, do not use your new hanger for at least 24 hours after installation or the hanger may fall down. ❗ **Bond strength at 20 minutes is 50%, 24 hours is 90% and 72 hours is 100%.**

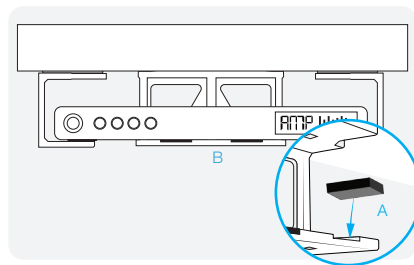


Stick protective foam pads into the cut-out sections on the hanger (A) Stick the third bracket in place to act as a backstop, and protect your device from sliding too far back (B).

Screws Mounting Guide - Use this method for laptops and heavier items


For illustration only - your hanger may differ from one shown

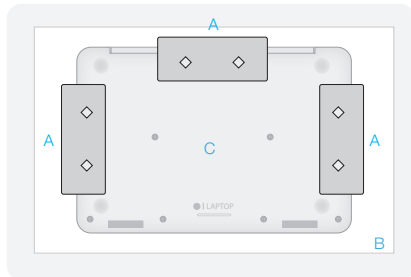


Create a mounting template by arranging the three hanger sections (A) upside down on a large piece of paper (B), along with your chosen device (C).

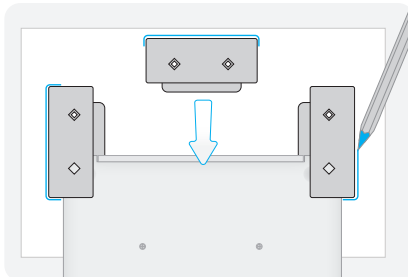


With a pencil draw initial lines around each of the hanger sections, then remove the laptop / device

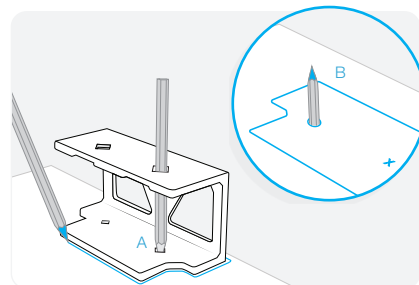

Draw around the rest of each hanger, and mark all screw holes (A). With the sharp pencil poke holes in the paper where you marked the location of the 6 screws (B).

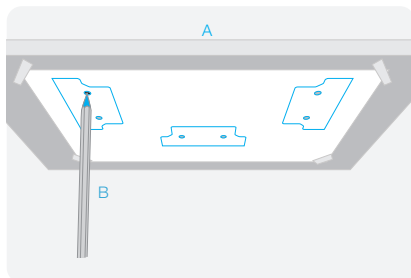

Stick the paper onto the underside of the desk /shelf (A) and use the pencil to mark the locations of the 6 screw holes onto the surface (B).

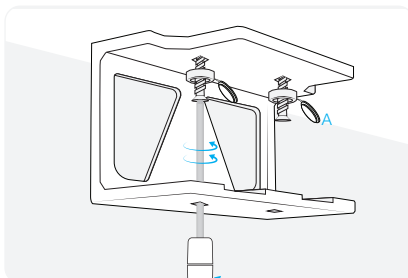

Screw each section into place, make sure to include the decorative screws caps (A). **!** For an extra strong fit, use both screws and 3M™ VHB™ tape.



Close the screw caps (A) and stick protective foam pads into the cut-out sections on the hanger (B), hanger is now ready for use.