

BRAINWAVZ[®]

HEADBAND PAD FOR BOSE


QC25 | QC35 | QC35II | QC35II GAMING

QUICK INSTALLATION GUIDE


Remove Old Headband Pad

TOOLS REQUIRED (Not supplied) Scissors, small 1.5mm cross-head precision screwdriver

- 1 Use the screwdriver to remove the retaining clips (A) from both sides of the headset
- 2 Use the scissors to carefully cut away the old pad, and remove the old foam.

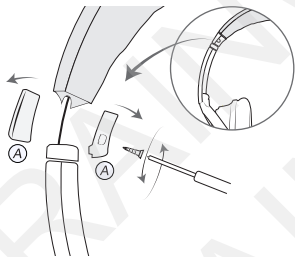


- ! NOTE: Keep clips and screws safe, and remember their orientation

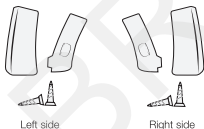


- ! NOTE: Be careful not to cut any wires that run underneath the padding

Install Replacement Pad


- 3** Place the pad on the underside of the headband. Ensure the loop side of the Velcro (soft) **(A)** is to the front

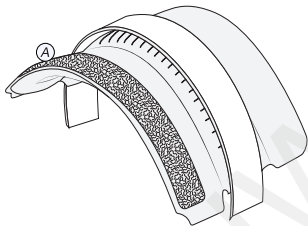


- 4** Fold over the rear flap onto the headband, the hook side of the Velcro (hard) **(B)** should now be pointing up

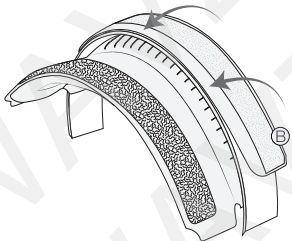


- 5** Fold over the front flap, and pull it tight to join the two Velcro sections together

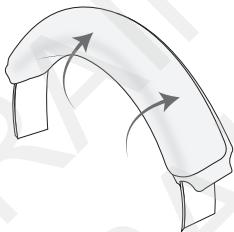

- 6** Replace the retaining clips, ensuring that the outer section **(A)** slots perfectly into the holes on the headband **(B)**. Ensure end flap is neatly inside the clamp area **(C)**

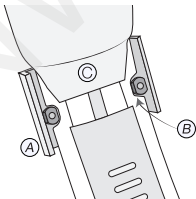

- 7** Screw the two parts of the clip together, repeat for the other side.

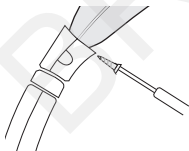

Congratulations, the installation is complete, enjoy your new comfy headset

Need some new earpads to really bring your headset back to life? Scan the QR code for our full Bose pads range

