


BRAINWAVZ[®]

EARPADS FOR BEATS SOLO QUICK INSTALL GUIDE

Remove Old Pads

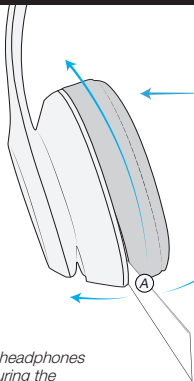


NOTE: Pads are secured via strong adhesive tape.

1 Gently insert a flat, blunt tool between the earpad and headphone body (A)

2 Carefully twist your tool back and forth until the pad starts to break loose, repeat around the pad until it comes free.

NOTE
Hold the headphones steady during the removal procedure.

(Use a blunt knife, metal ruler or credit card as a removal tool)



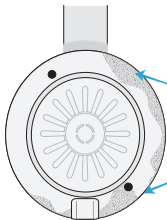


3 Once the pad is free remove any excess sticky tape and residue from the headphone cups and clean thoroughly.

Install Replacement Pads


NOTE:

Please ensure you select the correct pad for each side of the headphones.

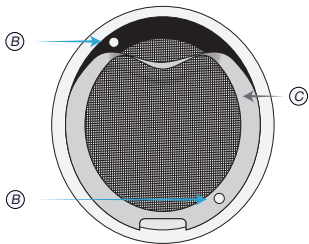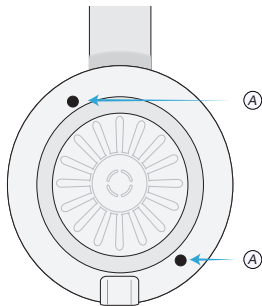


- 4 Locate the 2 pegs on the cup (A) and the 2 corresponding holes on the earpad (B)

- 5 Peel off the adhesive backing paper (C)

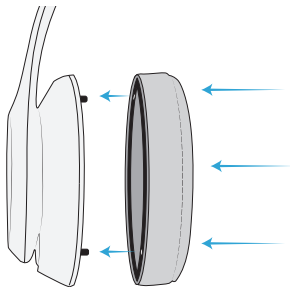

- 6 Align pegs and holes and carefully push earpads firmly into place.

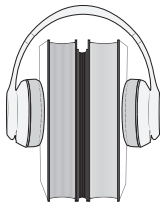

- 7 For best results apply constant pressure on pads for up to 12 hours

SUGGESTION

Place headphones across a set of books.