# **BRAINWAVZ®**

## **EARPADS FOR BOSE NC700**

#### **QUICK INSTALL GUIDE**





Pads are secured via 6




- hand
- With your other hand, grip the earpad and pull away from the head unit (B)

You will hear several clicks as the pad releases from the clips

Remove the Scrim (C) from the earcup (D) This is held on with a small amount of tape and will come free easily. Clean away any old glue residue (E) Do not remove part (F)



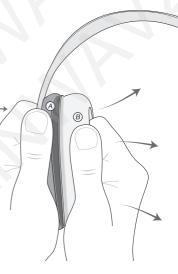

### Install Replacement Scrim (Dust Protection)







#### NOTE:

Select the correct Scrim for each side of the headphones.

Peel the adhesive backing paper (A) from all the pieces of tape.

Place the Scrim into the centre of the earcup.
Lightly apply pressure on the tape sections (B).

#### Install Replacement Earpad

**NOTE:** There is a rigid retaining ring on the rear of the earpad with six small tabs, these line up with corresponding holes in the earcup.

6 Place the earpad onto the earcup, there is no particular orientation, make sure to align the tabs (A) with the holes (B)





Push firmly on each of the six tabs locations, ensuring each one clicks into place.