


BRAINWAVZ[®]

EARPADS FOR SONY XB910N


QUICK INSTALLATION GUIDE

Remove Old Pads

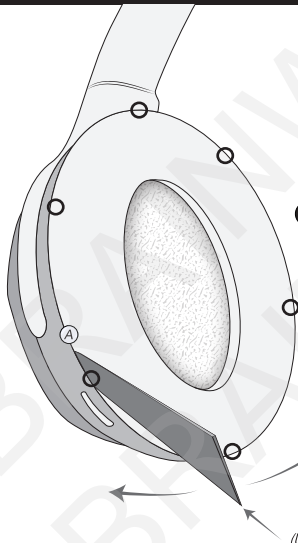

NOTE


Pads are secured via 6 click-in tabs

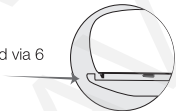

- 1 Gently insert a flat, blunt tool between the earpad and headphone body (A)
- 2 Carefully twist your tool back and forth until the pad starts to break loose, repeat around the pad until it comes free.

(Use a blunt knife, metal ruler or credit card as a removal tool)


Get To Know The Earpads

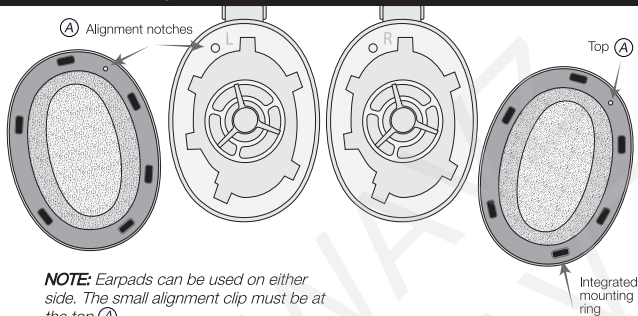

NOTE: Earpads can be used on either side. The small alignment clip must be at the top (A)

Install Replacement Earpad

- 3 Place the earpad onto the earcup - ensure correct orientation

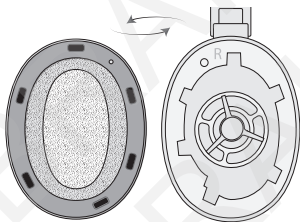

- 4 Push down on the earpad firmly in all 6 locations - a small click may be heard when in place.

Ensure all tabs are correctly inserted, some may take a little more force than others.

