

BRAINWAVZ[®]



EARPADS FOR SENNHEISER HEADPHONES

HD650 | HD600 | HD660S | MASSDROP HD6XX | MASSDROP HD58X | HD535 | HD525 | HD545

QUICK INSTALLATION GUIDE


Remove Old Pads

- 1 Hold the headphones firmly with one hand (A)
- 2 With you other and, grip the earpad and pull away from the head unit (B).
- 3 Pull out and discard the old foam pad (B) from inside the earcup.

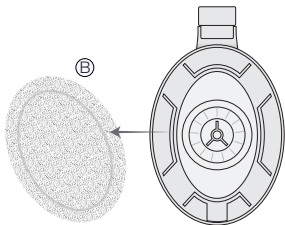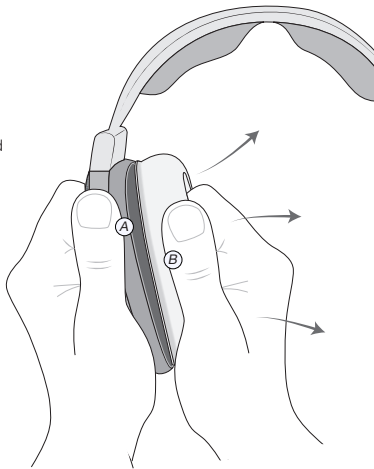


All images in this guide are for illustration purposes only.

Insert New Foam Pad

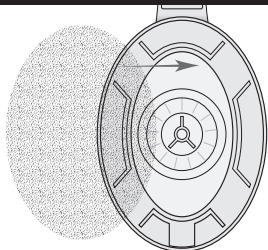

- 4 Place the fresh foam into the earcup before installing your new pads.


Get To Know The Earpads

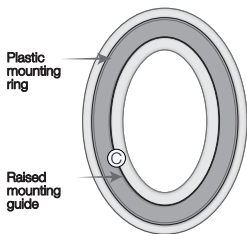

NOTE: The earpads can be installed any way up, and on either side.

Install Replacement Earpad

- 5 Offer the earpad up to the head unit, flip it over and position it correctly. Make sure not to knock the foam out of position.

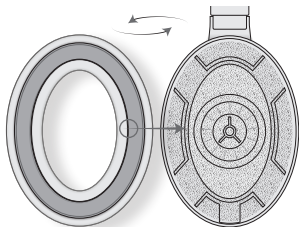

- 6 Push down on the inner and outer edges of the pad to clip it firmly into place.

