

# BRAINWAVZ<sup>®</sup>

## EARPADS FOR SONY WH-1000XM4 QUICK INSTALLATION GUIDE

### Remove Old Pads


#### NOTE

Pads are secured via 6  
click-in tabs 




- 1** Gently insert a flat, blunt tool between the earpad and headphone body 
- 2** Carefully twist your tool back and forth until the pad starts to break loose, repeat around the pad until it comes free.

 (Use a blunt knife, metal ruler or credit card as a removal tool)

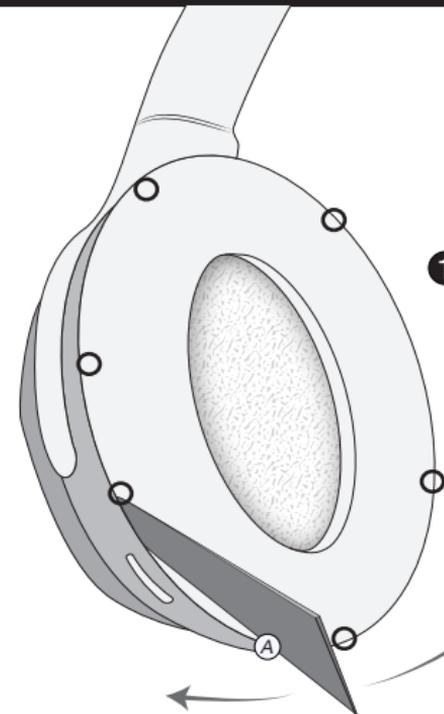


- 3** At this point you may like to remove the foam inserts  and clean them before installing your new pads.

(Replacement foam NOT included)

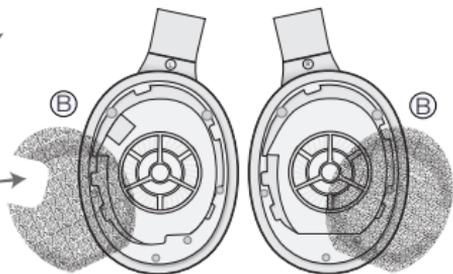

## Insert Foam Pad


## Get To Know The Earpads

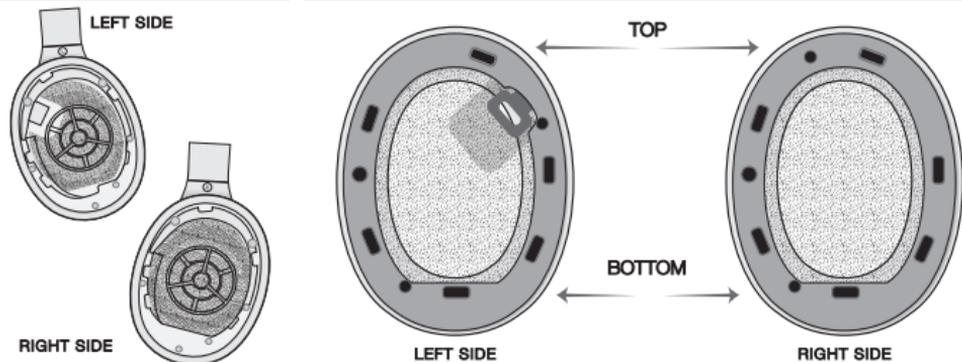


- 4** Remember to re-insert the foam before installing the new pads.
- 5** *There is a specific pad for left and right, pads also must be in the right orientation, as shown above.*

## Install Replacement Earpad

- 6** Place the earpad onto the earcup - ensure correct orientation.

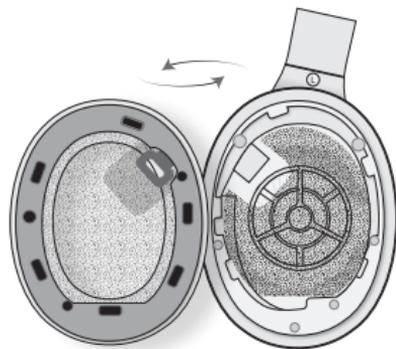

- 7** Push down on the earpad firmly in all 6 locations - a small click may be heard when in place.

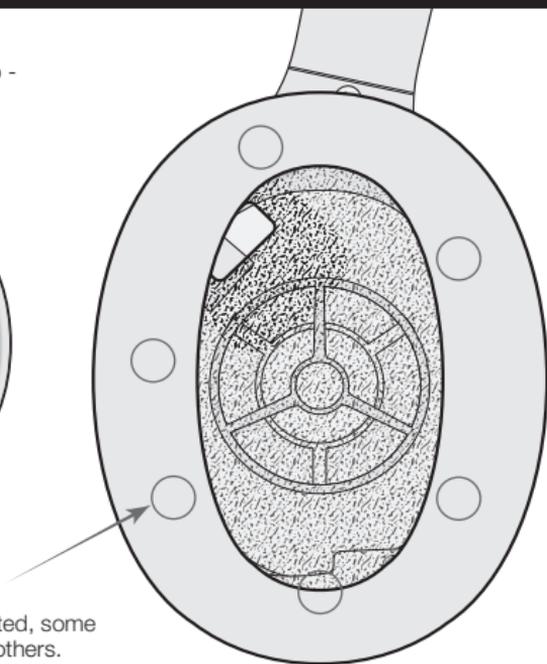

Ensure all tabs are correctly inserted, some may take a little more force than others.