


BRAINWAVZ[®]

EARPADS FOR SONY WH-1000XM5 QUICK INSTALLATION GUIDE

Remove Old Pads

NOTE

Pads are secured via 6 click-in tabs 

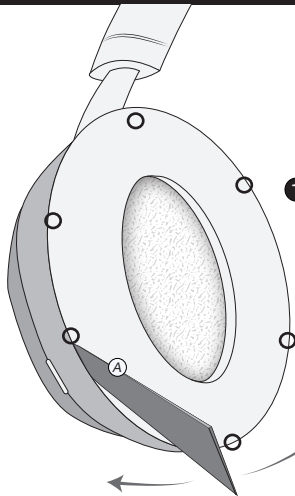


- 1** Gently insert a flat, blunt tool between the earpad and headphone body **(A)**
- 2** Carefully twist your tool back and forth until the pad starts to break loose, repeat around the pad until it comes free.


← *(Use a blunt knife, metal ruler or credit card as a removal tool)*

- 3** At this point you may like to remove the foam pads **(B)** and clean them before installing your new pads.


(Replacement foam NOT included)

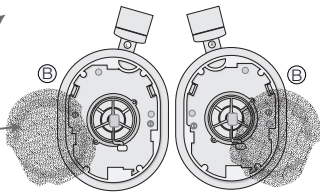

Insert Foam Pad

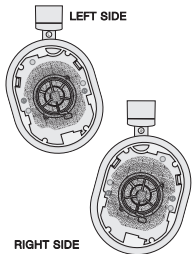

Get To Know The Earpads

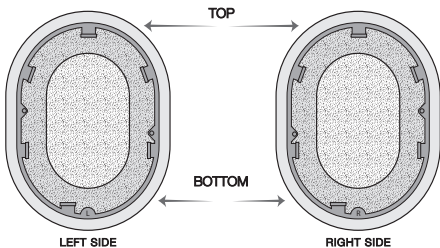


- 4 Remember to re-insert the foam before installing the new pads.


- 5 *There is a specific pad for left and right, pads also must be in the right orientation, as shown above.*

Install Replacement Earpad

- 6 Place the earpad onto the earcup - ensure correct orientation.

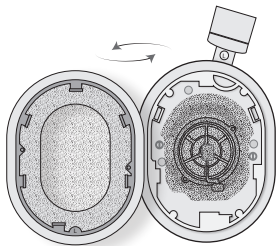

- 7 Push down on the earpad firmly in all 6 locations - a small click may be heard when in place.

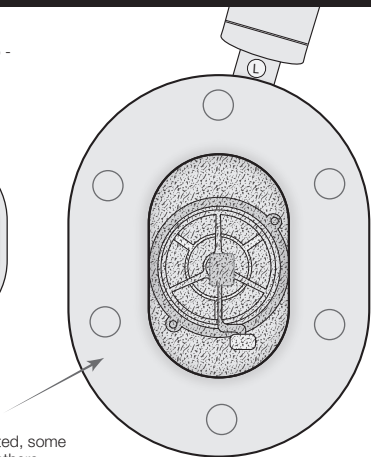

Ensure all tabs are correctly inserted, some may take a little more force than others.