



Assembly Instructions: Bird Box Kit (Open Front)

1. Check you have all the items in your kit:

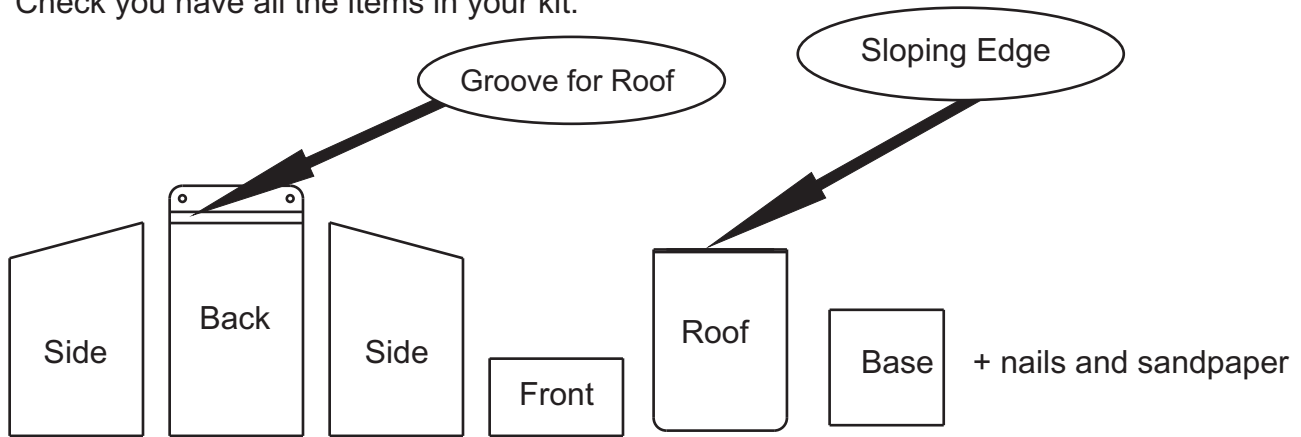


2. From the rear of the Back (ie the side without the groove), nail it to the 2 Sides

3. Position the Base between the 2 Sides and the Back, and nail it in place.

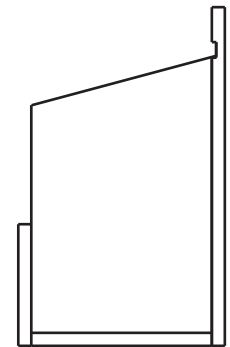

4. Fit the Front in front of the 2 sides and Base. Nail the Front in place.

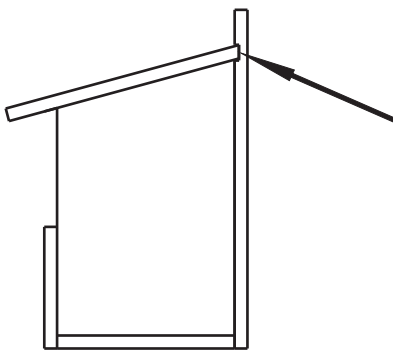

5. Fit the roof with its sloping edge into the groove at the top of the Back panel, and nail it onto the two Side panels.

6. Your box should now look like this:
Using the sandpaper provided,
Smooth off all the edges.
You can use the box as it is (it is
made from external grade plywood)
or apply a light coat of water based
wood preservative.

