

## Magnetic Strip Retrofit Kit Installation Guide




**Step 1:**  
Turn off the power to fixture before installation. Open troffer cover.




**Step 3:**  
Open the top cover of the wiring box.



**Step 5:**  
Take out the LED magnetic tubes from the box. Attach the LED magnetic tubes to the troffer. Adjust the position to make sure they are placed horizontally in proper place.

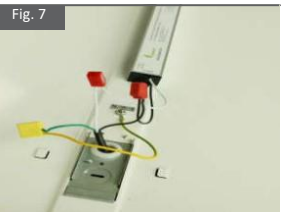

**Step 7:**  
Connection mode of the LED driver's input wire (See Fig. 7).  
White: neutral wire  
Black: live wire  
Yellow/Green: ground wire

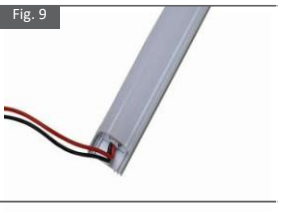

**Step 9:**  
Connect the connection wire from the driver to the LED tubes.




**Step 11:**  
Install the top cover of the wiring box to cover the LED driver.



**Step 13:**  
Turn on the power and test.




**Step 2:**  
Take out the fluorescent tubes one by one.

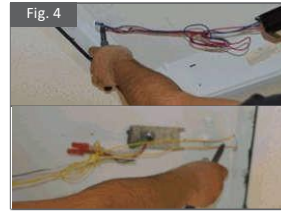

**Step 4:**  
Dismantle the ballast and circuit of the fluorescent tubes.



**Step 6:**  
Take out the LED driver and screws. Fix the driver onto the position of the previous ballast.

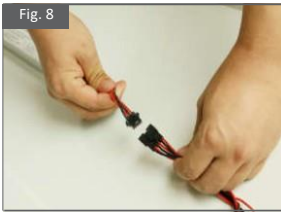

**Step 8:**  
Connect the connection wire to the output terminal of the LED driver.



**Step 10:**  
Finish all connections between the LED driver and the LED strips.



**Step 12:**  
Close the cover.

### WARNING:

- 1) Please cut off the power before beginning any installation or maintenance.
- 2) Please strictly follow the operation rules and use the right tools when installing.
- 3) The lighting fixtures should only be installed, connected and/or tested by a licensed electrician.