



NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF ANDERSON COMPOSITES

PLEASE READ ALL OF THE FOLLOWING INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION.


AT ANY TIME IF YOU DO NOT UNDERSTAND THESE INSTRUCTIONS, PLEASE CALL ANDERSON COMPOSITES TECHLINE AT 626-333-7024.

KIT CONTAINS:


(1x) Carbon Fiber Spoiler (6x) Felt Self-Adhesive Circles
(6x) Bolts (4x) Weatherstripping

| | |
|--|---|
|  <p>REQUIRED TOOLS: 10mm socket and wrench T-20 Torx bit</p> |  <p>INSTALLATION TIME: 25 Minutes</p> |
|--|---|


1. Remove third brake light lens from OE spoiler by using a T-20 Torx bit.

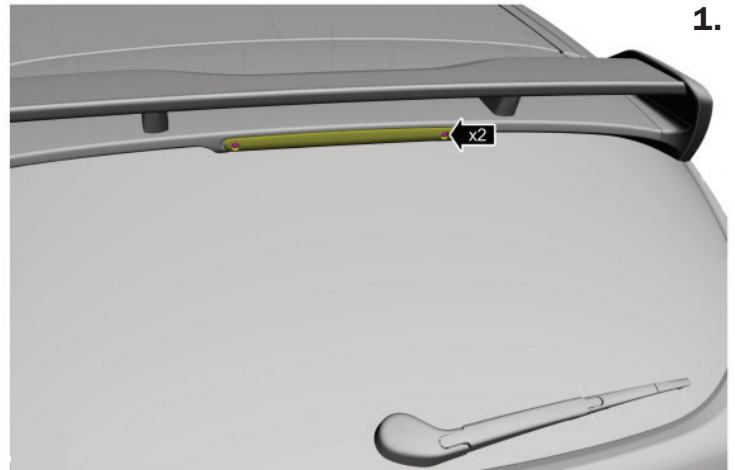

2. Disconnect electrical harness and rear washer hose from the lens. Remove lens.

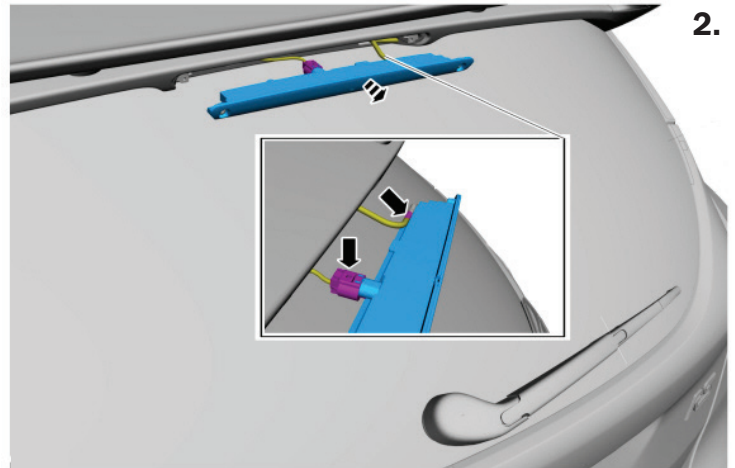

3. Open hatch and remove the center plastic cover to expose the spoiler bolts. You do not have to remove the side covers. No tools necessary.

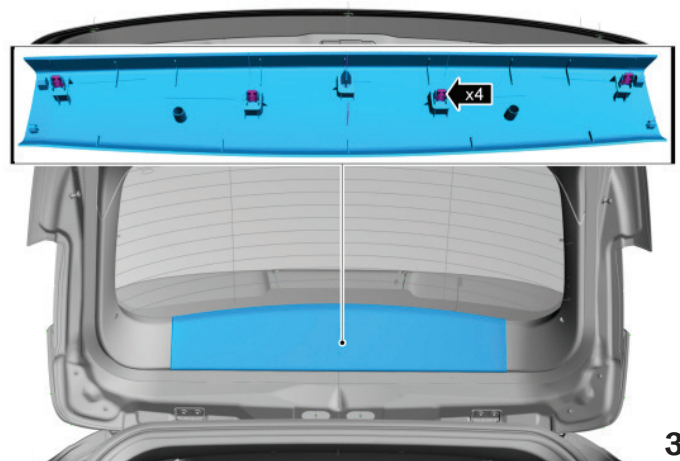

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF ANDERSON COMPOSITES

4. With hatch open, you can see the three 10mm bolts in the center and the four T-20 screws on the sides that attach the spoiler. There are only alignment tabs holding the spoiler on at this point. Pull with a little effort to remove the OE spoiler.



5. Remove the OE spoiler.
6. Installation of carbon fiber spoiler is the reverse of the installation.



NOTE: Use round felt self-adhesive tabs in between the hatch and the new spoiler where the bolts are going. Included in our kit are small weatherstripping for the front and rear edges of the spoiler that make contact with the hatch. Refer to the OE spoiler for location.

*May require holes for third brake light mounting screws to be enlarged to 9/64".