

Composite Door Installation Instructions for 2021-22 Ford Bronco (2 and 4 door)

- WARNING: THESE DOORS ARE FOR OFF ROAD USE ONLY -

Required Tools:


- 1- 13mm wrench
- 2- Body panel stand or saw horses

We recommend having an assistant for door removal and installation process

1. Push exterior mirror to forward position
2. Disconnect wire harness in door jam



3. Use the 13mm wrench to remove the bottom hinge bolt. Then remove the bolt in upper hinge.

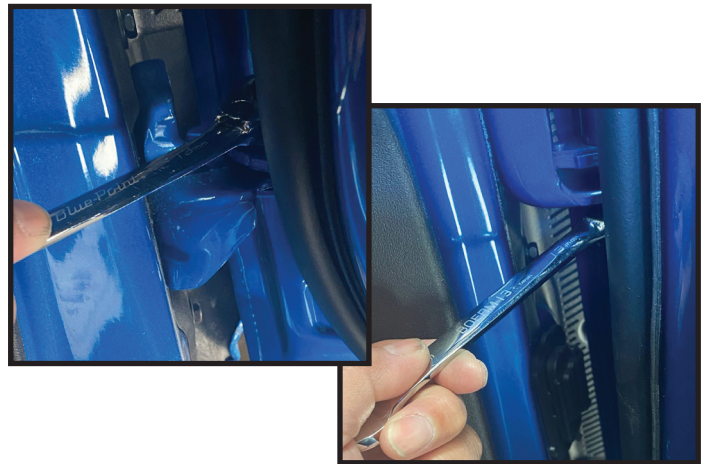

4. With an assistant, lift the door up, remove and set it on panel stand or saw horses.

5. Remove the hinge assemblies from the factory door with the 13mm wrench. Transfer the hinges to the composite door and tighten bolts.



6. Install the supplied door weatherstrip to composite door.



7. With an assistant, hang composite door on hinges on vehicle.

8. Reinstall the bolts to the upper and lower hinges in door jamb to secure the door.



9. Check door alignment at front edge and top. Make adjustments as needed to hinges on the door. Body shims or washers may be required (not included).

10. Pull exterior mirror back to driving position.



11. Repeat process for remaining doors.

