

Carbon Fiber Front Chin Spoiler Installation Instructions for 2020-21 Dodge Charger Widebody

Required Tools:

- 1- Cordless drill, drill bits
- 2- Hex wrench
- 3- 1-1/4" self-tapping screws (not included)

Recommend materials:



- 1- Automotive double-sided tape

1. Raise front end of car to access lower bumper area.
Use appropriate jackstands as needed

2. Use hex wrench to remove the air duct covers on the bottom of spoiler

3 Remove the (2) plastic push-pins in front lower wheel well. Repeat for the other side.

3. Position spoiler onto bumper. Align the (6) holes, near the lip on spoiler and bumper and fasten. We recommend using new, OE style fasteners. (Circled areas)

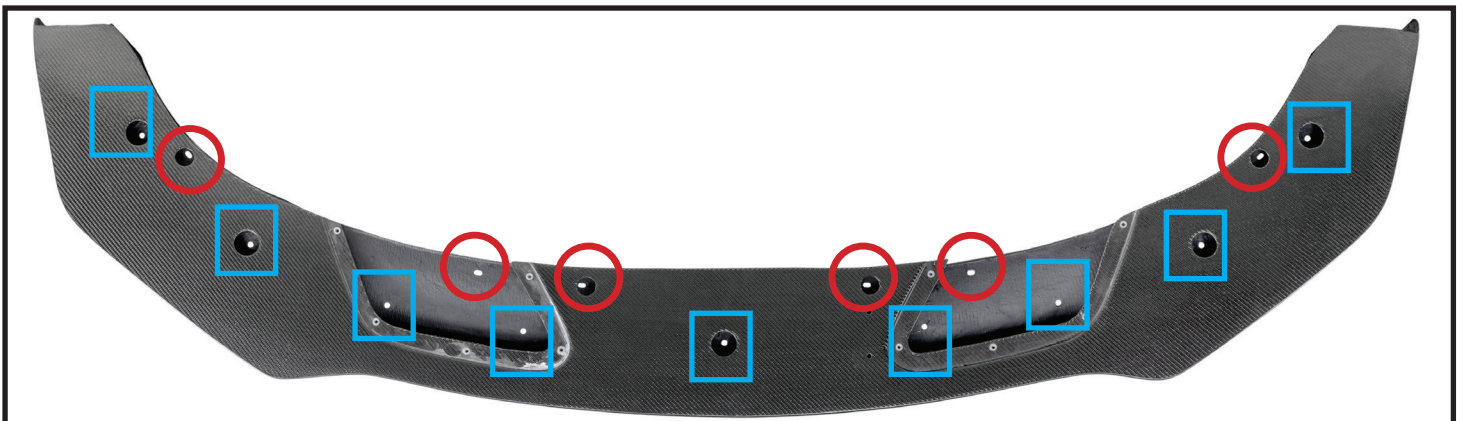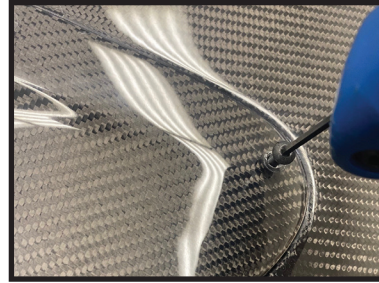

4. Use the spoiler as guide to drill (9) new holes in the bumper. (Squared areas) Use self-tapping screws and fasten spoiler to bumper.

4a. We recommend adding automotive double-sided tape to the top of spoiler where it contacts the bumper.

5. Reinstall the air duct covers with hex wrench

6. Fasten the (4) plastic push-pins in the front wheel wells.

