


Phone: (626)333-7024 www.andersoncomposites.com

Part Number: AC-TL15DGCR

Please measure and make sure the scale sqaure on this template is 1" by 1"


- 1. Align template with cut outs.
- 2. Tape down template on the trunk.
- 3. Make the cut. (Rotary tool recommended)



1"

Scale Sqaure

BODY LINE

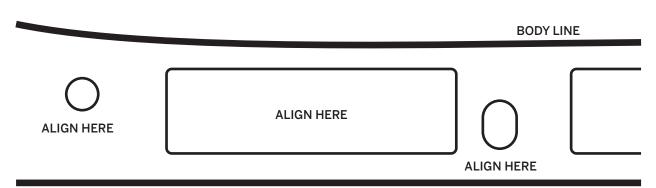

BODY LINE

BODY LIP

