



Carbon Fiber Fender Vent Instructions for 2021 Ram TRX Trucks



1. Remove the front fender liner.
2. Remove front fender flare.
3. Remove front headlight plastic trim.



4. Remove front headlight.
5. Remove front fender.
6. Place fender on flat surface to get access to the fender vent.
7. Use 3/16" drill bit and drill out (6) factory aluminum rivets. Remove the factory vent.

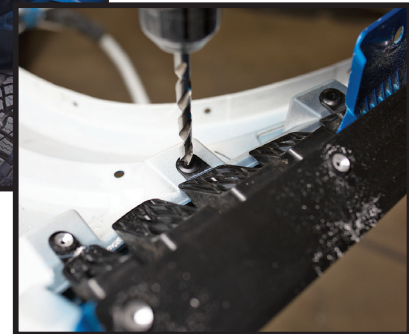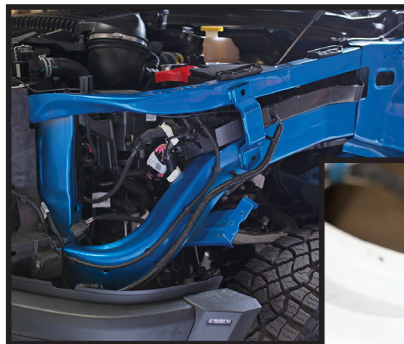

8. Place carbon fiber vent on fender and reuse the (3) plastic pushpin retainers and new rivets to fasten in the OE location.
9. Reverse the procedure to install fender with carbon fiber vent.

