
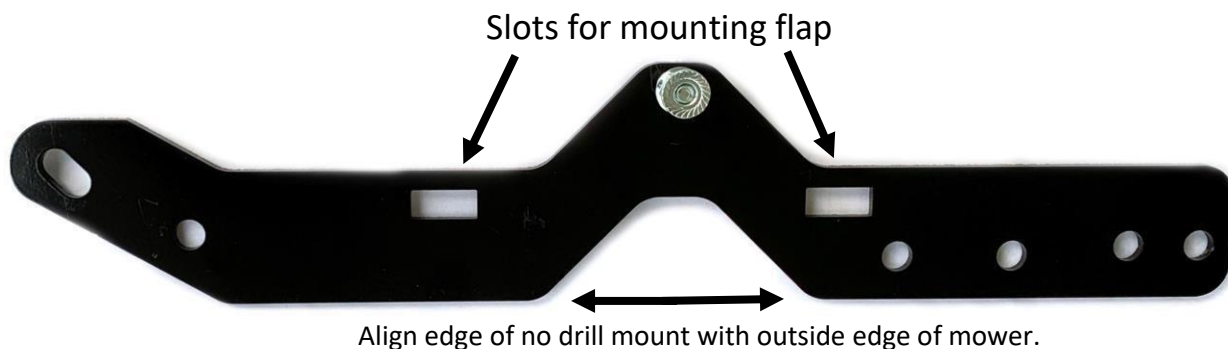


Installation of No-Drill Mount

1. Install (2) 3/8 x 2 square head bolts into square slots located in the middle of no-drill mount.
2. Position no-drill on deck aligned with outside edge and existing holes. Use spacers as required and secure to the deck using (2) 3/8 x 1- 1/2 square head bolts. (Spacers supplied with GrassFlap kit)
3. Complete installation following instruction included with GrassFlap.

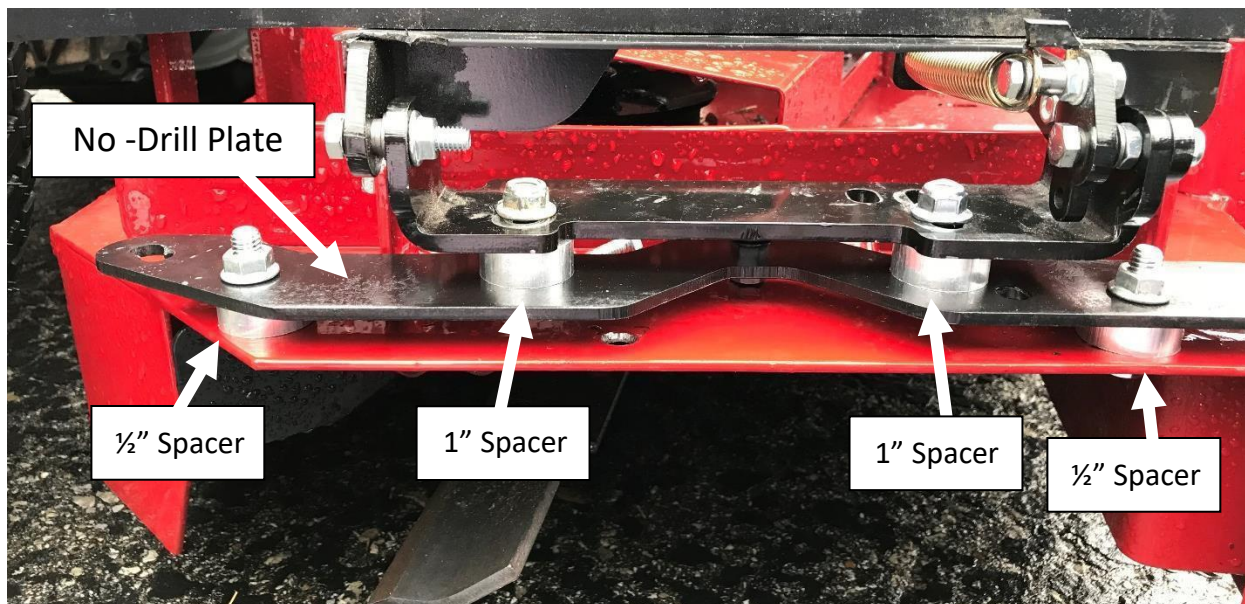

Flap & Blocker Plate

1. Fit blocker plate to discharge (see installation guide for details on bending blocker plate).
2. Position flap assembly on no-drill so slots for bending will align with bend on blocker plate (see installation guide for details on bending hinge plate). **WARNING: Confirm cable path before bending.**

