



11-82-20 Bobcat Predator Pro Pedal Mount Installation

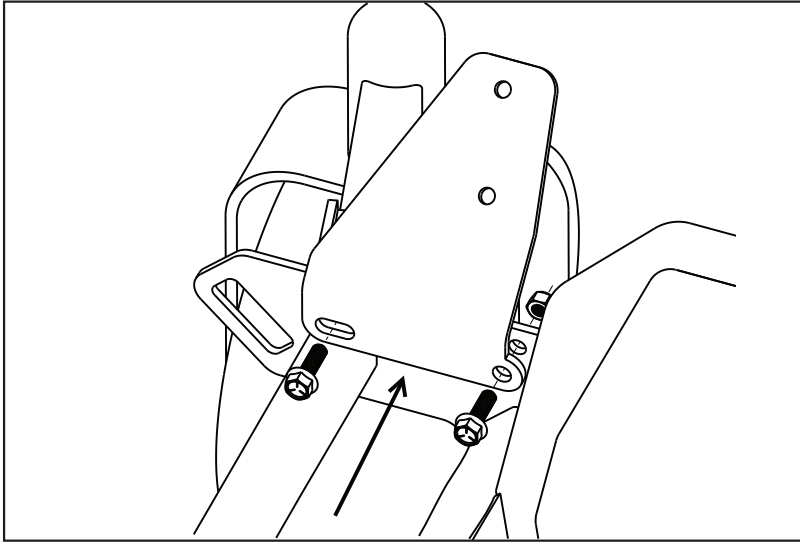

1. Remove existing bolts from frame.
2. Attach pedal mount to frame using two 3/8-16 x 1-1/2" hex head bolts provided.
3. Secure with two 3/8-16 lock nuts provided.
4. Attach pedal to pedal plate using two 5/16-18 x 1" bolts and nuts provided.
5. Follow instructions for connecting cable.

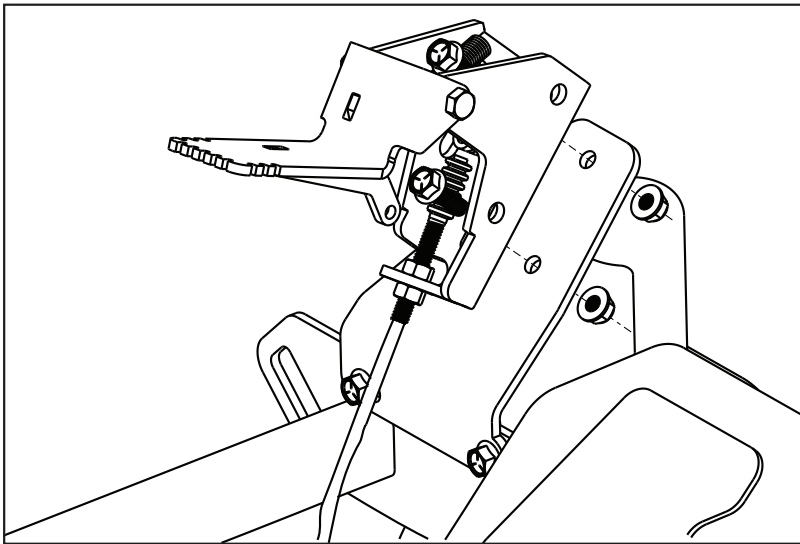

Grass

grassflap.com

Flap

(502) 594-3546 | David@GrassFlap.com