


## WALLPAPER INSTRUCTIONS - PEEL & STICK

**Important** - Unpack your paper carefully and inspect all panels before you begin. If you find any damage to your shipment, please report this to us immediately. Our wallpaper is printed on demand, so each batch can be a slightly different color.

**Our wallcoverings work best on smooth surfaces.** If your walls have any type of texture applied, wallpaper is not recommended

1. Prepare your walls. Your walls should be cleaned with a damp sponge and allowed to fully dry before you begin.
2. Gather your materials. You will need:
  - utility knife
  - scissors
  - level
  - squeegee
  - pencil
  - 23-24" painter guide (optional, but very helpful). Available at your local hardware store.
3. Create a plumb line. Most corners are not perfectly plumb, so we suggest starting about 22"-23" from the corner and wrapping the edge around the corner.

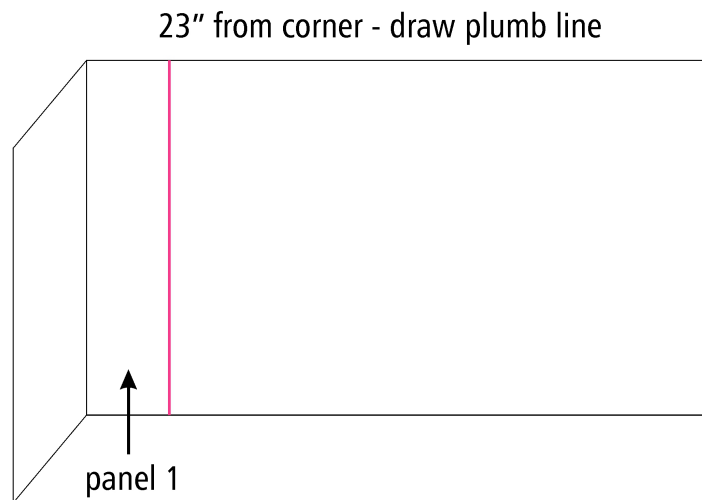

4. Hang your paper. Peel back the top couple of inches from the paper. Starting at the top (give yourself an extra inch or so against the ceiling) place the paper on the wall, making sure it is level and straight with your plumb line. Carefully pull the backing away (little by little) and smoothing the paper from the center outwards and downward. Use a soft, rubber-edged squeegee to smooth out any air bubbles. Hang remaining panels.
5. Trim excess paper. We recommend a using a paint guide to help cut straight lines and to avoid tears. Holding the guide firmly against the corner, ceiling, or baseboard, cut along the opposite side of wall you just papered (using the paint guide as a buffer).