

WALLPAPER INSTRUCTIONS - TRADITIONAL

We highly recommend using a professional paper hanger.

Important - Unpack your paper carefully and inspect all panels before you begin. If you find any damage to your shipment, please report this to us immediately. Our wallpaper is printed on demand, so each batch can be a slightly different color.


Our wallcoverings work best on smooth surfaces. If your walls have any type of texture applied, wallpaper is not recommended

1. Prepare your walls. Your walls should be cleaned with a damp sponge and allowed to fully dry before you begin. We recommend using a wallpaper primer.

2. Gather your materials. You will need:

- wallpaper paste. We recommend Roman Eco 888 which is non toxic, VOC Free.
- dropcloth
- paint roller
- paintbrush
- sponge
- seam roller
- utility knife
- scissors
- level
- squeegee (optional)
- pencil
- 23-24" painter guide (optional, but very helpful). Available at your local hardware store.

3. Create a plumb line. Most corners are not perfectly plumb, so we suggest starting about 22"-23" from the corner and wrapping the edge around the corner.

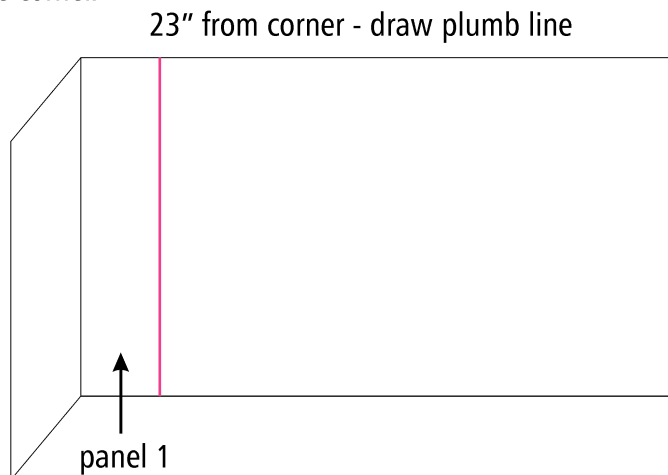

4. Hang your paper. Roll the paste evenly on the area of the wall behind the first panel. Starting at the top (give yourself an extra inch or so against the ceiling) place the paper on the wall, making sure it is level and straight with your plumb line. Smooth the paper with a dry or lightly damp sponge, working any air bubbles or extra paste out as you go. Hang the remaining panels and use the seam roller to go over each seam after each panel is hung.

5. Trim excess paper. We recommend using a paint guide to help cut straight lines and to avoid tears. Holding the guide firmly against the corner, ceiling, or baseboard, cut along the opposite side of wall you just papered (using the paint guide as a buffer).