

METAL POST INSTALLATION INSTRUCTIONS



INSTALLATION INSTRUCTIONS

METAL POST INTERIOR/EXTERIOR APPLICATIONS


ANGLED SECTIONS

Follow the same instructions as for level runs. Cable will flex as it exits the Bullet.

Be sure to align Bullets so the set screw is accessible relative to the angled cable.

If stair treads or handrails make it difficult to install Bullets, install them prior to setting the posts.

END POSTS must have 3/16" thick steel or 1/4" aluminum walls. In
steel posts drill your Cable Bullet holes at 19/32", in aluminum at
37/64". Tap for 5/8-18 threading. End posts should be spaced no more
than 20' apart. Your posts and top rail must be able to support the
combined tension of your total cable runs (150–200 lbs each).

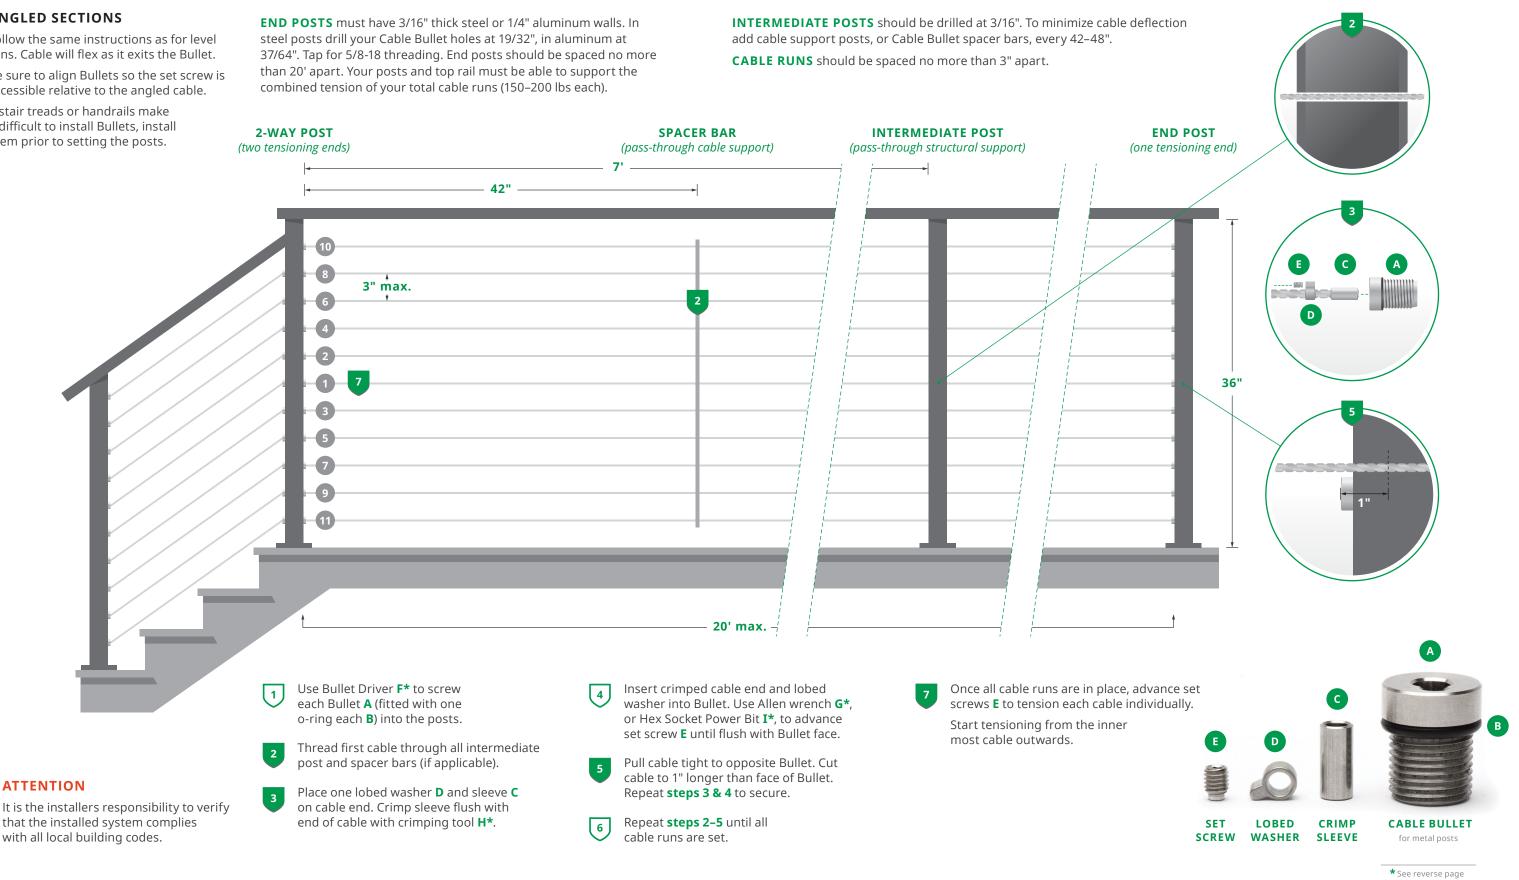

It is the installers responsibility to verify that the installed system complies with all local building codes.



WWW.CABLEBULLET.COM

CABLE BULLET

CONTACT

510 OAK GLEN DR WARSAW, IN 46580 812.727.6563 INFO@CABLEBULLET.COM

PATENT NO. 9,932,754

© 2018 PERSPECTIVE 361 | REVISED MAY 24, 2018