



CABLE RAIL SYSTEM

INSTALL KIT ADD-ON FOR
FIXED SPACER BARS

SKU #FSB-16-K

WE'RE HERE TO HELP



WWW.CABLEBULLET.COM




INFO@CABLEBULLET.COM



574.742.2737

Use this kit when installing fixed spacer bars into aluminum handrail.

1. Before running your cables, find the placement of your fixed spacer bar.
2. Use the #25 x 6" HSS aircraft extension drill bit **A** to drill a hole centered on the underside of your handrail.
3. Attach the #10-24 UNC carbon taper tap **B** to the T-handle tap wrench **C** to make threads. Take care to advance the tap perpendicular to the handrail, so the spacer bar will be plumb.
4. Use a drill to set the fixed spacer bar standoff; then thread the spacer bar onto the standoff.

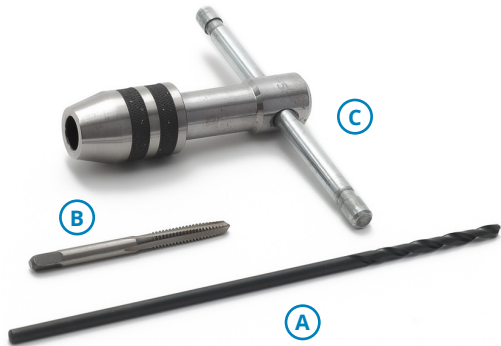

⚠ WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to P65Warnings.ca.gov.



PRO TIP: Protect the finish and threads on the standoff during installation with a piece of painter's tape.