


Posi-Products Installation Instructions:

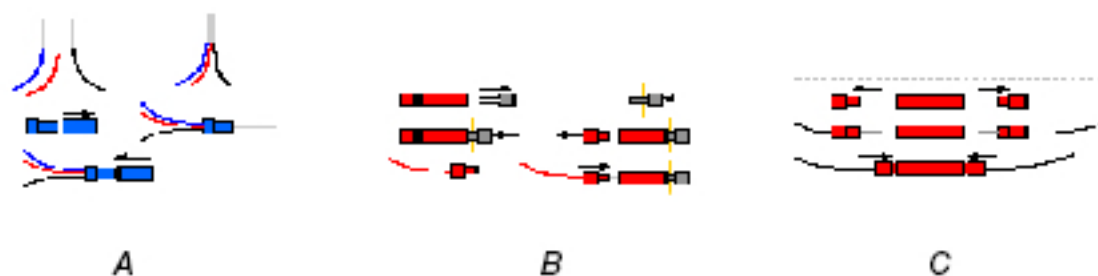

Posi-Twist (A):

1. Strip all wires to be inserted 1/2"
2. Twist all wires together before inserting into the Posi-twist.
3. Completely unscrew the top from the Posi-twist.
4. Feed the twisted wires through the bottom portion of the Posi-twist.
5. Attach the top and tighten, while ensuring the wires do not slip out of the bottom of the Posi-twist.

Posi-Tap (B):

1. Unscrew the cap of the Posi-Tap (gray or large end).
2. Slide the wire you wish to tap into through the slot in the cap.
3. Re-attach the body of the Posi-Tap and tighten.
4. Attach the other wire to the bottom using the same method as a Posi-Twist.

Posi-Lock (C):

1. Remove both ends from the Posi-lock.
2. Strip wire 1/2" and insert into bottom portion of the Posi-lock.
3. Hand tighten the Posi-lock onto bottom portion with wire, repeat for other side.