


Rapid Assembly of Hinged Guard and Blade To Motor

20", 24" and 30" Sizes Available

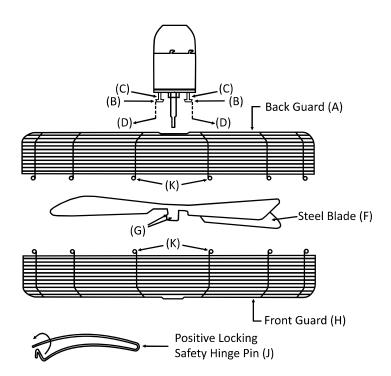


HERE'S HOW IT WORKS:

- Install back guard (A) which has four keyhole slots (D) over the four serrated flange nuts (B) that are pre-mounted on motor thru-bolts (C).
- Turn guard clockwise so that motor thru-bolts are at small end of keyhole slots. Tighten all four serrated flange nuts. Rear guard is now securely fastened to motor.
- Slide blade (F) over shaft with **hub away from motor**. Tighten set screws (G) securely.

By removing any three safety hinge pins, the remaining hinge pin acts as a hinge for ease of cleaning or replacing the blade.

NOTE: 20" Guard uses only 3 Hinge Pins. See instruction sheet packed with all major components for recommended use of safety cable.

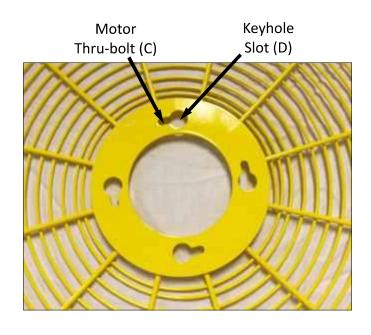

Quick Mounting Ring

• Fasten front guard (H) to back guard (A) by inserting four* safety hinge pins (J) (each through two hinge pin holes (K) on front guard and two hinge pin holes on rear guard), thereby joining securely front guard to rear guard. Close safety hinge pins as they are put on. Front guard is now securely fastened to rear guard.



Safety Hinge Pin (J)