



Tipping box installation

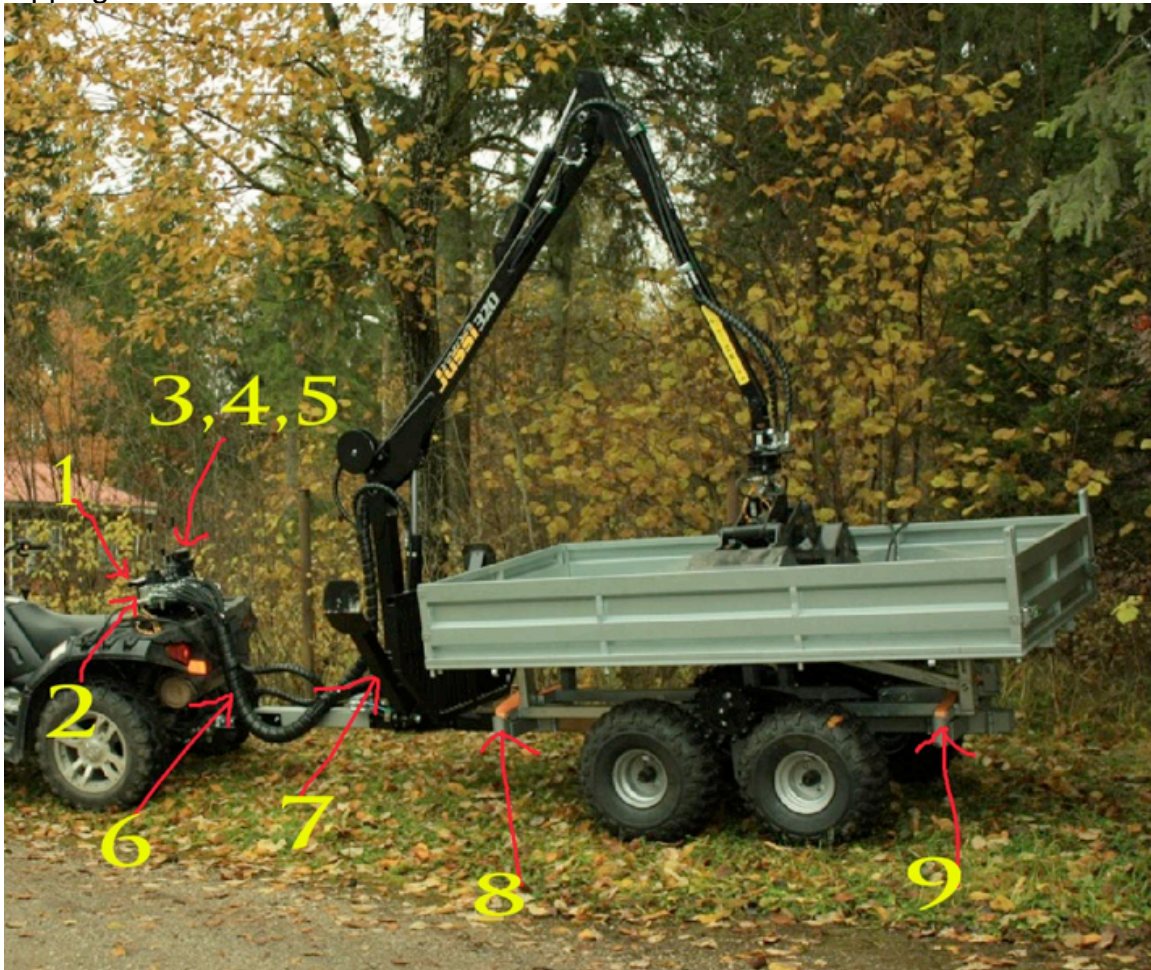


- 1) Remove the black cover from distributor
- 2) Open the three screws from one end of the distributor
- 3) Replace the 3 short rods with longer rods one at a time by pushing out the short rod with longer rod
- 4) When you have replaced the three rods install the tipping section and the last section you removed before.
- 5) Tighten the screws by maximum of 12 N(neutons)

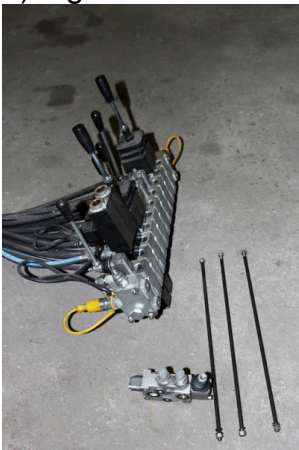

- 6) Remove the spiral that covers the crane whoses, put the tipping box whoses together with the crane whoses and put the spiral cover back on
- 7) Attach the tipping box whoses to the base of the crane as seen on the picture



- 8) Put the tipping box on to trailer and fasten with belts shown on the picture, connect whoses

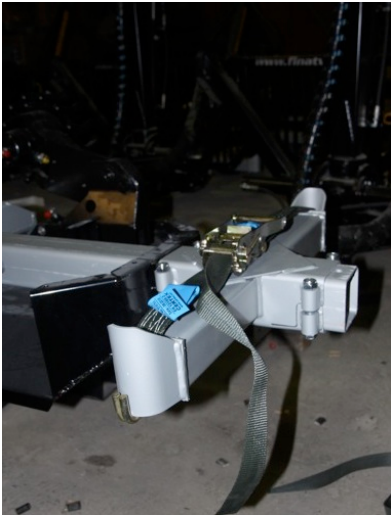

- 9) tighten once more the ropes that hold the tipping box to trailer