

STITCH IN THE DITCH




Step 1: Pin this paper onto the fabric that is loaded and taut on your frame. Use the X's as a pinning guide.

Step 2: Align your Wonderfoot, Stitch in the Ditch insert in place, with any line. Practice following the pattern with the foot before stitching.

Step 3: Start quilting! For this practice, you can start and stop anywhere and go in any direction you want. Go over your stitch lines more than once if you need to. As you quilt, observe the relationship of the lines on the insert to the needle, and how the lines guide you to stitch in the ditch.




Helpful hint: Stop the machine for just a second or two before making a turn to create sharp angles instead of rounded ones.

Great job! You can find this same tracing pattern at www.graceframe.com on the 360 Wonderfoot page.

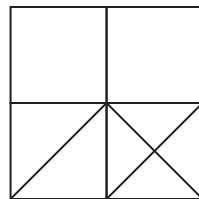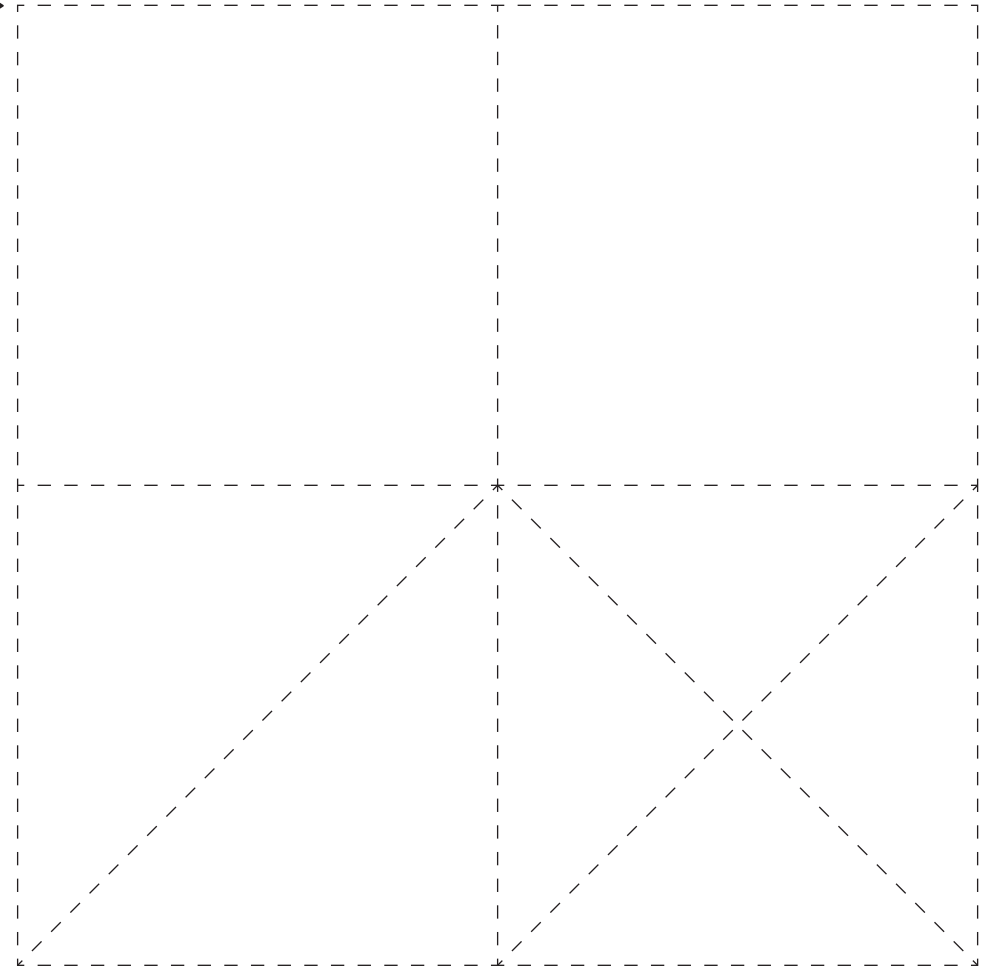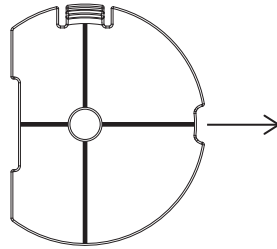

1/4 INCH OFFSET

Our 1/4 Inch Offset insert is perfect for offsetting and pattern echoing. You can use it to create geometric patterns when free motion quilting. We have included a simple pattern for you to trace that will introduce you to what this useful tool can do.

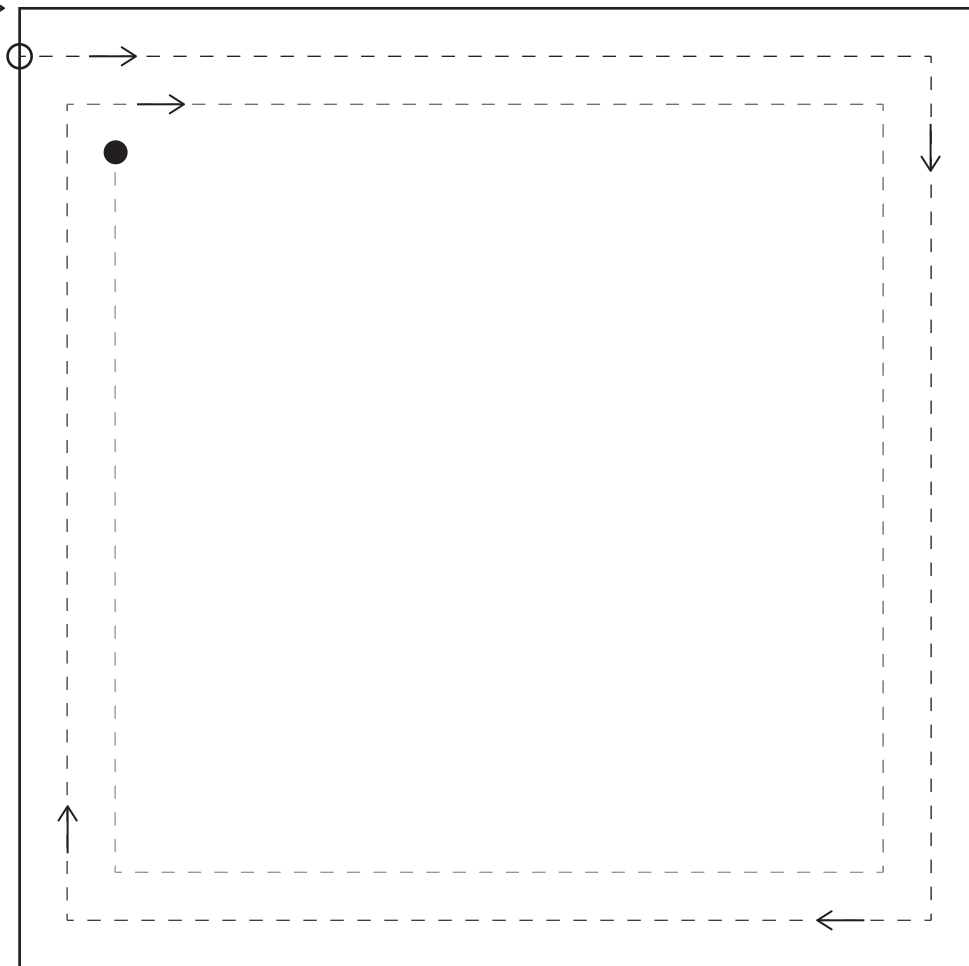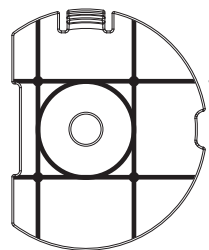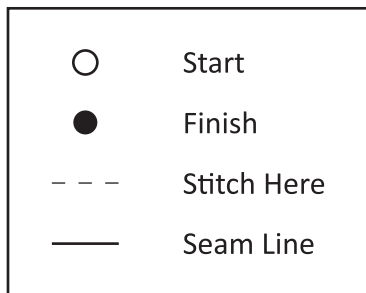


Step 1: Pin this paper onto the fabric that is loaded and taut on your frame. Use the X's as a pinning guide.

Step 2: Align your Wonderfoot, 1/4 Inch Offset insert in place, with the seam line. Be sure that the top line on the insert lines up with the top horizontal seam line. Practice following the pattern with the foot before stitching.




Step 3: Start quilting! Follow the arrows through the first few lines. Note that after you have completely sewn one line, it becomes the new line that you will align the insert with. Continue sewing and aligning with the previous line through the entire design.

Great job! You can find this same tracing pattern at www.graceframe.com on the 360 Wonderfoot page.

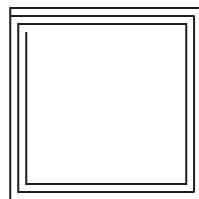

3/8 INCH OFFSET

Our 3/8 Inch Offset insert is perfect for offsetting and pattern echoing. You can use it to create geometric patterns when free motion quilting. We have included a simple pattern for you to trace that will introduce you to what this useful tool can do.

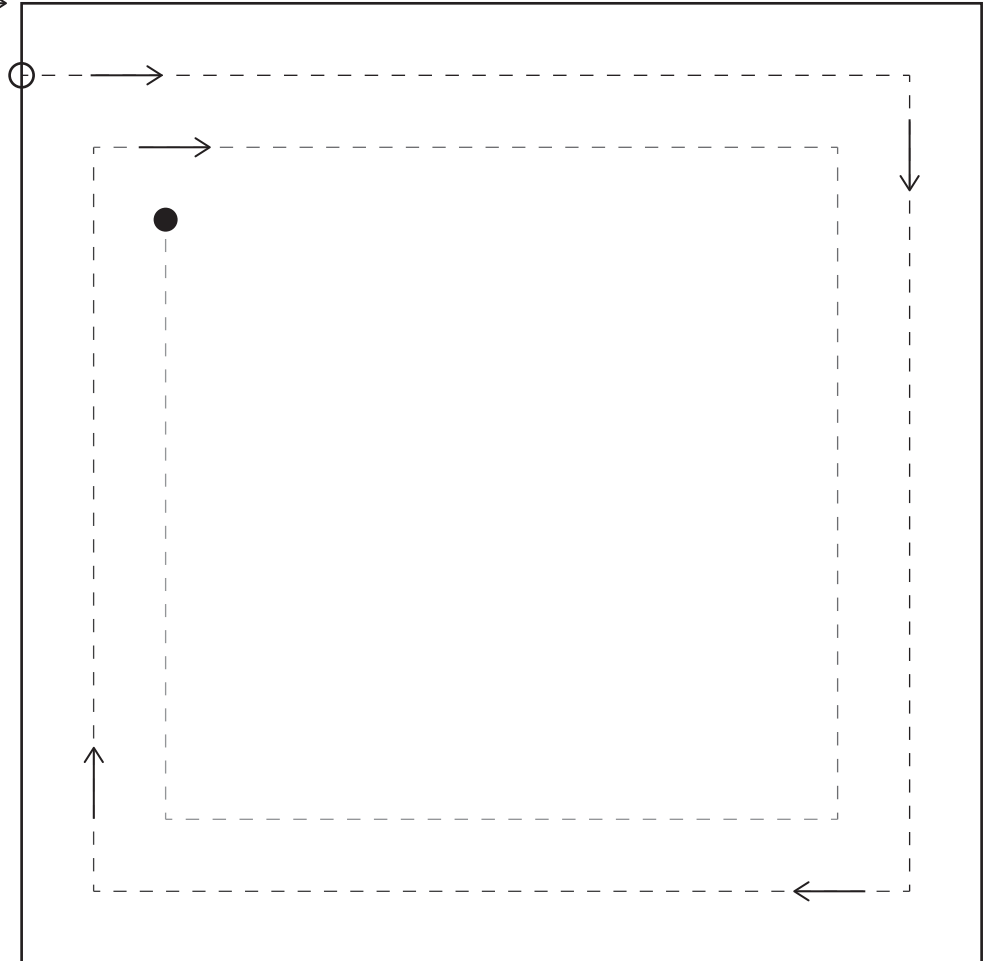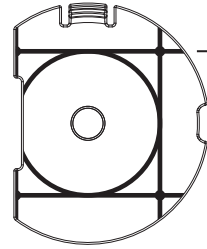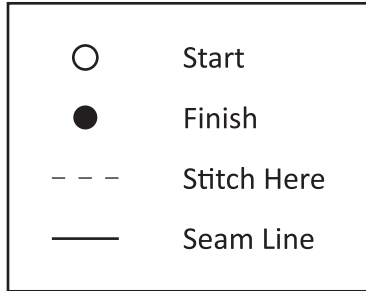


Step 1: Pin this paper onto the fabric that is loaded and taut on your frame. Use the X's as a pinning guide.

Step 2: Align your Wonderfoot, 3/8 Inch Offset insert in place, with the seam line. Be sure that the top line on the insert lines up with the top horizontal seam line. Practice following the pattern with the foot before stitching.




Step 3: Start quilting! Follow the arrows through the first few lines. Note that after you have completely sewn one line, it becomes the new line that you will align the insert with. Continue sewing and aligning with the previous line through the entire design.

Great job! You can find this same tracing pattern at www.graceframe.com on the 360 Wonderfoot page.



1/4 INCH CIRCLE OFFSET

Our 1/4 Inch Circle Offset insert makes pattern echoing a breeze! You can use it to create organic (curved) patterns when free motion quilting. We have included a simple pattern for you to trace that will introduce you to what this useful tool can do.

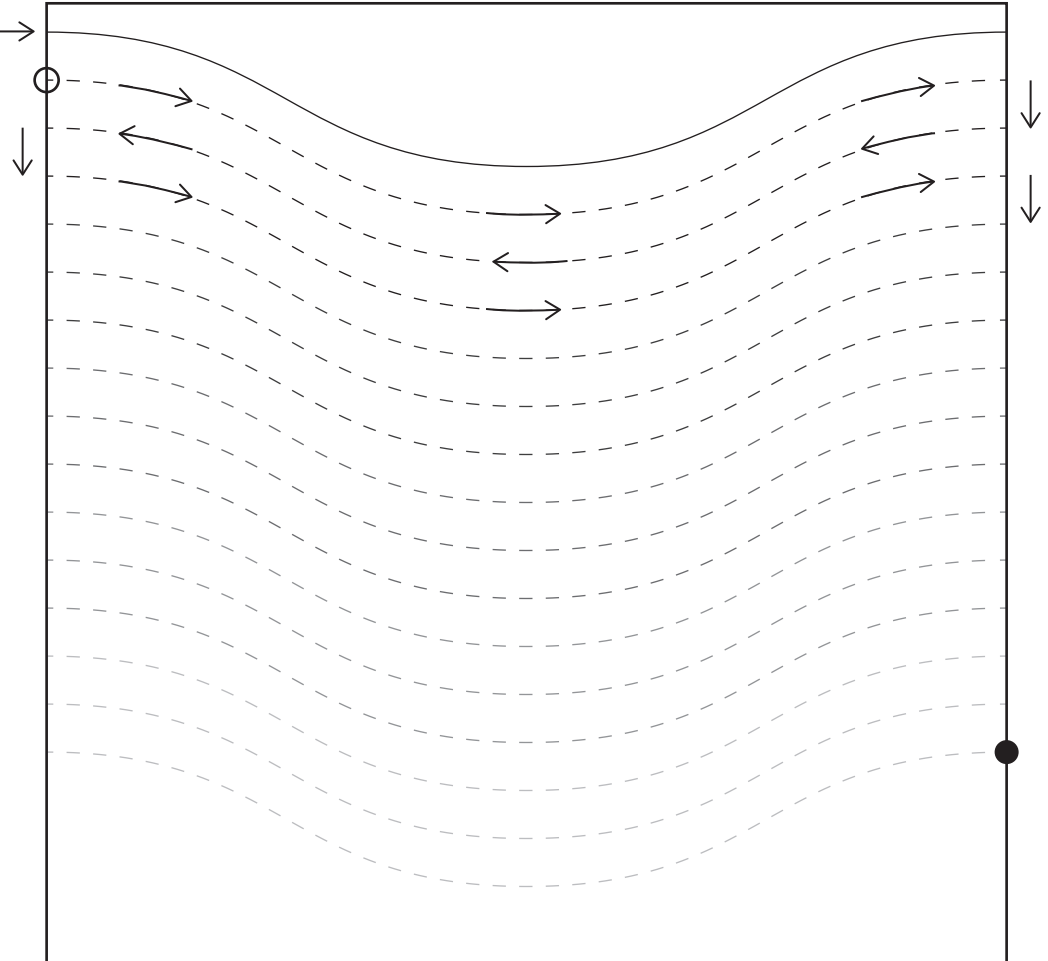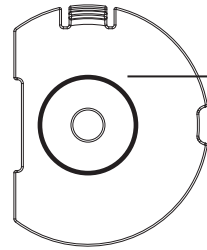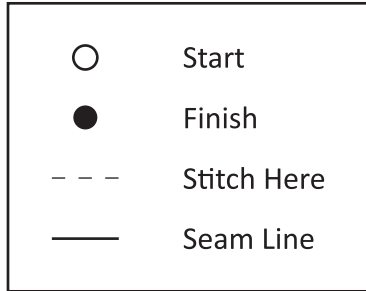

Step 1: Pin this paper onto the fabric that is loaded and taut on your frame. Use the X's as a pinning guide.

Step 2: Align your Wonderfoot, 1/4 Inch Circle insert in place, with the seam line. Be sure that the top of the circle matches up with the curved seam line above. Practice following the pattern with the foot before stitching.

Step 3: Start quilting! Follow the arrows through the first few lines. Note that after you have completely sewn one line, it becomes the new line that you will align the insert with. Continue sewing and aligning with the previous line through the entire design.

Great job! You can find this same tracing pattern at www.graceframe.com on the 360 Wonderfoot page.

