

FX1005A Wall Cabinet Assembly Instructions




Package Contents:

- Cabinet components
- 4 x Posts
- 1 x Mounting Bracket
- 12 x Screws


Tools Required:

- Electric screwdriver or drill with Phillips driver bit
- Hammer or Rubber Mallet
- Safety glasses

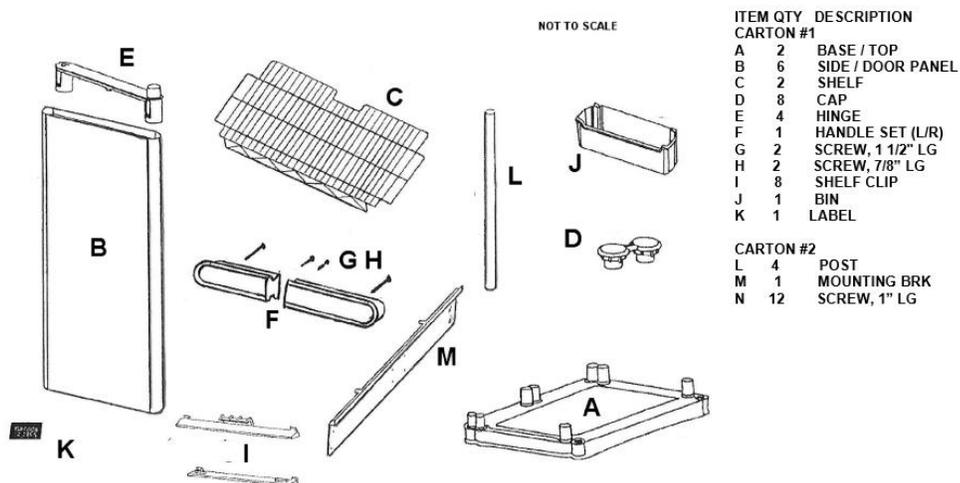

If you have any questions or need some advice, please do call us on 01491 579975 or email us at info@garageflex.co.uk and we will do our best to help.

Step 1: Check that you have everything you need ready

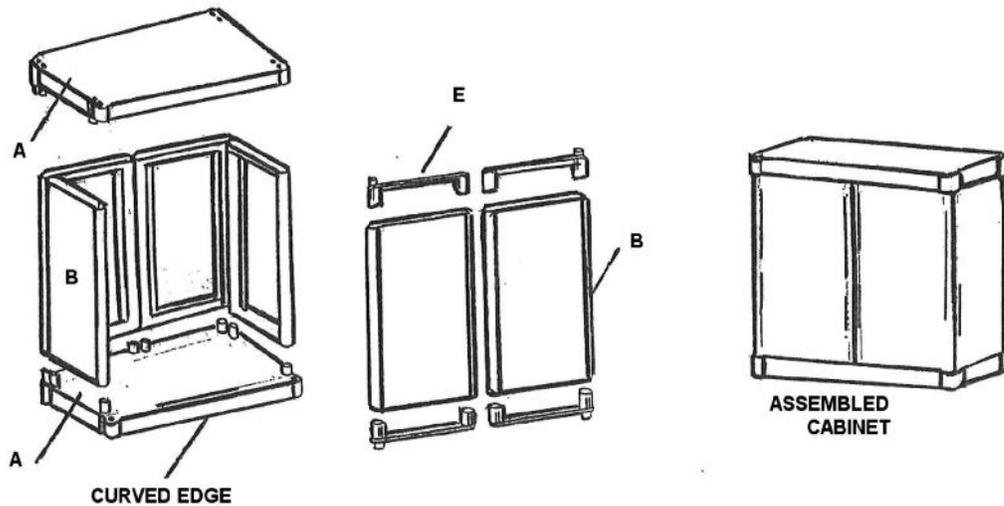


Step 2: Align the base and top marked A with the curved edge facing towards the front as shown above and press panels (B) over the posts so they fit in.

Step 3: Press the 4 hinges (E) onto the two B panels and place the bottom hinges into the base holes.



Step 4: Press the base and top (A) onto the panels and hinges. The cabinet body is now complete.

Step 5: Slide the posts (L) into the four locations shown below and slide the post past the bottom opening. Place the bottom caps (D) on the posts and push into the cabinet bottom opening.

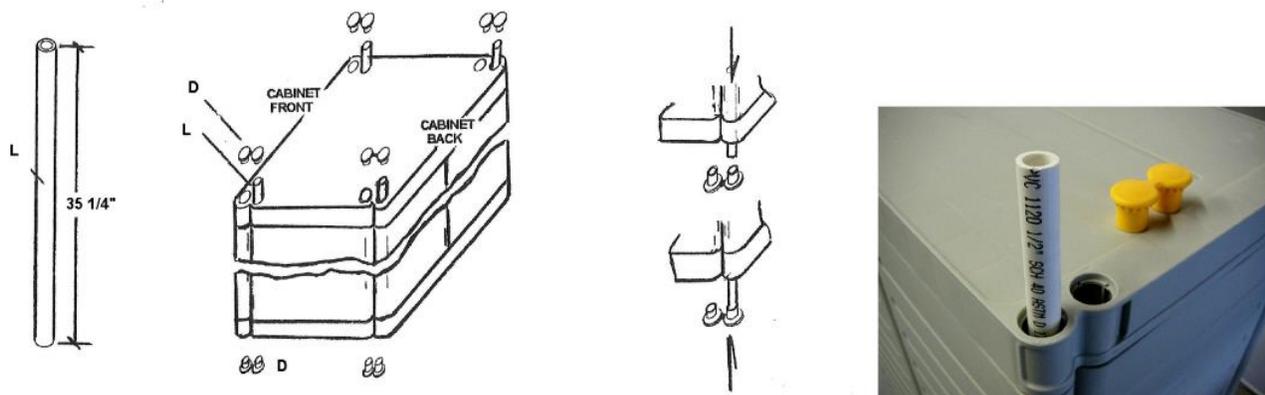

If you have any questions or need some advice, please do call us on 01491 579975 or email us at info@garageflex.co.uk and we will do our best to help.

Step 6: With the cabinet on a solid surface, press down on each corner and pre-drill a 1/16" or 3/32" hole in each location shown and then put in a screw (N) into place. Repeat three times on each side of the cabinet.

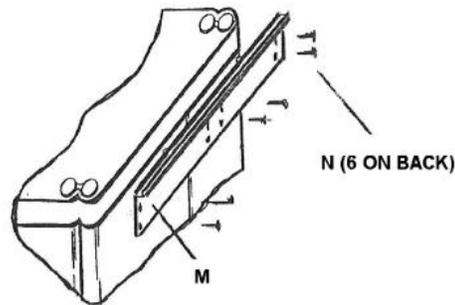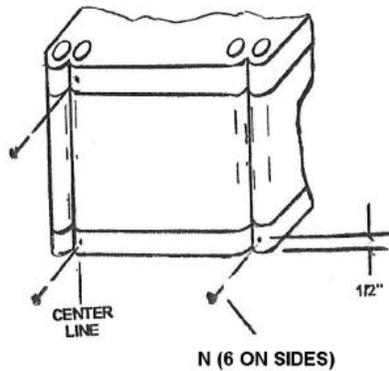


Step 7: Position the Mounting Bracket (M) on the top of the cabinet at the back and install the remaining 6 screws.



Step 8: Mark the hole locations. Drill through the panels with a 1/8" diameter drill bit.




Step 9: Locate the handles as shown below with the padlock holes in-line and screw the handles into place.

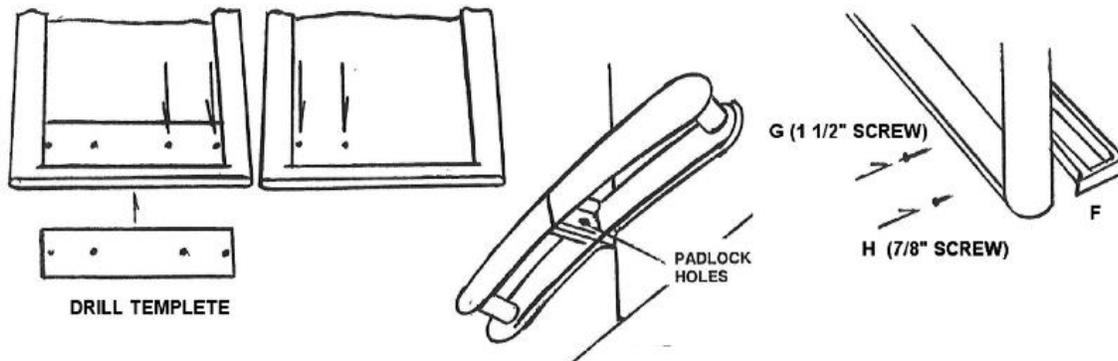

Step 10: Snap the door bin (J) into the track location on the inside of the door where you wish to put it.

Step 11: Put the shelf clips (I) into the vertical tracks around the inside of the cabinet body on the panels. There should be 4 clips per shelf: the 2 clips with the arched hood are to be located in the back of the cabinet and the 2 flat topped clips are for the sides.

Step 12: Place the shelves on the shelf clips. The front shelf lip can be located up or down but if you place it up then items should not roll off.

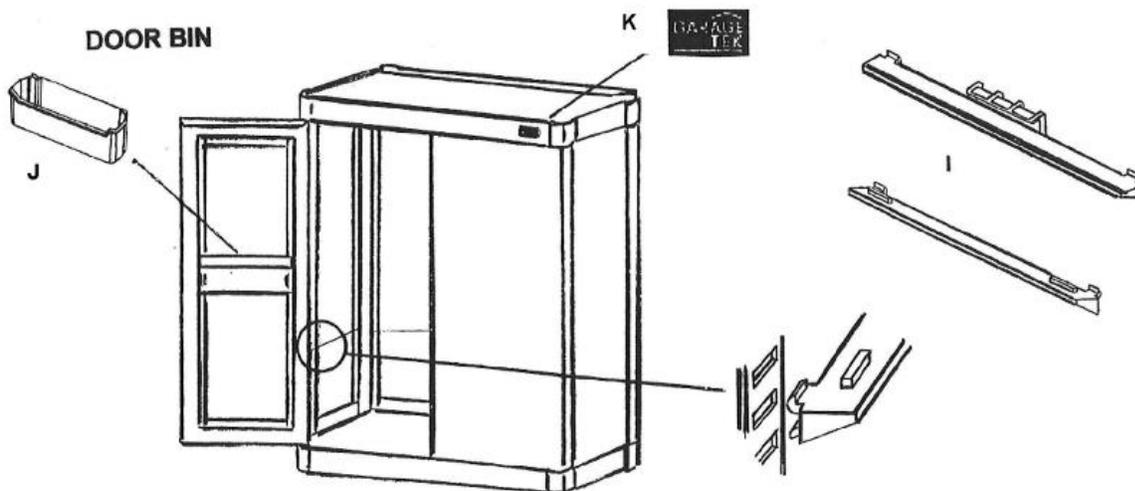



Step 13: The Cabinet is now ready for mounting on FlexiTrack or FlexiPanel