


INFRARED PATIO HEATER THERMOSTAT REPLACEMENT




Step 1: Be sure the heater is unplugged from the wall outlet.




Step 2: Remove four corner screws from the tilt switch housing.

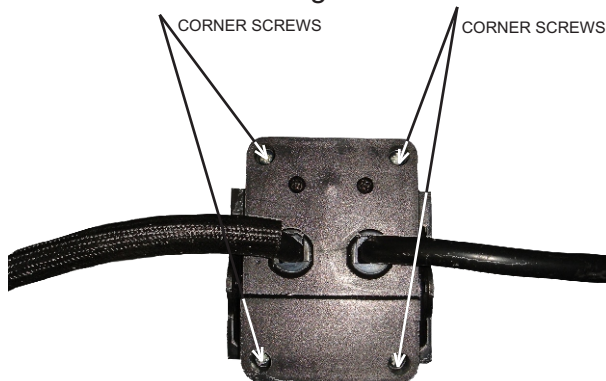


Step 3: Loosen the two remain inset screws.

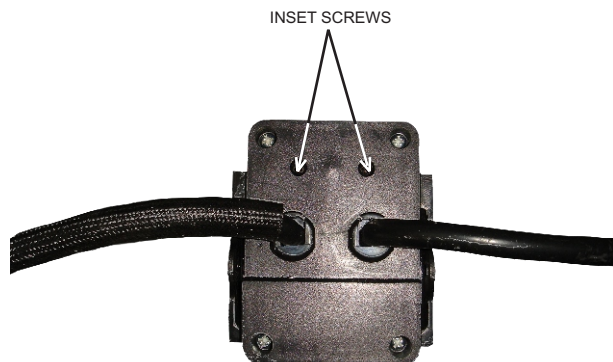

Step 4: Open the switch housing and disconnect the male and female thermostat leads from the tilt switch.

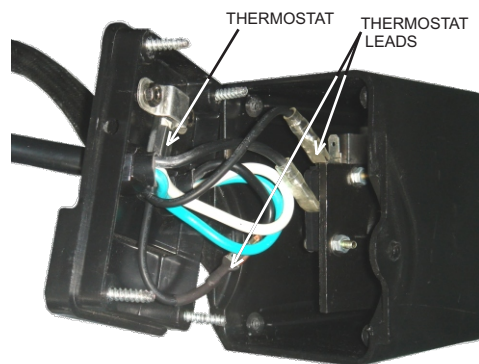

Step 5: Replace original thermostat with new thermostat connecting the lids of the new thermostat. Tighten inset screws.

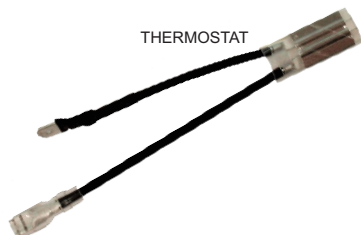

Step 6: Reassemble tilt switch housing.

