**Plow Mount** 


**PART # 105050** Hardware Kit: HK-109


## **Kit Components: Part Description** <u>Qty.</u>


1..... Plow Mount Plate 4..... 5/16-18 x 1-1/2" x 2 1/2" U-Bolt 8..... 5/16-18 Hex Flange Lock Nut

## **INSTALLATION INSTRUCTIONS:**

- 1. Place u-bolts (A) on machine frame as shown in Figure 2.
- 2. Install mount plate loosely to frame using the u-bolts and 5/16" flanged lock nuts as shown in Figures 3 & 4.
- 3. Adjust so plate is centered on machine.
- 4. Tighten down all nuts. (Make sure u-bolt ends are even.)
- 5. See ATV Plow Tube System instruction manual for tube attachment.

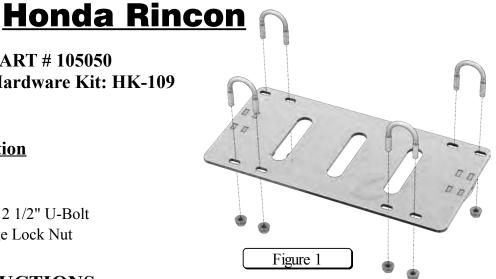

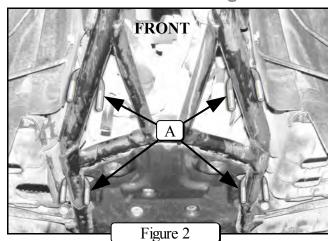

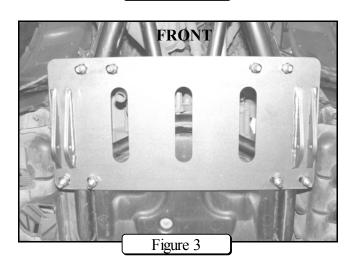

FRONT



©2010 Copyright Kappers Fabricating, Inc. All rights reserved

Figure 4