



SELF-ENGAGED LAUNCH ASSIST

Mounting Template

130MM DEPTH

Revised 5/11/20


50MM

50MM



SCALE CHECK

Both red lines shown here must measure 50 millimeters in length.

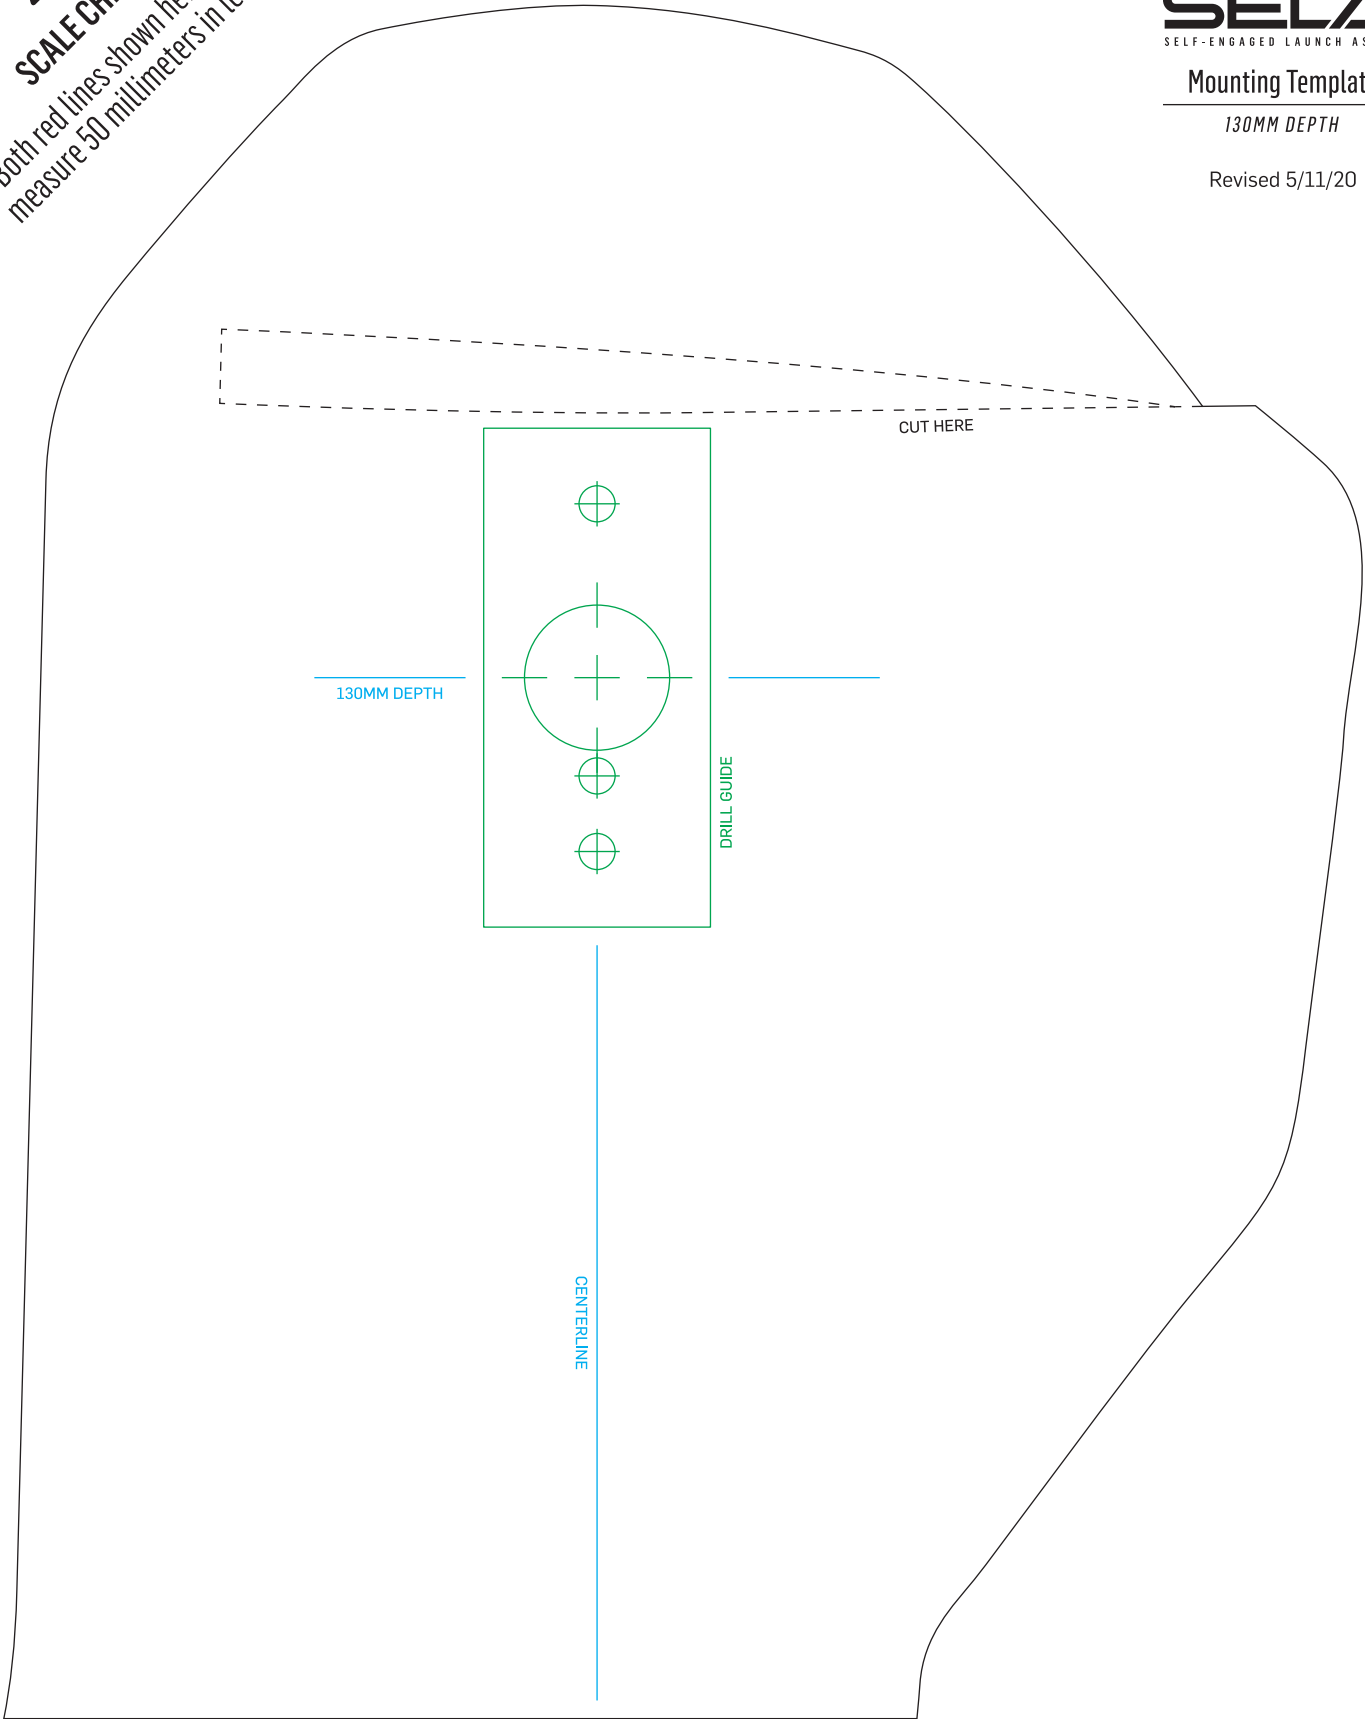

APPLICATIONS

HUSQVARNA: 16-20 TC 125/250, 16-20 FC 250/350/450, 18-20 FC 450 Rockstar Edition



Mounting Template

140MM DEPTH


Revised 5/11/20

50MM

50MM

SCALE CHECK

Both red lines shown here must measure 50 millimeters in length.

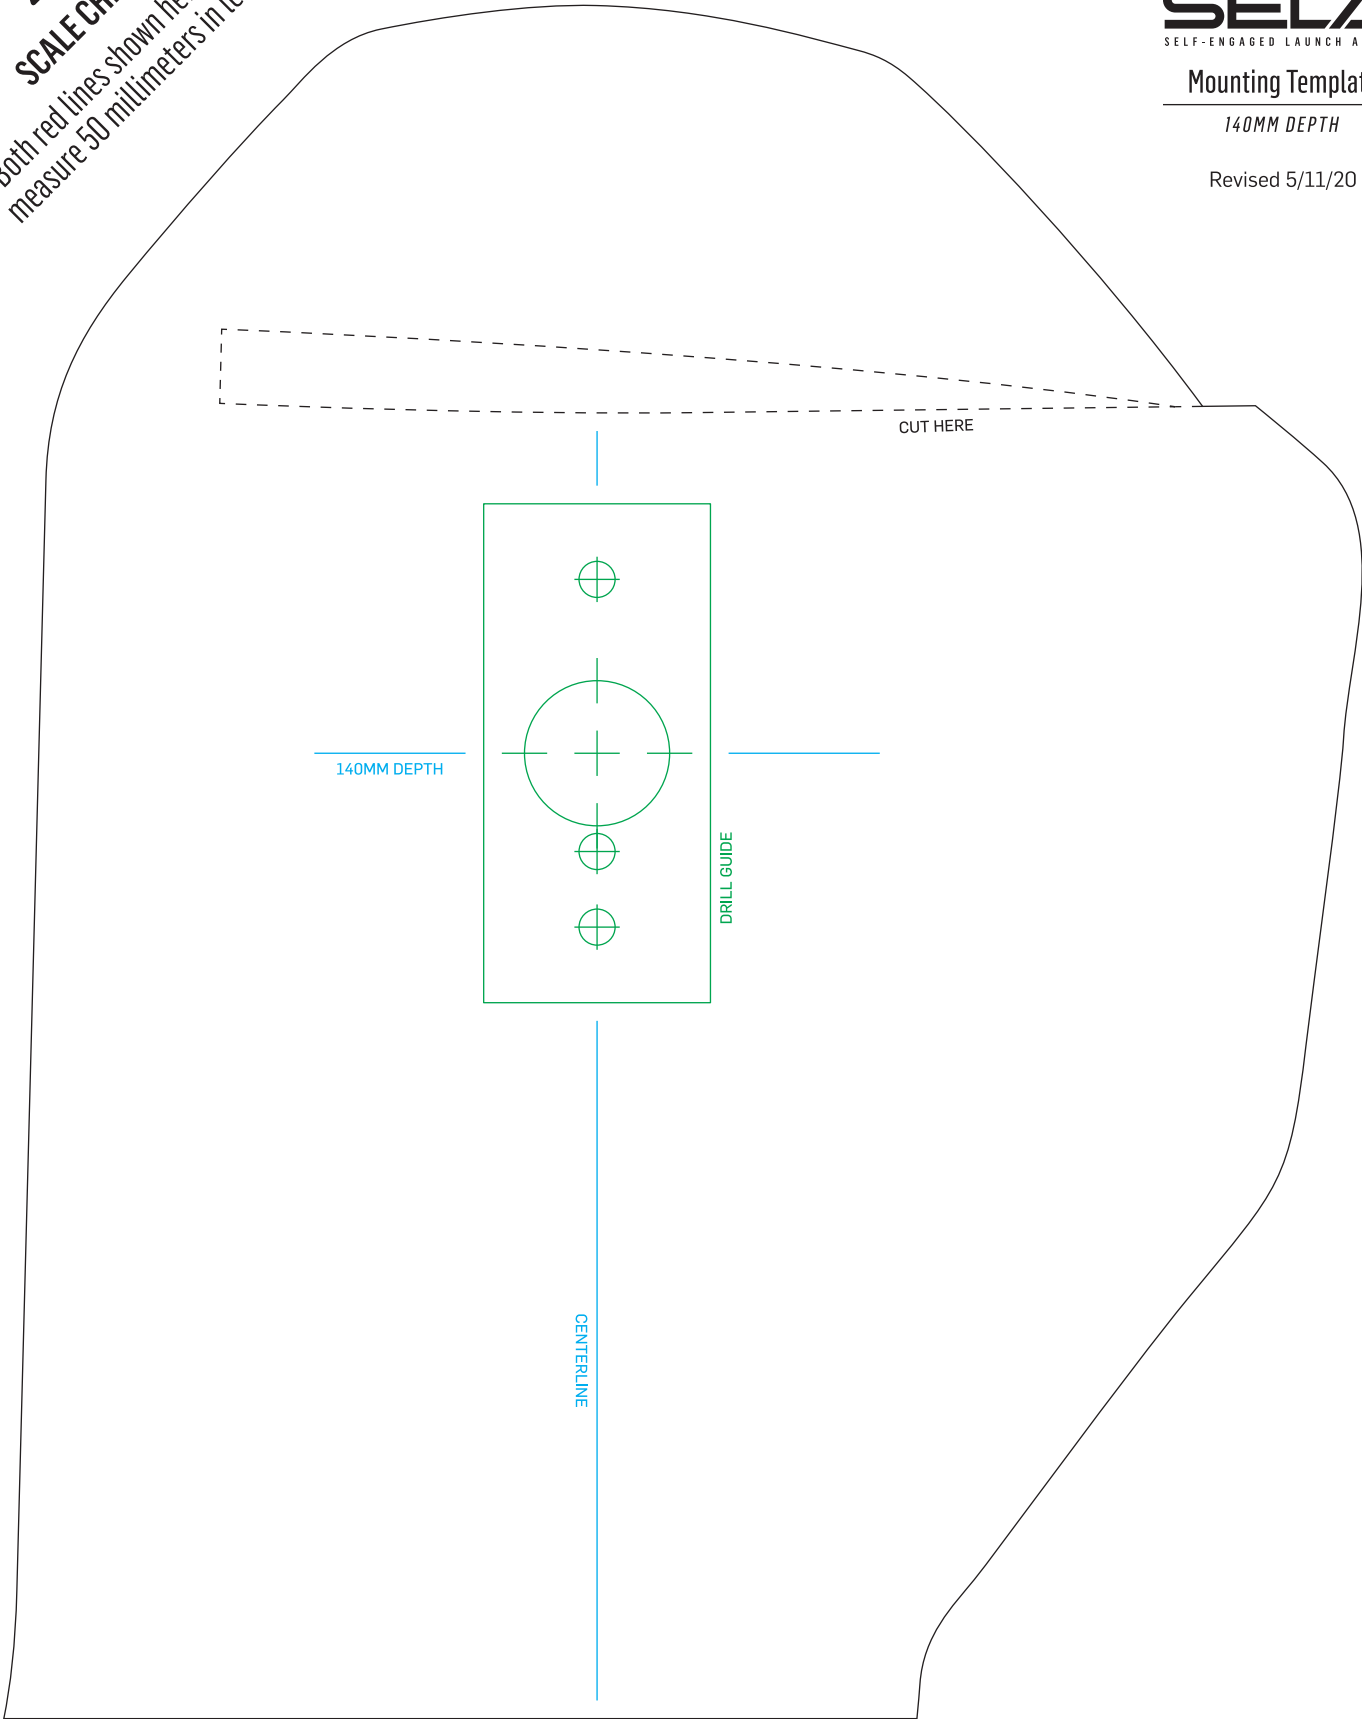

APPLICATIONS

HUSQVARNA: 16-20 TC 125/250, 16-20 FC 250/350/450, 18-20 FC 450 Rockstar Edition



Mounting Template

150MM DEPTH

Revised 5/11/20


50MM

50MM




SCALE CHECK

Both red lines shown here must measure 50 millimeters in length.



CUT HERE

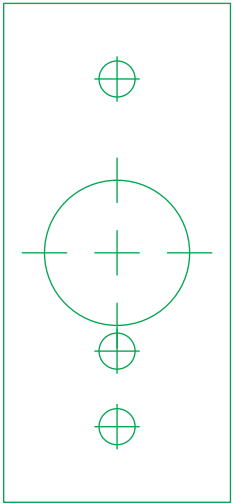

150MM DEPTH

DRILL GUIDE

CENTERLINE

APPLICATIONS

HUSQVARNA: 16-20 TC 125/250, 16-20 FC 250/350/450, 18-20 FC 450 Rockstar Edition