




## **AMERICAN CAR CRAFT INSTRUCTIONS**

### **C7 Corvette Z06 Throttle Body Cover Chrome Plated ABS Part# 053082**

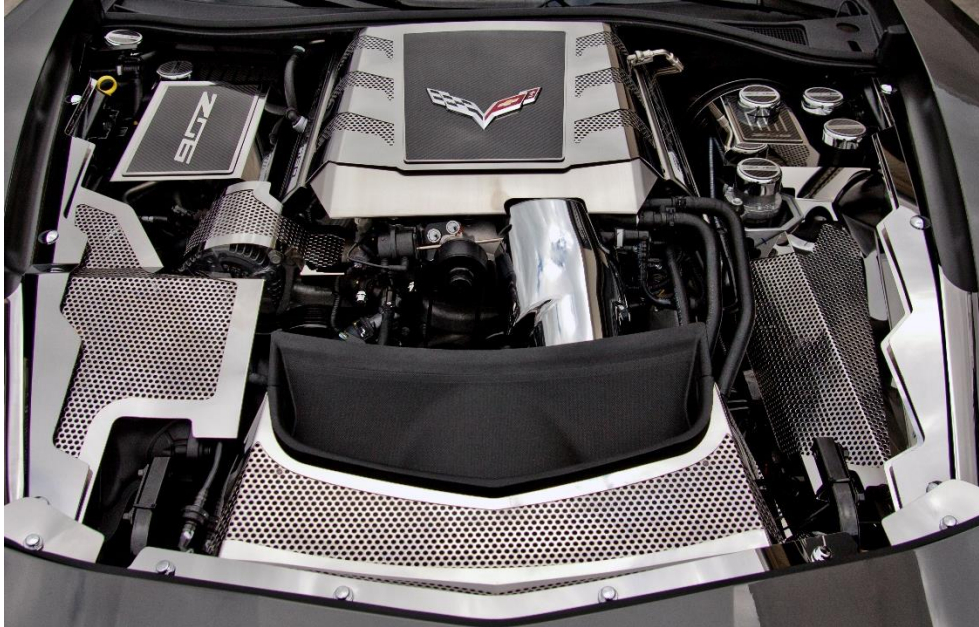

#### **PARTS INCLUDED:**

1-Throttle Body Cover

The installation of your new throttle body cover is covered in the following 2 videos. Please type in the web address EXACTLY as it is shown below or visit our website ([www.AmericanCarCraft.com](http://www.AmericanCarCraft.com)) and you will find both videos on the product page.

**This first video shows how to install your throttle body cover (Disregard the installation bracket portion of the video, the Z06 does NOT require this bracket)**

<https://youtu.be/yrjExgZkJQ4>

**This second video shows the slight modification required for the Z06 heat extractor.**

<https://youtu.be/rU915ateZrM>

**Thank you and enjoy your purchase!**

**If any questions occur during installation please contact  
AMERICAN CAR CRAFT  
18924 SAKERA ROAD-HUDSON FLORIDA 34667  
Phone # 727-861-1500 Fax # 727-861-1520  
[www.americancarcraft.com](http://www.americancarcraft.com)**