
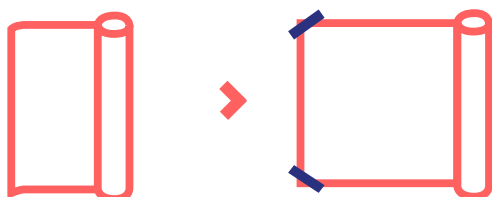
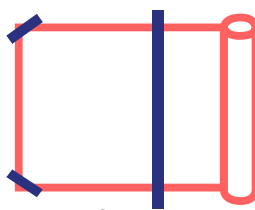


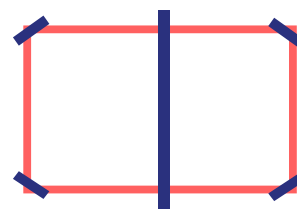




stick on whiteboard

Application Guide

1. Before you begin, watch the instructional video at GetWritey.com
2. You will need a partner to assist with the installation. Don't worry, you can let them use your WriteyBoard as compensation. Please designate a "holder" (H) and a "smoother" (S) to install the WriteyBoard.
3. Use a straight edge/level and pencil to draw horizontal & vertical reference marks to ensure proper alignment. Remove all dust and debris from the wall with a clean microfiber cloth.
4. Unroll 1-2 feet of your WriteyBoard, then tape the corners in place. **Figure 1**
5. Proceed unrolling until you have released approximately half of the WriteyBoard. For WriteyBoard sizes longer than 6ft, use additional tape to secure the board in place.

**Figure 1****Figure 2****Figure 3**

6. Once the WriteyBoard is unrolled about halfway, apply a long piece of masking tape running from the top down to the bottom, splitting the WriteyBoard in half. **Figure 2**
7. Next, unroll the entirety of your WriteyBoard and tape the remaining corners. Stand back and admire the awesomeness that's about to take place (if crooked, make the proper adjustments). **Figure 3**
8. (H) will remove the tape from either the left or right corners, then gently pull the end of the WriteyBoard vinyl back away from the surface. (S) will simultaneously peel back the protective paper backing. **Figure 4**
9. (S) peels back the protective paper all the way to the masking tape down the middle of the writeyboard. Then the (S) will cut away the protective paper backing. **Figure 5**
10. (H) will now bring the WriteyBoard back to its taped position while maintaining a slight distance from the wall. (S) will then apply and smooth the material onto the surface starting from the middle. **Figure 6**
11. (S) Use a microfiber cloth to slowly, yet forcefully, smooth up and down towards the holder til you reach the end of the WriteyBoard. If bubbles form while smoothing, (H) gently peel back the WriteyBoard and repeat the process.
12. Once you have successfully adhered one half, remove the middle tape and repeat the same procedure on the other half.
13. Use the provided squeegee tool to really iron down the material and release any remaining trapped air.

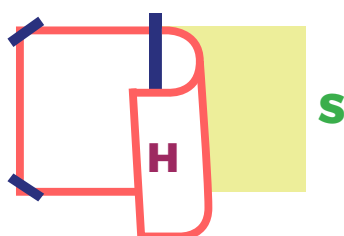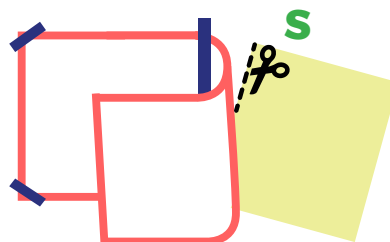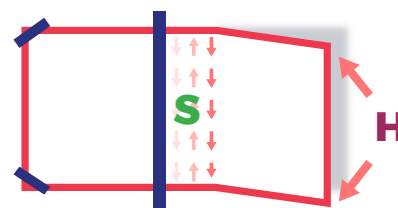**Figure 4****Figure 5****Figure 6**