


### 1 Parts Identification

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

**NOTE:** It is recommended to place a protective layer between the ground and the pieces during assembly. This will help prevent damage to the pieces.

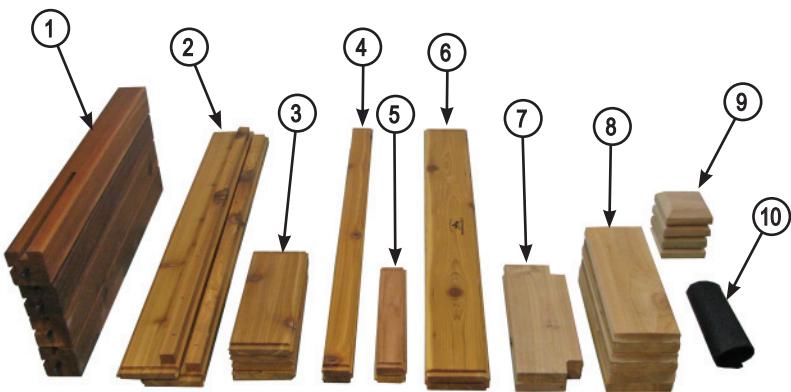

### Parts List


ITEM	QTY.	PART #	DESCRIPTION
1	4	3200E	Corner Post, 4" x 4" x 32"
2	2	4502T	Side Rail w/Cleat, 45" x 5-1/4" x 1"
3	4	1450T	Side Rail, 14-1/2" x 5-1/4" x 1"
4	2	4501T	Side Rail Narrow Center, 45" x 2-1/2" x 1"
5	2	1451T	Side Rail Narrow Center, 14-1/2" x 2-1/2" x 1"
6	2	4500T, L4500T	Side Rail (one w/Logo), 45" x 5-1/4" x 1"
7	2	1538N	Corner Notched Bottom Board, 15" x 5-1/2" x 1"
8	6	1588B	Bottom Board, 15" x 5-1/2" x 1"
9	4	3100	Post Cap, 4" x 4" x 1-1/2"
10	1	FL3652	Fabric Liner 36" x 52"

### 2 Side Rail Assembly

Stand two 4" x 4" x 32" corner posts (Item 1) upright with slots facing you and slots facing each corner post.

Locate a 45" x 5 1/4 " side rail w/cleat (Item 2). With the cleat located at the bottom and facing you, install side rail w/cleat into the slots and slide down to the bottom of the slots.

Repeat procedure for the two remaining corner posts and 45" x 5-1/4 " side rail w/cleat.

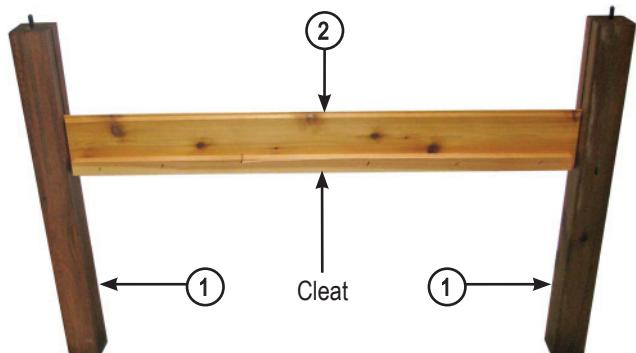


Packaged & Inspected by:

Date:

Continued

### 3 End Rail Assembly

Install two 14" x 5-1/4" side rails (Item 3) (with the groove down) into the slots and slide down to the bottom of the slots.

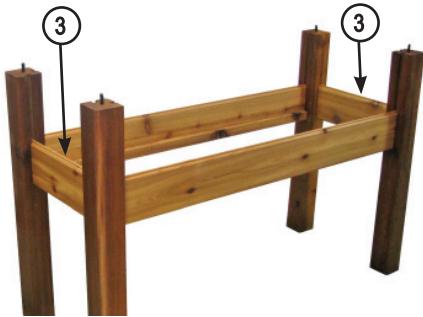


### 4 Narrow Center Side Rail Assembly

Install two 45" x 2-1/2" side rails (Item 4) into the slots on each side of the garden bed and slide down.

Install two 14" x 2-1/2" side rails (Item 5) into the slots on each end of the garden bed and slide down.

NOTE: Make sure the boards tongue and grooves fully seat together.

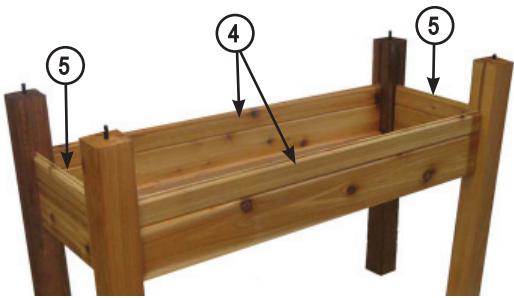


### 5 Final Side Rail Assembly

Install two 45" x 5-1/4" side rails (Item 6) (one with Logo) into the slots on each side of the garden bed and slide down.

Install two 14" x 5-1/4" side rails (Item 3) into the slots on each end of the garden bed and slide down.

NOTE: Make sure the boards tongue and grooves fully seat together.

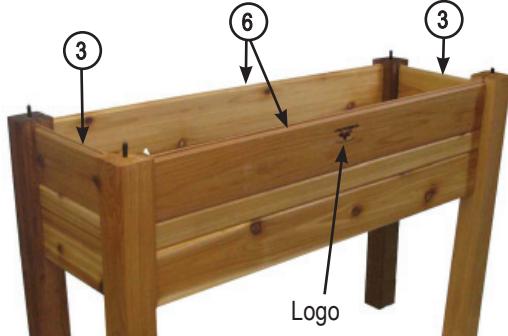

### 6 Bottom Board and Fabric Installation


Place one 15" x 5-1/2" corner notched bottom board (Item 7) on each end of the garden bed.

Place six 15" x 5-1/2" bottom boards (Item 8) into the garden bed. (Gap boards evenly to allow for water drainage).

Place fabric liner into the garden bed.

Soil Depth: approximately 12-1/2"

Soil Capacity: 4.1 Cubic Feet

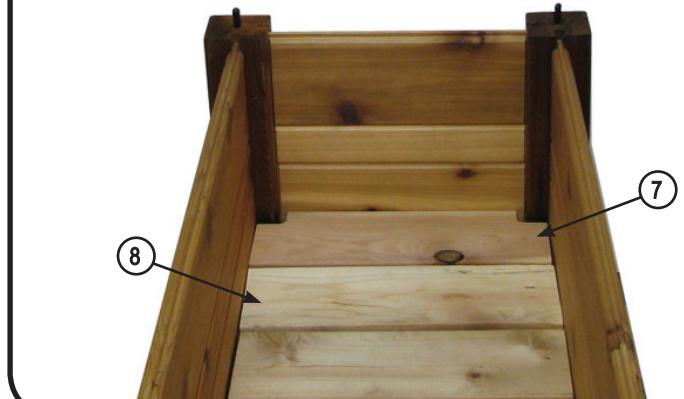

### 7 Post Cap Assembly

Remove the rubber cap from the corner posts studs.

Align the hole of the 4" x 4" post cap (Item 9) with stud and tighten until the cap makes contact with the post.

NOTE: Do not overtighten.

Repeat procedure on all posts.

