


1 Parts Identification

Item #: MRGW 34-48

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: Ground preparation is optional, however we recommend leveling area under frame of product, or place product directly on a flat level surface before filling with soil.

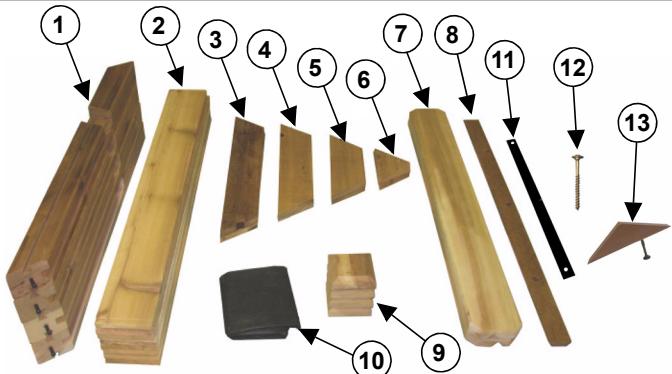

Parts List


ITEM	QTY.	PART #	DESCRIPTION	Product Care & Maintenance
1	4	CP41	Corner Post, 3-1/4" x 3-1/4" x 41-1/4"	Western Red Cedar will turn a weathered grey if left unfinished. Although no finish is required for cedar products when used outdoors, a natural oil finish applied regularly will help maintain the beauty and minimize cracking and drying. It is recommended to use Gronomics Garden Bed Oil (Item # GBO-1Q) , a non-toxic, food safe finish that is very easy to apply. Apply Oil when air and wind temperatures are between 50-90 degrees. Avoid applying in direct sunlight.
2	8	R4501	Front & Back Side Rails, 45" x 5-9/16 x 13/16"	
3	2	ES2613L	End Side Rails, 25-1/8" x 5-1/2" x 13/16"	
4	2	ES2013	End Side Rails, 19-1/4" x 5-1/2" x 13/16"	
5	2	ES1313	End Side Rails, 13-1/2" x 4-3/8" x 13/16"	
6	2	ES0713	End Side Rails, 7-3/4" x 5-1/2" x 13/16"	
7	2	SH43	Shelves, 43-3/4" x 5-1/2" x 1-3/8"	
8	1	BCR43	Bottom Center Rail, 43-3/8" x 2-1/2" x 13/16"	
9	4	R3100	Post Cap, 4-5/8" x 4-5/8" x 1-1/2"	
10	1	FL3652	Fabric Liner, 36" x 52"	
11	2	SP1-30	Stiffener Plate	
12	4	RSS10-2	GRK RSS #10x2" Screws (Tork T-25)	
13	4	WSS5	OPTIONAL: Wedge Shelf Support Braces 5" x 1"	

2 Post Assembly

Place two 3-1/4" x 3-1/4" x 41-1/4" corner posts (Item 1) together as shown.

Repeat procedure for the two remaining corner posts.

Note: It is a snug fit placing the posts together. You may need to use a rubber mallet until corner posts are seated (flush) together

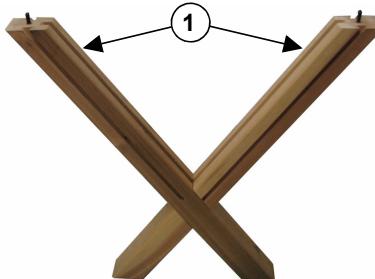


Packaged & Inspected by:

Date:

Continued

3 Side Rail Assembly

Install the eight 45" x 5-5/8" side rails (Item 2) into the upper part of the slots between the corner posts and slide down.

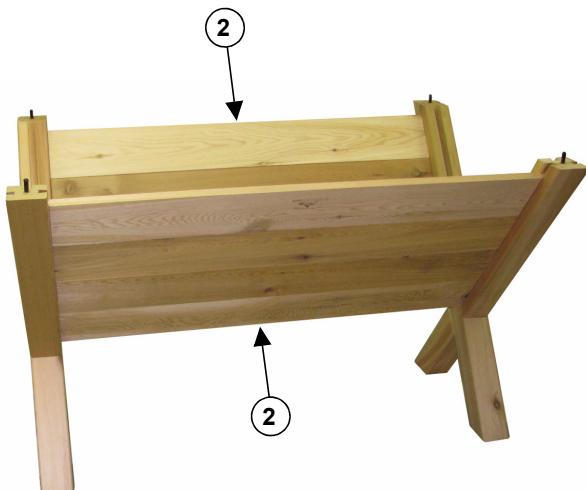

5 Bottom Center Rail Assembly

Install the 43-3/8" x 2-1/2" bottom center rail (Item 8) with the tapered edges of the rail facing down.

Install the fabric liner into the Garden Wedge.

Soil Capacity: 6.5 Cubic Feet



6 Shelve Assembly

Install the two 43-3/4" x 5-1/2" shelves (Item 7) onto the side rails on both sides of the Garden Wedge.

Place wedge shelf support braces (Item 13) under shelves approx 8" from each end. Insert screws through shelf support braces and into shelf.




4 End Rail Assembly

Install the four end side rails (Item 6, 5, 4 & 3) into the upper part of the slots between the two corner posts and slide down.

Remove the rubber caps from the post studs. Install a stiffener plate (Item 11) on the top end rail as shown

Note: May need to lift boards 3,4,5 & 6 slightly by placing your fingertips under board 6 to get stiffener plate in place.

Repeat procedure on the opposite end with the four remaining end side rails and stiffener plate.

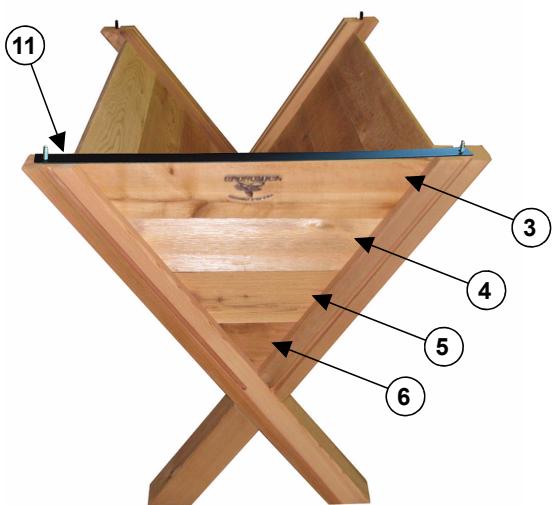

7 Post Cap Assembly

Align the hole of the 4" x 4" post cap (Item 9) with stud and tighten until the post cap makes contact with the post. Do not overtighten.

